


# AGRIMATE SUPER 2000 GOLD FOGGER



## TECHNICAL SPECIFICATIONS

<b>MODEL</b>	<b>SUPER 2000 GOLD</b>
<b>CAPACITY</b>	<b>2LTR</b>
<b>DISPLACEMENT</b>	<b>20CC</b>
<b>NET WEIGHT</b>	<b>4KG</b>

# DIAGRAM OF SUPER 2000 GOLD FOGGER

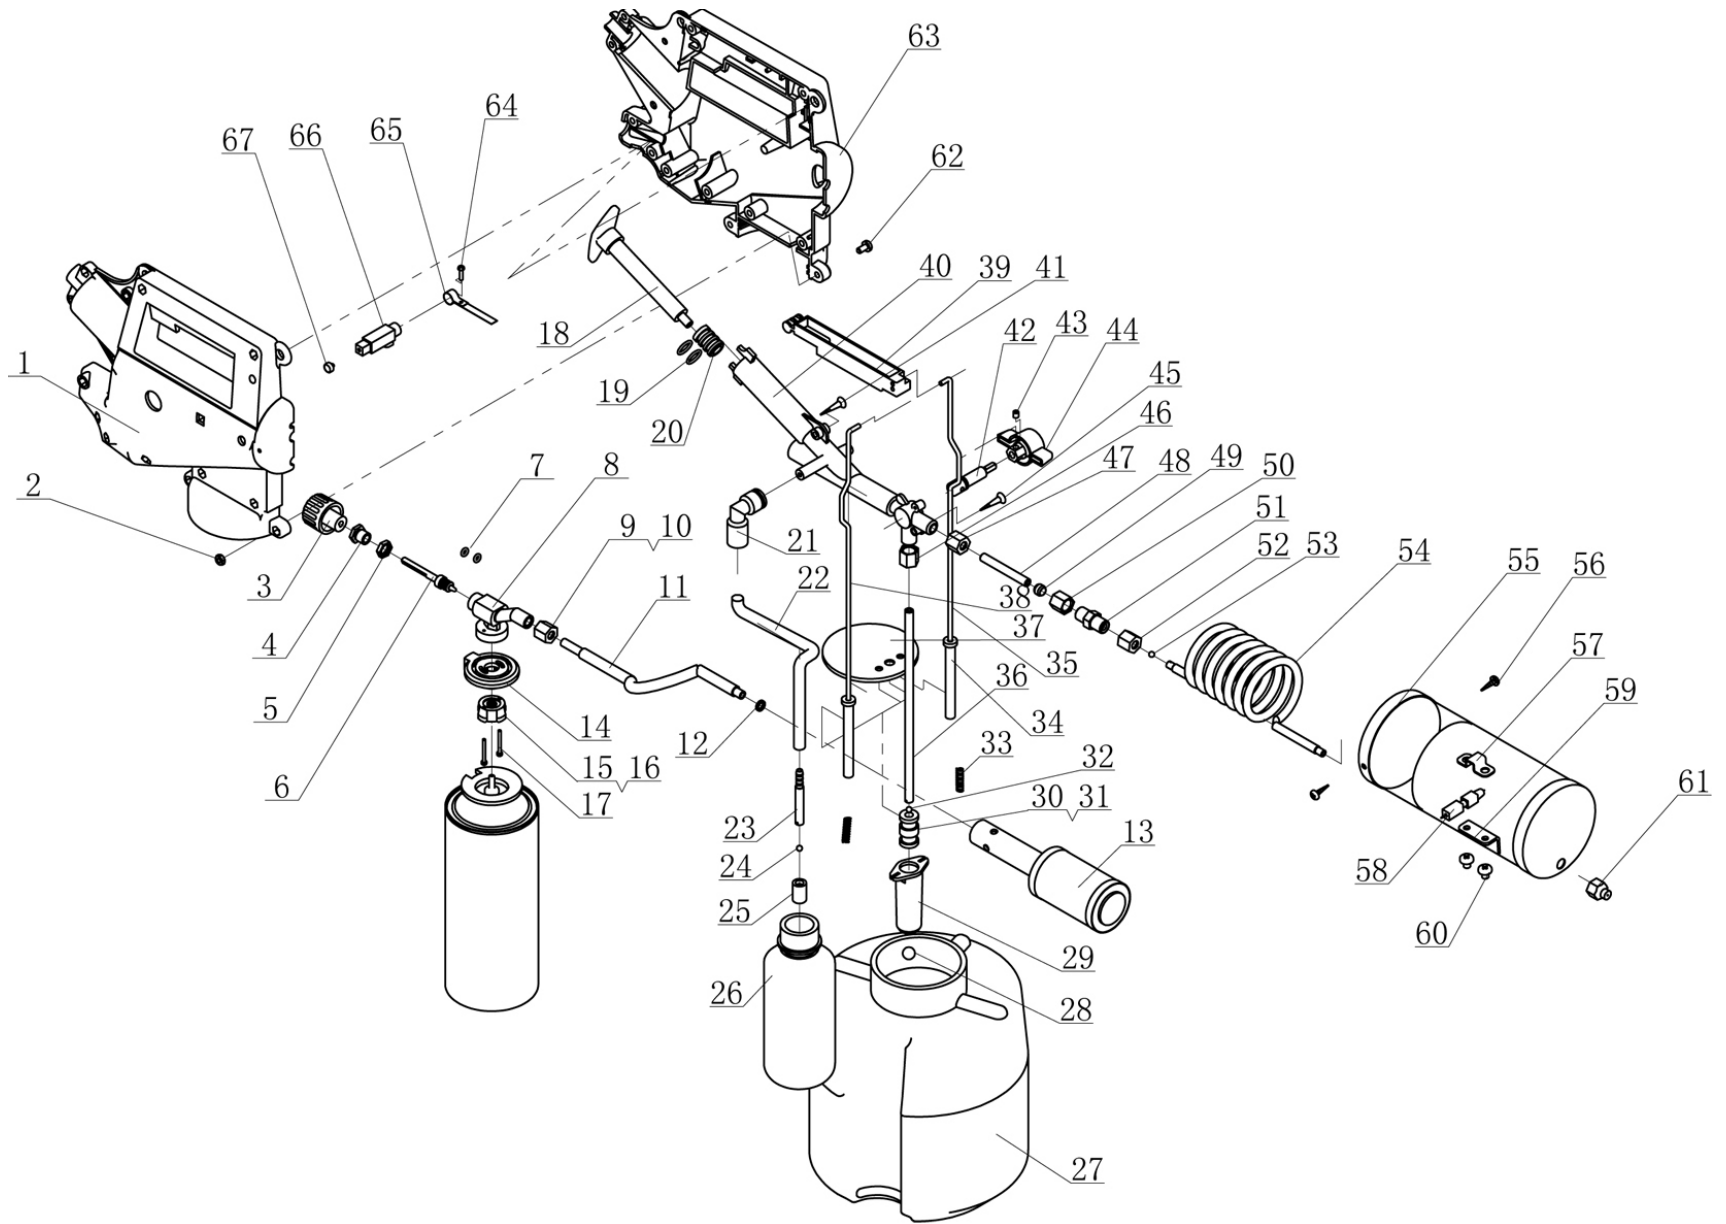

# SPARE PARTS LIST OF SUPER 2000 GOLD FOGGER

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-MF-01	Starboard Cover	13	AM-MF-13	Firebox Jointing
2	AM-MF-02	Nut	14	AM-MF-14	Plastic Round Wedge
3	AM-MF-03	Casing Of Adjusting Knob	15	AM-MF-15	Metal Round Wedge
4	AM-MF-04	Suit Nut For Gas Valve	16	AM-MF-16	Ring
5	AM-MF-05	Hexagonal Flat Nut	17	AM-MF-17	Cross Bolt
6	AM-MF-06	Adjusting Knob Of Gas Valve	18	AM-MF-18	Plastic Air Pump Handle
7	AM-MF-07	O' Ring	19	AM-MF-19	O' Ring
8	AM-MF-08	Valve Seat Jointing	20	AM-MF-20	Stopper For Air Pump
9	AM-MF-09	Sealing Nut	21	AM-MF-21	Connector
10	AM-MF-10	"O" Ring	22	AM-MF-22	Soft Tube
11	AM-MF-11	Gas Joint Pipe	23	AM-MF-23	One Way Valve Pole Of Cleaning Bottle
12	AM-MF-12	Airproof Item	24	AM-MF-24	Small Steel Ball






## SPARE PARTS LIST OF SUPER 2000 GOLD FOGGER

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
25	AM-MF-25	One Way Valve Cap Of Cleaning Bottle	37	AM-MF-37	Airproof Mat For Oil Tank
26	AM-MF-26	Cleaning Bottle	38	AM-MF-38	Draught Pole 2 In Oil Tank
27	AM-MF-27	Chemical Tank	39	AM-MF-39	Spraying Pole
28	AM-MF-28	Big Steel Ball	40	AM-MF-40	Three Way Joint
29	AM-MF-29	Column Pipe	41	AM-MF-41	Cross Bolt
30	AM-MF-30	Stopper For Oil Tank	42	AM-MF-42	Adjusting Valve Corefor Three Way Joint
31	AM-MF-31	Guiding Ring	43	AM-MF-43	Hexagonal Fovea Bolt
32	AM-MF-32	Small Steel Ball	44	AM-MF-44	Three Way Knob
33	AM-MF-33	Spring	45	AM-MF-45	Cross Bolt
34	AM-MF-34	Draught Pole Cannula	46	AM-MF-46	Airproof Nut
35	AM-MF-35	Draught Pole 1 In Oil Tank	47	AM-MF-47	Airproof Nut (46)
36	AM-MF-36	Chemical Sucking Pipe	48	AM-MF-48	Vertical Pipe In Firebox

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
49	AM-MF-49	Airproof Cover	61	AM-MF-61	Nozzle
50	AM-MF-50	Airproof Nut	62	AM-MF-62	Cross Bolt
51	AM-MF-51	Connector For Firebox	63	AM-MF-63	Nearside Cover
52	AM-MF-52	Airproof Nut	64	AM-MF-64	Cross Bolt
53	AM-MF-53	Small Steel Ball	65	AM-MF-65	Earthing Sheet Copper
54	AM-MF-54	Coil	66	AM-MF-66	Ignition
55	AM-MF-55	Defending Net	67	AM-MF-67	Ignition Button
56	AM-MF-56	Cross Bolt			
57	AM-MF-57	Ignition Pressing Slice			
58	AM-MF-58	Ceramic Needle			
59	AM-MF-59	Ignition Raising Slice			
60	AM-MF-60	Cross Bolt			






# WARRANTY CARD

## CUSTOMER COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			






I/Will accept the terms and conditions of warranty as in the warranty card

## DEALERS COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

## COMPANY COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction





**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL	<input type="text"/>	SERIAL NUMBER	<input type="text"/>
PDI DATE	SERVICE NO.	PURCHASE BILL NO.	DATE
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
DEALERS OFFICE SEAL	OPERATIONS		
<input type="text"/>	<ol style="list-style-type: none"> <li>1. Check and test the fuel mixture</li> <li>3. Check , clean and adjust the spark plug</li> <li>5. Check and sparken the cutting tools</li> <li>7. Start and check the noise, vibration, loosen etc..</li> </ol>	<ol style="list-style-type: none"> <li>2. check and clean the air filter</li> <li>4. Check and adjust the carburetor tuning</li> <li>6. Product familirisation on usage</li> <li>8. Routine maintenance and shortage.</li> </ol>	


**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL	<input type="text"/>	SERIAL NUMBER	<input type="text"/>
PDI DATE	SERVICE NO.	PURCHASE BILL NO.	DATE
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
DEALERS OFFICE SEAL	OPERATIONS		
<input type="text"/>	<ol style="list-style-type: none"> <li>1. Check and test the fuel mixture</li> <li>3. Check , clean and adjust the spark plug</li> <li>5. Check and sparken the cutting tools</li> <li>7. Start and check the noise, vibration, loosen etc..</li> </ol>	<ol style="list-style-type: none"> <li>2. check and clean the air filter</li> <li>4. Check and adjust the carburetor tuning</li> <li>6. Product familirisation on usage</li> <li>8. Routine maintenance and shortage.</li> </ol>	

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL	<input type="text"/>	SERIAL NUMBER	<input type="text"/>
PDI DATE	SERVICE NO.	PURCHASE BILL NO.	DATE
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
DEALERS OFFICE SEAL	OPERATIONS		
<input type="text"/>	<ol style="list-style-type: none"> <li>1. Check and test the fuel mixture</li> <li>3. Check , clean and adjust the spark plug</li> <li>5. Check and sparken the cutting tools</li> <li>7. Start and check the noise, vibration, loosen etc..</li> </ol>	<ol style="list-style-type: none"> <li>2. check and clean the air filter</li> <li>4. Check and adjust the carburetor tuning</li> <li>6. Product familirisation on usage</li> <li>8. Routine maintenance and shortage.</li> </ol>	

# DOS

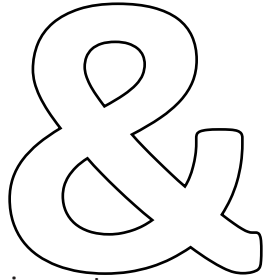

# DONT'S

attempting to use the equipments.

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before  
  
trousers and jackets while operating potentially dangerous machines
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes,
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. For more query kindly contact for our Service Center/Dealer/ franchise

# NO. 1 CHOICE OF FARMERS SINCE 1999



Marketed by:  
**ratnagiri  
impex**  
BRINGING YOU THE FUTURE... NOW

**RATNAGIRI IMPEX PVT., LTD.,**

Annapurna House, #1 / 1G, 7th Cross, New  
Guddadahalli

Mysore Road, Bangalore - 560 026

Missed Call : 7393 938 938

Email: [ask@agrimart.in](mailto:ask@agrimart.in)