

AF-TS-35A-WHO Agri Fogger




DISCLAIMER: DUE TO CONSTANT UP GRADATION, FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE



**BEFORE OPERATING THIS MACHINE,
PLEASE READ THESE INSTRUCTIONS CAREFULLY**


PREPARATION

1.1 Install Shoulder

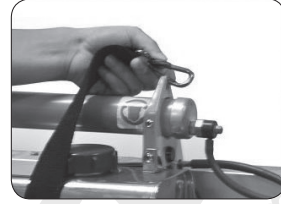

Find shoulder strap inside tool kit box and install to machine.


1.2 Install Battery

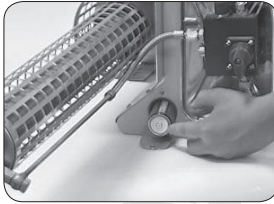

Install 4 pcs 1.5V battery.

1.3 Fill Fuel tank

Use red funnel fill regular petrol or gasoline into fuel tank, only fill 3/4 full fuel tank capacity will be ok, check whether the O-Ring of fuel tank lid is in good condition? Then, tighten fuel tank lid appropriately.

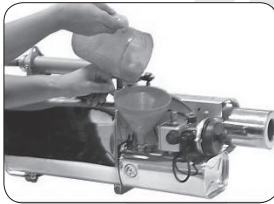

1.4 Fill Chemical tank


Use white funnel fill chemicals solution into chemicals tank, only fill 4/5 full chemicals tank capacity will be ok, check whether the O-Ring of fuel tank lid is in good condition? Then, tighten chemicals tank lid appropriately.



OPERATION



2.1 Start up machine,

2.1.1 Run out of residual fuel inside Carburetor,

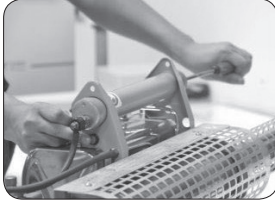


Push down Oil Valve (Close), use left hand pump machine while right hand finger press down ignition button, pump machine slowly, regularly,

2.1.2 Pull up Oil Valve (Open)

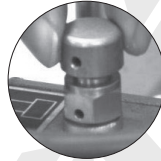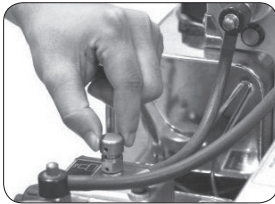

2.1.3 Start Up Machine

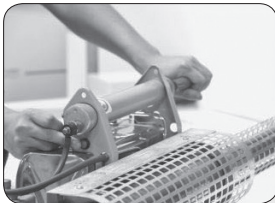


Use left hand pump machine while right hand finger press down ignition button, pump machine slowly, regularly, when heard explode sounds, pump a little bit quickly until start up machine, then, stop pump machine and release the ignition button

2.2 Spraying fog

2.2.1 Start spraying fog



After machine start up for 20 seconds until machine work stably, turn chemicals valve to "ON" position, start spraying fog.

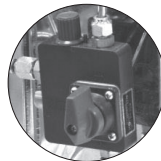


2.2.2 Adjust flow rate,

Turn to left direction, increase flow rate; Turn to right direction, decrease flow rate.




2.2.3 Clean solution

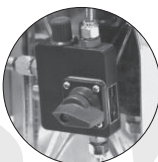

Before stop spray fog, firstly turn chemicals valve to "CLEAN" position run out of residual chemicals solution. 2.2.3 Clean solution



2.2.4 Stop spray fog

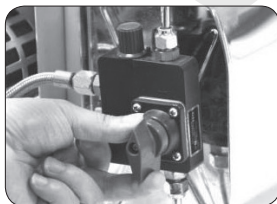

Wait fog disappeared, turn chemicals valve to "OFF" position.

2.3 Stop machine

2.3.1 Push down Oil Valve (Close)

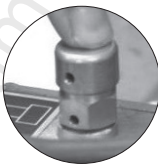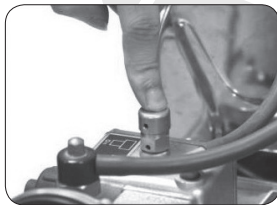


2.3.2 Open chemicals tanks lid, release residual pressure.




MAINTENANCE


3.1 Maintain the diaphragm

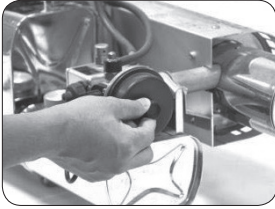



3.1.1 Take down the nut

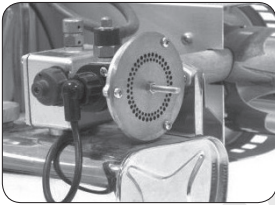


3.1.2 Take down the muffler

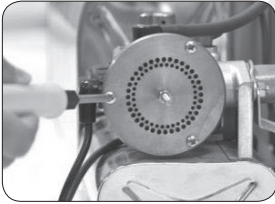


3.1.3 Take down the valve plate.

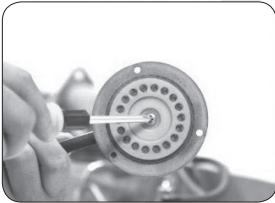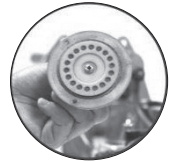


3.1.4 Disassemble the diaphragm fixed plate.

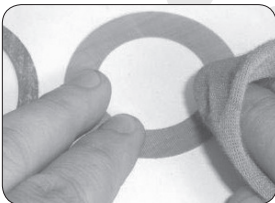


3.1.5 Use soft dry cloth clean greasy dirt on the diaphragm, keep it be flat, if it is broken or has crease, replace new diaphragm.

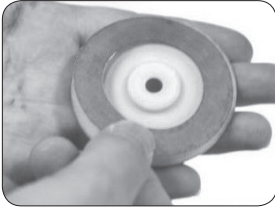


3.1.6 As photo showed, place the diaphragm on the diaphragm fixed plate.

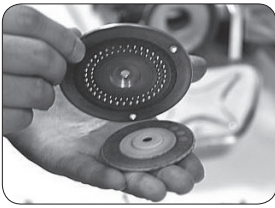


3.1.7 As photo showed, make the valve plate point to the groove of the diaphragm fixed plate, put onto it, makes sure the diaphragm could move freely inside the groove.

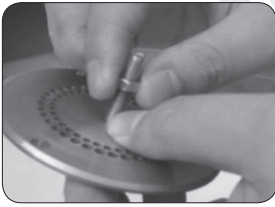


3.1.8 Keep the valve plate at UP position, install the fixed nut.

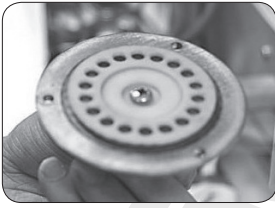

3.1.9 Watch whether the diaphragm could move freely inside the groove of the diaphragm fixed plate, do not install it too tightly.

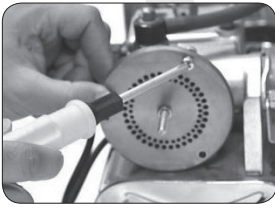


3.1.10 Install the valve plate set back to the carburetor in appropriately, do not miss the valve plate gasket.

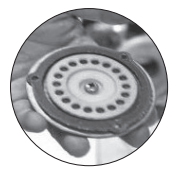




3.1.11 Install back the muffer.


3.2 Maintain the swirl pole

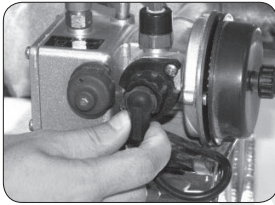


3.2.1 Take down the high voltage cap.

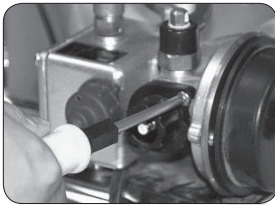

3.2.2 Take down the swirl pole.

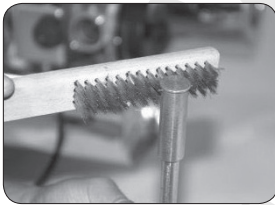

3.2.3 Use copper brush clean deposited carbon.

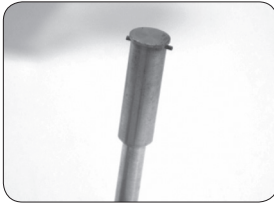

3.2.4 Make sure the two needles is in symmetrical at the two sides of the swirl pole.




3.2.5 If one side is too long, hit back for being symmetrical.



3.2.6 Do not lose the O-Ring?




3.2.7 Install back swirl pole in appropriately, when fastening screws make sure use strength in balance.

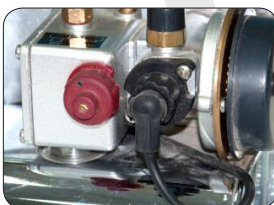


3.2.8 Install back high voltage cap.

3.3 Clean chemicals valve filter

3.3.1 Rotate to take down filter,

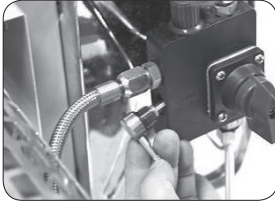

3.3.2 Clean and install back in appropriately.

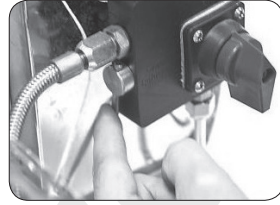


3.4 Clean deposited carbon

Please make sure the machine is cooling down, after cleaning, install back nozzle and gasket in appropriately.


3.4.1 Disassemble the nozzle, do not lose copper gasket.




3.4.3 Clean deposited carbon.

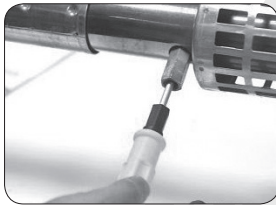


3.4.2 Clean nozzle hole.

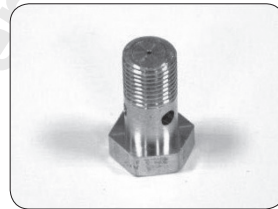

3.4.4 Take out fogging tube adapter.

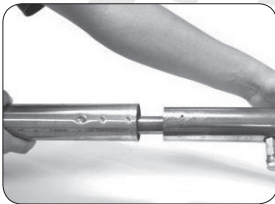

3.4.5 Clean deposited carbon inside fogging tube's nozzle position.

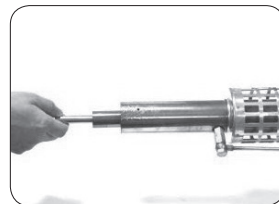

4. TROUBLE SHOOTING

4.1 Do not have ignition sounds.

Problem phenomenon	Reason	Solution
Press down ignition button, no ignition sounds like "Ta, Ta, Ta..."	Battery no electricity	Change new battery(Check chapter No.5.2)
	Battery polarity is wrong	Correct
	Battery button is broken	Change or repair
	Igniter is broken	Change
	Wrongly install swirl pole	Correct, (Check chapter No.3.2)
Battery button is ok, no ignition sounds like "Ta, Ta, Ta..."	Electric wire welding spot is loose	Fix it
	Low battery electricity	Change
	Swirl pole is stained	Clean, (Check chapter No.3.2)

4.2 Ignition is ok, could not start up

Problem phenomenon	Reason	Solution
Carburetor no fuel or no fuel go into Carburetor	Adjust knob locate at weak position	Turn Adjust knob to left direction a little bit for increase power (Check chapter No.5.5)
	Air pressure leaking from one-way valve of air pump	Fix it, (Check chapter No.5.3)
	Air pressure leaking from fuel tank lid gasket	Fix it or change new gasket
	Fuel tank pipeline or filter is blocked	Clean and get through it
	Carburetor nozzle is blocked	Clean and get through it
Too much fuel inside carburetor	Adjust knob locate at weak position	Turn Adjust knob to right direction a little bit for decrease (Check chapter No.5.5)
	Pump too quickly or after pump many times, do not start up machine, press too much fuel go inside carburetor	Push down Oil Valve (Close), clean the diaphragm, check chapter No.3.1, keep close oil valve, pump machine while press down the igniter button, after heard explode sounds, pull up oil valve, pump machine start up machine

4.3 Machine work not stably

Problem phenomenon	Reason	Solution
Power too weak or not stably	Too few fuel inside fuel tank	Add fuel
	Adjust knob not located at appropriate position	Adjust
	Have water inside fuel tank	Change fuel
	Too much deposited carbon nearby fogging tube nozzle	Clean deposited carbon
Fresh air could not get through carburetor	The diaphragm is stained, broken or do not install it in appropriately	Maintain the diaphragm, please check chapter No.3.1

4.4 When working, suddenly stop

Problem phenomenon	Reason	Solution
No fuel	Run out of fuel inside fuel tank	Add fuel
Supply too much or too few fuel	Adjust knob not locate at appropriate position	Adjust
Air pressure from carburetor	Gasket or one-way valve gasket broken	Change
Fresh air could not get through carburetor or diaphragm could move freely	Diaphragm broken	Change diaphragm, check chapter No.3.1

4.5 Too few fog or machine only spray a little fog

Problem phenomenon	Reason	Solution
No pressure inside chemicals tank	Air pressure leak from chemicals tank lid	Tighten or change new gasket
	One-way valve does not work	Change gasket or O-Ring, check chapter No.5.7
	Chemicals tank screw blocked	Get through it, check chapter No.5.8
Chemicals valve gasket blocked	Chemicals valve gasket broken	Change
Chemicals pipe air pressure leak	Screw is loose	Tighten it
Fogging tube nozzle is loose	Nozzle hole is blocked	Clean or change

4.6 Spraying fog amount reduced obviously

Problem phenomenon	Reason	Solution
Power decreased	Too much deposited carbon nearby fogging tube	Clean, check chapter No.3.4
Air pressure is not enough inside chemicals tank	One-way valve does not work	Change gasket or O-Ring, check chapter No.5.7
	Chemicals tank screw blocked	Get through it, check chapter No.5.8
Chemicals valve blocked	Have dirty sediment inside chemicals valve	Clean
Air pressure from chemicals valve	Screw loose	Tighten
	Chemicals valve gasket broken	Change

4.7 While spraying fog, suddenly spray fire


Problem phenomenon	Reason	Solution
While spraying fog, suddenly spray fire	Machine too hot	Stop for 20 minutes, then, start up machine continue spray fog
	Adjust knob locate at too strong position	Decrease, check chapter No.5.5
	Spray too few fog	Increase flow rate or stop machine change bigger diameter nozzle.

5. TROUBLE SHOOTING DOCUMENTS

5.1 Check battery.



5.1.1 Open battery tube cover, check battery.

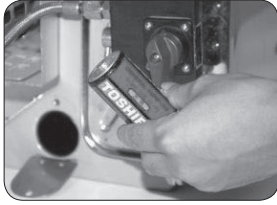


5.1.2 Check whether battery has electricity or whether the polarity is rightly installed into the battery tube.


5.2 Check Electric Ignition System



5.2.1 Take down high voltage cap put down on carburetor as photos showed, then press down ignition button

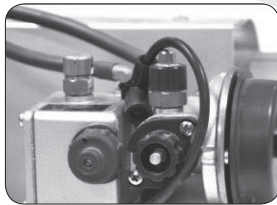

5.2.2 No ignition sounds like 'TA, TA, TA.....' or no electric fire, electric wire have problem.

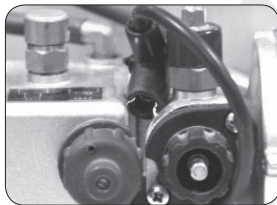


5.2.3 Have ignition sounds like 'TA, TA, TA.....' or have electric fire, electric wire is ok.


5.3 Check one-way valve of the air pump




5.3.1 Disassemble the one-way valve.

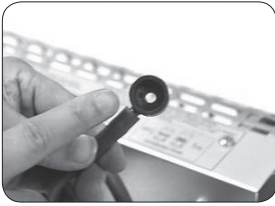


5.3.2 Check whether the cap is broken or air pressure, if has please change it.

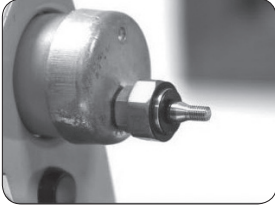

5.3.3 Check whether the gasket or O-Ring is broken, deform? The photo shows it is ok.

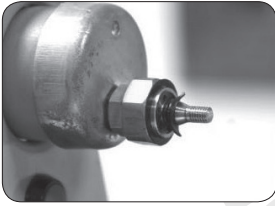

5.3.4 The photo shows it is deformed, no ok

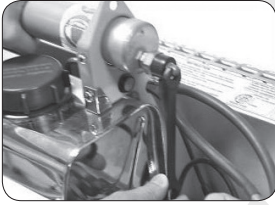

5.3.5 Install back in appropriately, do not install it too tightly, if the air pressure could not get through will have problem.

5.4 Check fuel tank




5.4.1 Open fuel tank lid, if do not have enough fuel, please add fuel.



5.4.2 Check O-Ring, if it is broken or deformed, please change it, when install back fuel tank lid to fuel tank, please do not install it too tightly.

5.5 Adjust knob of carburetor

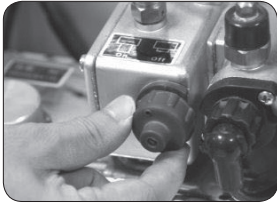


Adjust knob locate at "0" for standard position to start up machine.

Turn to left direction, increase power.


Turn to right direction, decrease power.

Please pay attention: New machine have been fixed at standard position, please do not doing adjustment before operation.

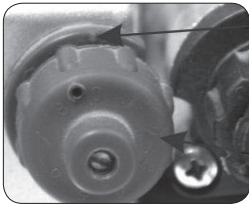

Standard position

Scale on adjust knob, for each adjustment, please do not exceed more than 1 scale.

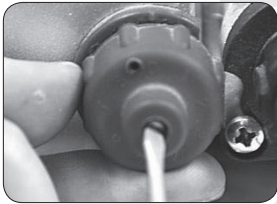

Adjust standard position,

Left hand finger hold scale knob, right hand finger use screw to adjust the screw inside the scale knob,

Adjust to left direction for increase power,


Adjust to right direction for decrease power,

Please pay attention:

Only when adjust the adjust knob to maximal or minimum position, if still not meet appropriately operation requirement, could doing this adjustment;

Otherwise, forbid to doing this adjustment, in avoid of cause the adjust knob locate at in appropriate position, untrained customer could not fix the problem.

5.6 Check air pressure of chemicals tank


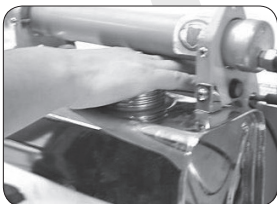


When machine working, open chemicals tank lid, put hand on it to feel whether inside have air pressure.


5.7 Check one-way valve of carburetor




5.7.1 Check whether the cap is broken, if has, change new cap.

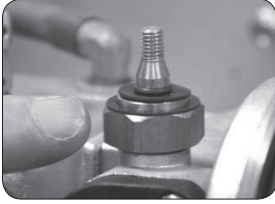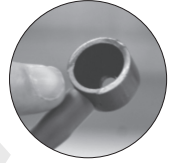

5.7.2 Check whether the gasket is broken or deformed, if has, change, the photo showed is ok.

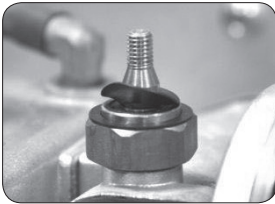


5.7.3 The photos showed the gasket position is not ok.

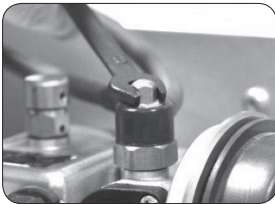

5.7.4 When install back the one-way valve, please do not install it too tightly, otherwise if the air pressure could not get through will have problem.

5.8 Clean chemicals tank screw

If the chemicals tank screw is blocked, carburetor could not supply air pressure to chemicals tank, it will affect spraying fog.

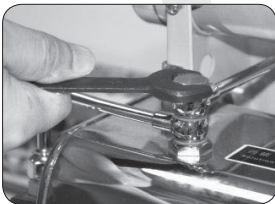

5.8.1 Take down the screw, keep well the red copper gasket, do not lose it.







5.8.2 Check whether the screw hole is blocked, clean it.



5.8.3 Check whether the screw hole is blocked, use thin wire get through it.

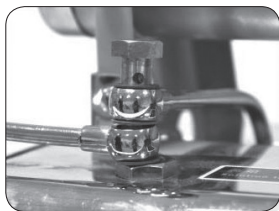

5.8.4 After clean, install back in appropriately, do not lose the 3 pcs red gasket.

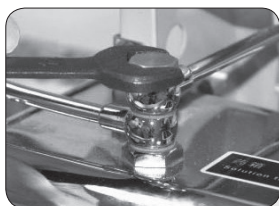

5.8.5 Install back appropriately, if too tightly will broken the screw.

5.9 Clean chemicals solution discharge screw,



5.9.1 Take down the screw.



5.9.2 Check the filter for clean it.



5.9.3 Install back appropriately, if too tightly will broken the screw.

6. OPERATION SKILL

6.1 Correct operation procedure,

- > Make sure close chemicals valve.
- > Start up machine.
- > Open chemicals valve.
- > Finish spraying.
- > Close chemicals valve.
- > Stop machine.

6.2 If the operation procedure is not right, if firstly stop machine before close chemicals valve, machine will spray fire.

6.3 Please pay attention,

6.3.1 Tight chemicals tank and fuel tank lid,

6.3.2 While pump machine, remember press down ignition button,

6.3.3 Please must firstly close chemicals valve, then stop machine (Push down oil valve),

6.3.4 Do not add maximal capacity of the chemicals or fuel tank,

6.3.5 After spraying, discharge residual chemicals solution from chemicals tank, then add a few clean water to clean it, start up machine, spray water to clean inside chemicals pipeline and chemicals valve.

6.3.6 If long time do not use machine, take out battery, keep well all spare parts inside tool kit into packing box.

6.3.7 After use soft cloth wipe machine for cleaning, discharge residual fuel into special container, tighten it for avoid fuel evaporation.

6.3.8 When found difficult start up machine or not working powerfully, clean deposited carbon nearby fogging nozzle of the fogging tube, swirl pole.

7. WARNING

- 7.1 Do not use nearby flammable or explosive place.
- 7.2 When fill fuel or chemicals solution,
 - 7.2.1 Wait machine cooling down,
 - 7.2.2 No fire.
- 7.3 Wear anti-noise earmuffs while operation.
- 7.4 When spraying,
 - 7.4.1 Stop if machine work abnormally.
 - 7.4.2 No spray to people or livestock,
 - 7.4.3 Wear breathing mask,
 - 7.4.5 Do not leave machine working unattended.
 - 7.4.6 When spraying in closed space, please note the limit for chemicals solution spraying in certain CBM, do not exceed it, otherwise it will have dangerous negative effect.
- 7.5 When machine is hot,
 - 7.5.1 No touch fogging tube,
 - 7.5.2 Do not transportation in closed vehicles,
 - 7.5.3 Do not packing.

Safety alert symbol



No touch



Wear breath mask



No fire



Wear anti-noise earmuffs

8. AFTER-SALE SERVICE CONTACTS


If have any question or need assistance for our machine, describe the problem to us or send photos to show us what is the problem, please send e-mail or fax to us below.

E-mail:

Fax:

9. CHECKING ACCESSORY

Fogging tube adapter

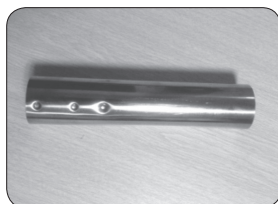

Funnel for fill fuel or chemicals solution



Shoulder Spare parts & tool kits



Repairing tool



Spare parts bag



Training DVD
Operation & Service Manual

INSTALL FOGGING TUBE ADAPTER

Before operation, must firstly install fogging tube adapter to the machine, it will help form convective air for cooling down machine, otherwise machine will too hot while working.

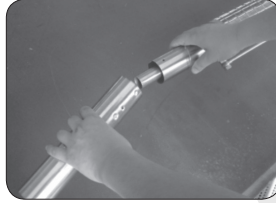


DIAGRAM OF AF-TS-35A WHO AGRI FOGGER


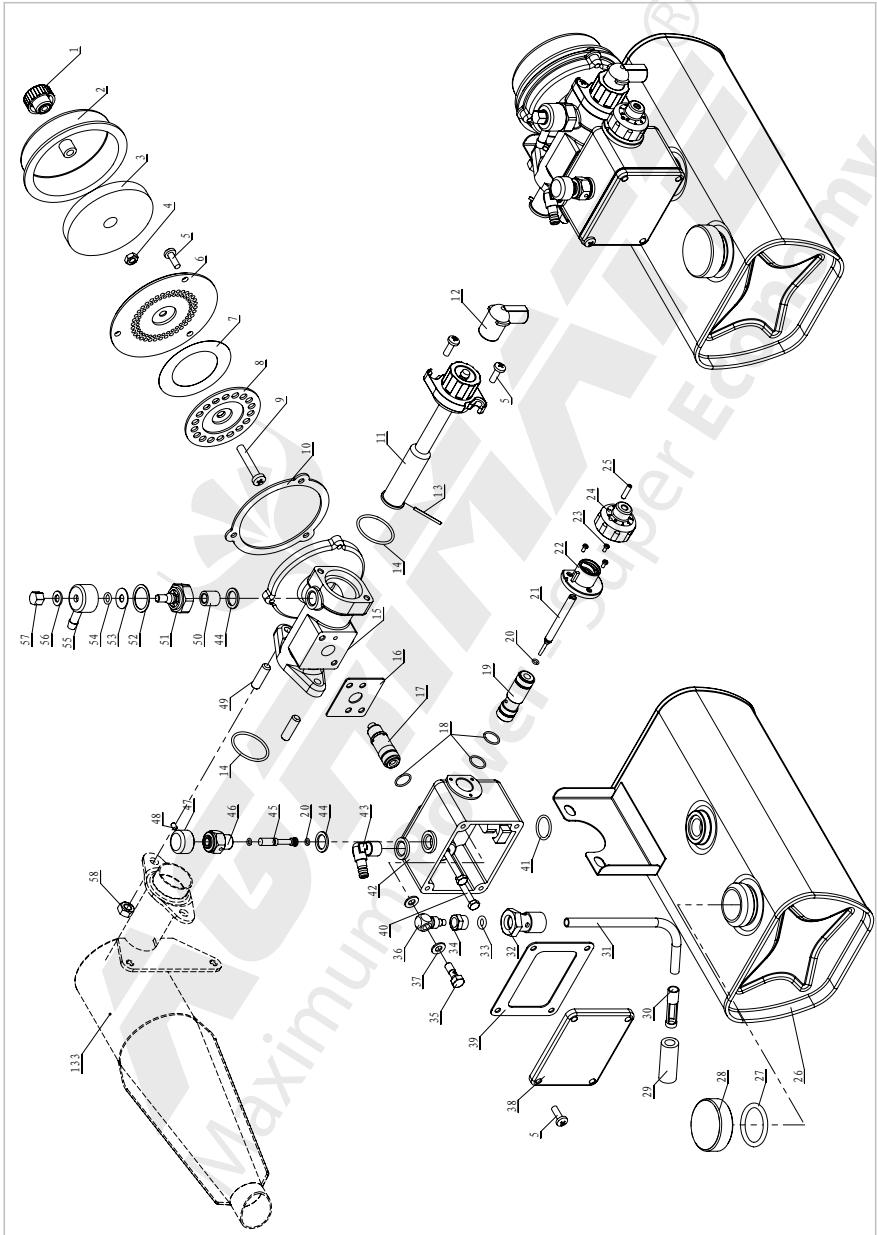


DIAGRAM OF AF-TS-35A WHO AGRI FOGGER

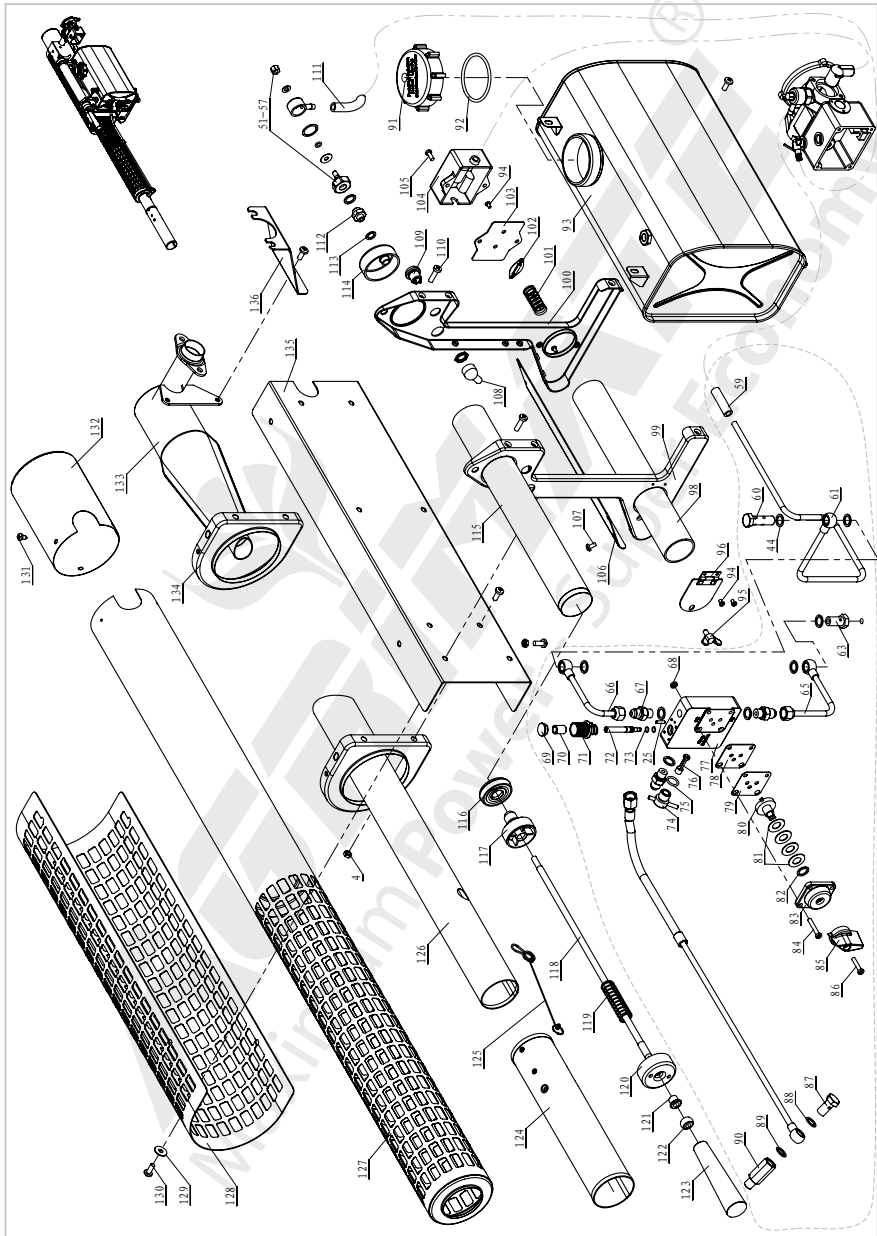

SPARE PARTS LIST OF AF-TS-35A WHO AGRI FOGGER

Part No.	Description
TS-35A-WHO-01	M5-knurled nut
TS-35A-WHO-02	35A-Muffler cover
TS-35A-WHO-03	35A-Anechoic foam
TS-35A-WHO-04	I-type hexagon nuts
TS-35A-WHO-05	Cross recessed pan head screw
TS-35A-WHO-06	Baffle valve
TS-35A-WHO-07	Diaphragm
TS-35A-WHO-08	Diaphragm fixed plate -A
TS-35A-WHO-09	Cross recessed small pan head screws
TS-35A-WHO-10	Baffle gasket
TS-35A-WHO-11	35A-Swirl pole
TS-35A-WHO-12	High voltage cap
TS-35A-WHO-13	Spring pin
TS-35A-WHO-14	O-ring
TS-35A-WHO-15	Carburetor body
TS-35A-WHO-16	Carburetor gasket
TS-35A-WHO-17	Oil Nozzles
TS-35A-WHO-18	O-ring
TS-35A-WHO-19	Plunger sleeve
TS-35A-WHO-20	O-ring
TS-35A-WHO-21	36 Plunger
TS-35A-WHO-22	Plastic limited block
TS-35A-WHO-23	Cross recessed small pan head screws
TS-35A-WHO-24	Plastic throttle knob
TS-35A-WHO-25	Hexagon socket set screws
TS-35A-WHO-26	BL-Oil tank
TS-35A-WHO-27	O-ring
TS-35A-WHO-28	35A-oil tank cover
TS-35A-WHO-29	Felt tube
TS-35A-WHO-30	oil filter
TS-35A-WHO-31	Oil pipeline
TS-35A-WHO-32	35A-hollow bolt
TS-35A-WHO-33	O-ring
TS-35A-WHO-34	Tighten nut
TS-35A-WHO-35	M5-short hinge screws

Part No.	Description
TS-35A-WHO-36	Articulated body pillow
TS-35A-WHO-37	Red gasket
TS-35A-WHO-38	Balance chamber cap
TS-35A-WHO-39	Balance chamber gasket
TS-35A-WHO-40	Hexagon head bolt
TS-35A-WHO-41	O-ring
TS-35A-WHO-42	Balance chamber body
TS-35A-WHO-43	Air-connect mouth-M10x1
TS-35A-WHO-44	Red gasket
TS-35A-WHO-45	Switch valve spool
TS-35A-WHO-46	Switch valve cover
TS-35A-WHO-47	Throttle knob
TS-35A-WHO-48	Hexagon socket set screws
TS-35A-WHO-49	Falt hexagon socket set screws
TS-35A-WHO-50	M10-transition nut
TS-35A-WHO-51	One-way valve body
TS-35A-WHO-52	One-way valve gasket
TS-35A-WHO-53	One-way valve diaphragm
TS-35A-WHO-54	O-ring
TS-35A-WHO-55	One-way valve cap
TS-35A-WHO-56	Asbestos gasket
TS-35A-WHO-57	M5-copper nut
TS-35A-WHO-58	I-type hexagon nuts
TS-35A-WHO-59	Rubber tube
TS-35A-WHO-60	Long hinge pin
TS-35A-WHO-61	35A-Long air conduct pipe
TS-35A-WHO-62	Liquid filter
TS-35A-WHO-63	35A-Drain bolt
TS-35A-WHO-64	Cross recessed small pan head screws
TS-35A-WHO-65	Catheters
TS-35A-WHO-66	Airway pipe
TS-35A-WHO-67	Chemicals valve connector
TS-35A-WHO-68	I-type hexagon nuts
TS-35A-WHO-69	Knob cover for flow valve
TS-35A-WHO-70	Tighten nut
TS-35A-WHO-71	Knob for flow valve

SPARE PARTS LIST OF AF-TS-35A WHO AGRI FOGGER

Part No.	Description
TS-35A-WHO-72	Adjuster bar
TS-35A-WHO-73	O-ring
TS-35A-WHO-74	Filter connector
TS-35A-WHO-75	O-ring
TS-35A-WHO-76	Filter
TS-35A-WHO-77	Valve body
TS-35A-WHO-78	Drug valve gasket
TS-35A-WHO-79	Valve diaphragm
TS-35A-WHO-80	Spool valve
TS-35A-WHO-81	Butterfly spring
TS-35A-WHO-82	PTFE pad
TS-35A-WHO-83	Valve cover
TS-35A-WHO-84	Cross recessed small pan head screws
TS-35A-WHO-85	Drug Valve knob
TS-35A-WHO-86	Cross recessed small pan head screws
TS-35A-WHO-87	1.2-Nozzle
TS-35A-WHO-88	35A-Fluid pipe
TS-35A-WHO-89	Copper gasket
TS-35A-WHO-90	35A-Spray connected nail
TS-35A-WHO-91	BL-Oil tank cover
TS-35A-WHO-92	O-ring
TS-35A-WHO-93	35A-Solution tank
TS-35A-WHO-94	Cross recessed pan head screw
TS-35A-WHO-95	Butterfly screw
TS-35A-WHO-96	Cathode plate
TS-35A-WHO-97	Flat washer
TS-35A-WHO-98	Battery tube
TS-35A-WHO-99	Front holder
TS-35A-WHO-100	Back holder
TS-35A-WHO-101	Spring
TS-35A-WHO-102	Negative pressure tablets
TS-35A-WHO-103	Negative fixed plate
TS-35A-WHO-104	6V-Pulse igniter
TS-35A-WHO-105	Cross recessed small pan head screws

Part No.	Description
TS-35A-WHO-106	Stand guard plate
TS-35A-WHO-107	Cross recessed pan head screw
TS-35A-WHO-108	Seal for push button
TS-35A-WHO-109	Push button
TS-35A-WHO-110	Cross recessed small pan head screws
TS-35A-WHO-111	Rubber tube
TS-35A-WHO-112	One-way valve connected nail
TS-35A-WHO-113	Red gasket
TS-35A-WHO-114	36-Front pump cover
TS-35A-WHO-115	36-pump cylinder
TS-35A-WHO-116	36-Leather cup
TS-35A-WHO-117	36-Pump plug
TS-35A-WHO-118	36-Core rod pump
TS-35A-WHO-119	Cylindrical helical compression spring
TS-35A-WHO-120	36-Back pump cover
TS-35A-WHO-121	Cylinder sleeve
TS-35A-WHO-122	Pump shock pad
TS-35A-WHO-123	Pump handle
TS-35A-WHO-124	310S-Fog tube joint
TS-35A-WHO-125	Linked to buckle assembly
TS-35A-WHO-126	310S-Protection tube
TS-35A-WHO-127	Care net for radiator
TS-35A-WHO-128	Square hole back aluminum grille
TS-35A-WHO-129	Great washer
TS-35A-WHO-130	Cross recessed pan head screw
TS-35A-WHO-131	Cross recessed pan head tapping screw
TS-35A-WHO-132	Back guard
TS-35A-WHO-133	35A-Combustion chamber
TS-35A-WHO-134	Fixed plate-Φ80
TS-35A-WHO-135	35A-Side plate
TS-35A-WHO-136	Support plate

INSPECTION & MAINTENANCE

For safety use, make sure the machine is cleaned every three-months. Before working, make sure to inspect the filter and the nozzle, and ensure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase in order to repair or get the substitute.

Before Packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.



Meaning of crossed - out wheeled dustbin:

Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

Warranty Card

CUSTOMER COPY



Purchaser's Name & Address

Product Name

AF-TS-35A-WHO Agri Fogger

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign _____

Customer Sign. _____

I/We accept the terms and conditions of Warranty as in the Warranty Card.

Warranty Card

DEALER'S COPY



Purchaser's Name & Address

Product Name

AF-TS-35A-WHO Agri Fogger

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign _____

Customer Sign. _____

I/We accept the terms and conditions of Warranty as in the Warranty Card.

Warranty Card

COMPANY COPY



Purchaser's Name & Address

Product Name

AF-TS-35A-WHO Agri Fogger

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign _____

Customer Sign. _____

I/We accept the terms and conditions of Warranty as in the Warranty Card.

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursalment. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursalment. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursalment. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction



ratnagiri impex
BRINGING THE BEST TO YOU

1st Free Service Coupon

ISO 9001-2008
CERTIFIED COMPANY

FREE SERVICE COUPON (30 Days / 20 hrs (Which ever is earlier))

Model

AF-TS-35A-WHO Agri Fogger

Serial Number

PDI Date

Service No.

Purchase bill no.

Date

Dealer's Office Seal & Signature

Operations:

- Check and Test the Fuel Mixture.
- Check and Clean the Air Filter
- Check, Clean and Adjust the Spark plug
- Check and Adjust the Carburetor Tuning
- Check and Sharpen the cutting Tools
- Start and Check the Noise, Vibration, Loosen / Fasteners etc.
- Product familiarization on Usage
- Routine maintenance and Storage

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.



agriculture | horticulture | sericulture | plantations | forestry | garden | health care

WARRANTY AND FREE SERVICE COUPON



ratnagiri impex
BRINGING THE BEST TO YOU

2nd Free Service Coupon

ISO 9001-2008
CERTIFIED COMPANY

FREE SERVICE COUPON (30 Days / 20 hrs (Which ever is earlier))

Model

AF-TS-35A-WHO Agri Fogger

Serial Number

PDI Date

Service No.

Purchase bill no.

Date

Dealer's Office Seal & Signature

Operations:

- Check and Test the Fuel Mixture.
- Check and Clean the Air Filter
- Check, Clean and Adjust the Spark plug
- Check and Adjust the Carburetor Tuning
- Check and Sharpen the cutting Tools
- Start and Check the Noise, Vibration, Loosen / Fasteners etc.
- Product familiarization on Usage
- Routine maintenance and Storage

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.



agriculture | horticulture | sericulture | plantations | forestry | garden | health care

WARRANTY AND FREE SERVICE COUPON



ratnagiri impex
BRINGING THE BEST TO YOU

3rd Free Service Coupon

ISO 9001-2008
CERTIFIED COMPANY

FREE SERVICE COUPON (30 Days / 20 hrs (Which ever is earlier))

Model

AF-TS-35A-WHO Agri Fogger

Serial Number

PDI Date

Service No.

Purchase bill no.

Date

Dealer's Office Seal & Signature

Operations:

- Check and Test the Fuel Mixture.
- Check and Clean the Air Filter
- Check, Clean and Adjust the Spark plug
- Check and Adjust the Carburetor Tuning
- Check and Sharpen the cutting Tools
- Start and Check the Noise, Vibration, Loosen / Fasteners etc.
- Product familiarization on Usage
- Routine maintenance and Storage

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.



agriculture | horticulture | sericulture | plantations | forestry | garden | health care

WARRANTY AND FREE SERVICE COUPON



Small Maintenance. Big Savings.



Small Maintenance. Big Savings.




Small Maintenance. Big Savings.

Do's & Don'ts

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments.
- Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
- Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment.
- Do not use the machine within range of persons unless they wear protective clothing.
- Do not operate the machine when fatigued or under the influence of alcohol or drugs.
- To reduce the risk of injury, close supervision is necessary when a machine is used near children. Tea Harvester shall not be used by children or untrained person.
- For more query or doubts kindly contact for Service Team/Dealer

Agrimate Army For Pest Control

ANY WHERE - ANY TIME - ANY CROP

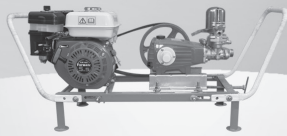


AGRIMATE[®]
Maximum Power - Super Economy

RATNAGIRI IMPEX PVT LTD
Annapurna House, #1/1G, 7th Cross, New Guddadahalli
Mysore Road, Bangalore-560 026
Customer Care: 1800-425-7475
email: customercare@ratnagiriimpex.com



Marketed by:
 **ratnagiri**[®]
impex
BRINGING YOU THE FUTURE... NOW

www.ratnagiriimpex.com

AN ISO 9001:2008 CERTIFIED COMPANY