


AMLS-5120T POWER SPRAYER

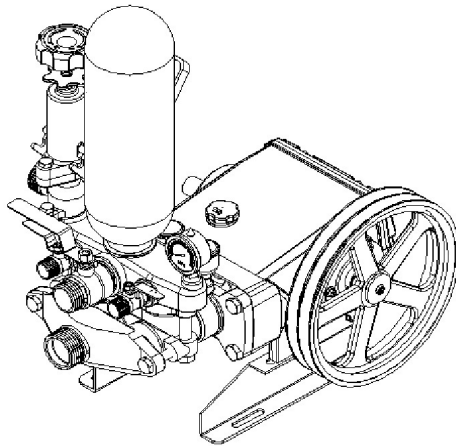

DISCLAIMER: DUE TO CONSTANT UPGRADATION, FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE



BEFORE OPERATING THIS MACHINE,
PLEASE READ THESE INSTRUCTIONS CAREFULLY

INTRODUCTION

Please peruse the contents in the instruction manual prior to use this machine, correctly carried out installation and debugging, as well as used it strictly cording to the working specification in the instruction manual. The user should be familiar with the safety notices, machine performance, and maintenance, etc. The instruction manual will be used in the later use, repair, accessories replacement, and accessories procurement, so please keep it carefully

OPERATING INSTRUCTION

- 1 Securely mount the machine on the frame, ensured the two belt pulleys be parallel and on the same plane, and the tension of belt be moderate
- 2 Add 30~40# machine oil up to 1/2 of oil gauge plug
- 3 The connectors of each rubber pipe and high pressure pipe must be locked tightly
- 4 Before start the motor, open the jet gun and ball cock, and loosen the adjusting screw
- 5 Start the motor, keeping it at appropriate velocity; Waiting there is water ejecting from the jet gun, close the jet gun or ball cock, and adjust the adjusting screw to let the pressure reach the working pressure
- 6 Turn on the ball cock and jet gun, beginning spraying. During the process may properly adjust the adjusting screw to maintain the required pressure, and lock tightly the fly nut at any moment
- 7 After spraying, operate the sprayer with clean water for 2~3 minutes to clean the residual interior chemicals
- 8 Firstly dismantle the suction hose, waiting there is no water flowing out from the jet gun or the overflow hose, stop the machine and dismantle over flow hose, high pressure pipe, and loosen the adjusting screw

TECHNICAL PARAMETERS

| | |
|---|-------------------------|
| MODEL | AMLS 5120T |
| NAME | POWER SPRAYER |
| RPM | 400/500/600/700/800/900 |
| FLOW (L/Min) | 52/65/78/91/104/117 |
| POWER HP/KW | 14/10 |
| WORKING PRESSURE (Kgt/cm ²) | 35 |
| PISTON DIA (mm) / STROKE (mm) | 38/ 38 |

TROUBLE ANALYSIS

| Trouble | Cause | Solution |
|---|------------------------------------|---|
| Can't supply water Unstable pressure | Strainer Assy blocked | Clean Strainer Assy |
| | Suction Hose leaked | Lock tightly Wing Net or replace Packing |
| | Redundant air inside pump | Exhaust redundant air inside pump |
| | Valve damaged or blocked | Eliminate impurities or replace Valve Seal |
| Cylinder leaked | Grand too loose | Lock tightly Grand (After machine stopped) |
| | V-packing damaged | Replace V-packing |
| Pressure shortage | Improper pressure adjustment | Adjust adjusting screw to proper pressure |
| | Belt too loose | Adjust belt to moderate tension |
| | High pressure pipe leaked | Check, repair, or replace high pressure pipe |
| | Valve or valve seat damaged | Replace valve or valve seat |
| Leaked oil | Oil seal damaged, unlocked tightly | Lock tightly or replace relevant oil seal |
| Temperature too high | No lubricating oil or too dirty | Add grease on time, replace clean lubricating oil |
| | Pressure or velocity too high | Adjust to proper pressure or velocity |

We reserve the right for revision without further notice !

MAINTENANCE AND SERVICE

1. Replace the oil after begin use for 40 hours, and thence replace it one time using each 70 hours;
2. Add grease one time each two hours during using;
3. After each work finished, operate it with clean water for 2 ~ 3 minutes to eliminate the residual chemical and keep each parts clean;
4. For long term placement, wipe clean the spraying machine and place it at the cool and dry place.

SAFETY NOTICES


1. Using this machine with extra high pressure is prohibited (Should $\leq 35\text{kgf/cm}^2$)
2. The belt pulley should have safety protective device;
3. Should wear such protective tools as breathing mask in spraying, and spraying toward personnel and working at the downwind position are prohibited;
4. Running without water or lubricating oil is prohibited;
5. Using such special working solutions as strong acid, strong alkali, etc. is prohibited, and should operate strictly according to the safety prompts of manufacturing plant in spraying.

ACCESSORIES



| Content | | | |
|--------------------|-----------------------|------------------|---------|
| Suction Hose 5mtr | Oil Seal | Special Spanner | V Pully |
| Overflow Hose 5mtr | 'O' Ring | Suction Strainer | |
| Belt | Pump Fitting Fastners | User Manual | |

DIAGRAM OF AMLS 5120T POWER SPRAYER

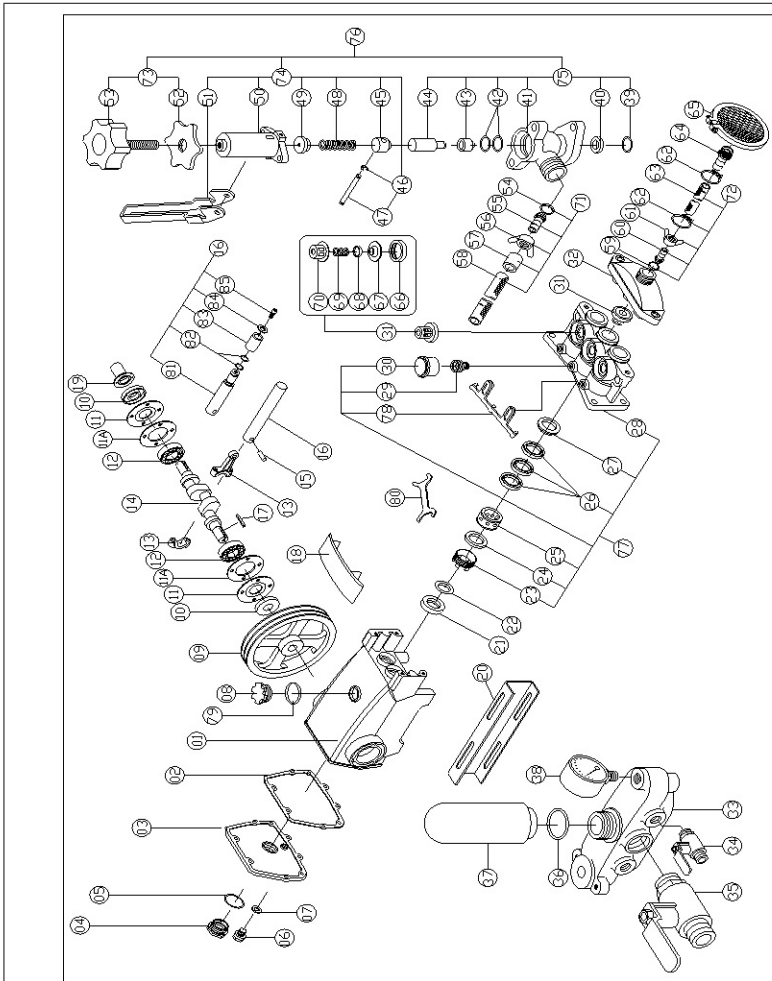

SPARE PART LIST OF AMLS 5120T POWER SPRAYER

| SL NO | PART NO | DESCRIPTION |
|-------|----------------|----------------------|
| 01 | AMLS-5120T-01 | Crank Case |
| 02 | AMLS-5120T-02 | Ring, Crank Case |
| 03 | AMLS-5120T-03 | Cover, Crank Case |
| 04 | AMLS-5120T-04 | Oil Gauge Plug |
| 05 | AMLS-5120T-05 | Ring ,Oil Gauge |
| 06 | AMLS-5120T-06 | Oil Plug |
| 07 | AMLS-5120T-07 | Ring |
| 08 | AMLS-5120T-08 | Oil Plug |
| 09 | AMLS-5120T-09 | Pulley |
| 10 | AMLS-5120T-10 | Oil Seal Crank Shaft |
| 11 | AMLS-5120T-11 | Cover |
| 11A | AMLS-5120T-11A | Cover, Oil Seal |
| 12 | AMLS-5120T-12 | Bearing |
| 13 | AMLS-5120T-13 | Connecting Rod |
| 14 | AMLS-5120T-14 | Crank Shaft |
| 15 | AMLS-5120T-15 | Plunger Pin |
| 16 | AMLS-5120T-16 | Plunger |
| 16 | AMLS-5120T-17 | Ceramic Plunger |
| 17 | AMLS-5120T-18 | Key |
| 18 | AMLS-5120T-19 | Plunger Cover |
| 19 | AMLS-5120T-20 | Cover Shaft |
| 20 | AMLS-5120T-21 | Bed, Crank Case |
| 21 | AMLS-5120T-22 | Oil Seal, Plunger |
| 22 | AMLS-5120T-23 | Seal, Stopping Water |
| 23 | AMLS-5120T-24 | Grand |
| 24 | AMLS-5120T-25 | Grease Packing |
| 25 | AMLS-5120T-26 | Grease Ring |
| 26 | AMLS-5120T-27 | V. Packing |
| 27 | AMLS-5120T-28 | V. Packing Seat |

SPARE PART LIST OF AMLS 5120T POWER SPRAYER

| SL NO | PART NO | DESCRIPTION |
|-------|---------------|------------------|
| 29 | AMLS-5120T-29 | Cylinder |
| 30 | AMLS-5120T-30 | Grease Cup(seat) |
| 31 | AMLS-5120T-31 | Grease Cup(head) |
| 32 | AMLS-5120T-32 | Valve Assy |
| 33 | AMLS-5120T-33 | Suction Metal |
| 34 | AMLS-5120T-34 | Discharge Metal |
| 35 | AMLS-5120T-35 | Ball-Cock |
| 36 | AMLS-5120T-36 | Ball-Cock |
| 37 | AMLS-5120T-37 | O-Ring |
| 38 | AMLS-5120T-38 | Air Chamber |
| 39 | AMLS-5120T-39 | Pressure Gauge |
| 40 | AMLS-5120T-40 | O-Ring |
| 41 | AMLS-5120T-41 | Valve Seat |
| 42 | AMLS-5120T-42 | Body, Overflow |
| 43 | AMLS-5120T-43 | O-Ring |
| 44 | AMLS-5120T-44 | Valve |
| 45 | AMLS-5120T-45 | Valve Bar |
| 46 | AMLS-5120T-46 | Under Metal |
| 47 | AMLS-5120T-47 | E-shape Ring |
| 48 | AMLS-5120T-48 | Pin |
| 49 | AMLS-5120T-49 | Spring |
| 50 | AMLS-5120T-50 | Upper Metal |
| 51 | AMLS-5120T-51 | Spring Box |
| 52 | AMLS-5120T-52 | Lever |
| 53 | AMLS-5120T-53 | Fly Nut |
| 54 | AMLS-5120T-54 | Adjusting Screw |
| 55 | AMLS-5120T-55 | O-Ring |
| 56 | AMLS-5120T-56 | Core Coupling |
| 57 | AMLS-5120T-57 | Wing Nut |

SPARE PART LIST OF AMLS 5120T POWER SPRAYER

| SL NO | PART NO | DESCRIPTION |
|-------|---------------|----------------------------|
| 30 | AMLS-5120T-30 | Brass Cup |
| 31 | AMLS-5120T-31 | Overflow Hose |
| 32 | AMLS-5120T-32 | O-Ring |
| 33 | AMLS-5120T-33 | Core Coupling |
| 34 | AMLS-5120T-34 | Wing Nut |
| 35 | AMLS-5120T-35 | Stainless steel Cup |
| 36 | AMLS-5120T-36 | Suction Hose |
| 37 | AMLS-5120T-37 | Core Strainer |
| 38 | AMLS-5120T-38 | Strainer Assy |
| 39 | AMLS-5120T-39 | Valve Seal |
| 40 | AMLS-5120T-40 | Valve Seat |
| 41 | AMLS-5120T-41 | Stopper |
| 42 | AMLS-5120T-42 | Valve Spring |
| 43 | AMLS-5120T-43 | Spring Box |
| 44 | AMLS-5120T-44 | Suction Hose Assy |
| 45 | AMLS-5120T-45 | Suction Hose Assy |
| 46 | AMLS-5120T-46 | Fly Nut & Regulating Screw |
| 47 | AMLS-5120T-47 | Spring Box Assy |
| 48 | AMLS-5120T-48 | Overflow Seat Assy |
| 49 | AMLS-5120T-49 | Regulating Assy |
| 50 | AMLS-5120T-50 | Cylinder Assy |
| 51 | AMLS-5120T-51 | Packing Stable Plate |
| 52 | AMLS-5120T-52 | O-Ring |
| 53 | AMLS-5120T-53 | Adjusting Belt |
| 54 | AMLS-5120T-54 | Plunger pole |
| 55 | AMLS-5120T-55 | O-Ring |
| 56 | AMLS-5120T-56 | Plunger sleeve |
| 57 | AMLS-5120T-57 | Gland |
| 58 | AMLS-5120T-58 | Inner hexagonal screw |

INSPECTION & MAINTENANCE

For safety use, make sure the machine is cleaned every three-months. Before working, make sure to inspect the filter and the nozzle, and ensure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase in order to repair or get the substitute.

Before Packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.



Meaning of crossed - out wheeled dustbin:

Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

Warranty Card

CUSTOMER COPY



Date _____

Purchaser's Name & Address

Product Name

AMLS-5120T POWER SPRAYER

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign _____

Customer Sign. _____

I/We accept the terms and conditions of Warranty as in the Warranty Card.

Warranty Card

DEALER'S COPY



Date _____

Purchaser's Name & Address

Product Name

AMLS-5120T POWER SPRAYER

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign _____

Customer Sign. _____

I/We accept the terms and conditions of Warranty as in the Warranty Card.

Warranty Card

COMPANY COPY



Date _____

Purchaser's Name & Address

Product Name

AMLS-5120T POWER SPRAYER

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign _____

Customer Sign. _____

I/We accept the terms and conditions of Warranty as in the Warranty Card.

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursalment. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursalment. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursalment. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction



1st Free Service Coupon

ISO 9001:2015
CERTIFIED COMPANY

FREE SERVICE COUPON (30 Days / 20 hrs (Which ever is earlier))

| | |
|--|---------------|
| Model AMLS-5120T POWER SPRAYER | Serial Number |
|--|---------------|

| | | | |
|----------|-------------|-------------------|------|
| PDI Date | Service No. | Purchase bill no. | Date |
|----------|-------------|-------------------|------|

Dealer's Office Seal

- Operations:
- Check and Test the Fuel Mixture.
 - Check and Clean the Air Filter
 - Check, Clean and Adjust the Spark plug
 - Check and Adjust the Carburetor Tuning
 - Check and Sharpen the cutting Tools
 - Start and Check the Noise, Vibration, Loosen / Fasteners etc.
 - Product familiarization on Usage
 - Routine maintenance and Storage

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.



agriculture | horticulture | sericulture | plantations | forestry | garden | health care

WARRANTY AND FREE SERVICE COUPON



2nd Free Service Coupon

ISO 9001:2015
CERTIFIED COMPANY

FREE SERVICE COUPON 60 Days/100 hrs (Which ever is earlier)

| | |
|--|---------------|
| Model AMLS-5120T POWER SPRAYER | Serial Number |
|--|---------------|

| | | | |
|----------|-------------|-------------------|------|
| PDI Date | Service No. | Purchase bill no. | Date |
|----------|-------------|-------------------|------|

Dealer's Office Seal

- Operations:
- Check and Test the Fuel Mixture.
 - Check and Clean the Air Filter
 - Check, Clean and Adjust the Spark plug
 - Check and Adjust the Carburetor Tuning
 - Check and Sharpen the cutting Tools
 - Start and Check the Noise, Vibration, Loosen / Fasteners etc.
 - Product familiarization on Usage
 - Routine maintenance and Storage

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.



agriculture | horticulture | sericulture | plantations | forestry | garden | health care

WARRANTY AND FREE SERVICE COUPON



3rd Free Service Coupon

ISO 9001:2015
CERTIFIED COMPANY

FREE SERVICE COUPON 90 Days/200 hrs (Which ever is earlier)

| | |
|--|---------------|
| Model AMLS-5120T POWER SPRAYER | Serial Number |
|--|---------------|

| | | | |
|----------|-------------|-------------------|------|
| PDI Date | Service No. | Purchase bill no. | Date |
|----------|-------------|-------------------|------|

Dealer's Office Seal

- Operations:
- Check and Test the Fuel Mixture.
 - Check and Clean the Air Filter
 - Check, Clean and Adjust the Spark plug
 - Check and Adjust the Carburetor Tuning
 - Check and Sharpen the cutting Tools
 - Start and Check the Noise, Vibration, Loosen / Fasteners etc.
 - Product familiarization on Usage
 - Routine maintenance and Storage

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.



agriculture | horticulture | sericulture | plantations | forestry | garden | health care

WARRANTY AND FREE SERVICE COUPON



Small Maintenance. Big Savings.



Small Maintenance. Big Savings.



Small Maintenance. Big Savings.

Do's & Don'ts

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments.
- Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
- Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment.
- Do not use the machine within range of persons unless they wear protective clothing.
- Do not operate the machine when fatigued or under the influence of alcohol or drugs.
- When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
- For more query kindly contact for our Service Center/Dealer/ franchise

Agrimate Army For Pest Control

ANY WHERE - ANY TIME - ANY CROP




AGRIMATE[®]
Maximum Power - Super Economy

IMPORTED AND MARKETED BY:
RATNAGIRI IMPEX PVT., LTD.,
Annapurna House, #1/1G, 7th Cross, New Guddadahalli
Mysore Road, Bangalore - 560 026
Customer Care: 1800-425-3036
Email: marketing@ratnagiriimpex.com



Marketed by:
 **ratnagiri**[®]
impex
BRINGING YOU THE FUTURE... NOW

www.ratnagiriimpex.com

AN ISO 9001-2015 CERTIFIED COMPANY