

## INTERCULTIVATOR/POWER WEEDER AM-MPT-1100-9D/6D CHAMPION- 3 GEAR TRANSMISSION DIGRAM WITH PART LIST



DISCLAIMER : DUE TO CONTANT UPGRADATION FEATURES & SPECIFICATIONS ARE SELECT TO CHANGE WITHOUT NOTICE  
BEFORE OPERATING THIS MACHINE PLEASE READ THIS INSTRUCTIONS MANUAL CAREFULLY

# INTRODUCTION

Dear Sir/ Madam,

Thank you for choosing Agrimate product. You are the proud owner of high technology & durable machine. Trust that our Franchisee/Dealer installed the product & installed the product and explained you about the usage & service instructions. Please visit our authorised dealer for your future requirement of our other equipments, genuine spares, accessories and services. Service coupons are attached with this manual and you can avail free service to keep your machine fit always to use on demand.

About Ratnagiri,


We import and market of high quality of agriculture wide range of equipments which we are selling through our authorised franchisee or dealer network. We are in this field from past years service the farmer. community. For further details, Please visit our website [www.agrimart.in](http://www.agrimart.in).  
& Give a missed call to 7393 938 938.

## TECHNICAL PARAMETERS

|                     |                         |
|---------------------|-------------------------|
| MODEL               | AM-MPT-1100-9D CHAMPION |
| STARTING            | RECOIL/STARTING         |
| DISPLACEMENT        | 406CC                   |
| FUEL TANK CAPACITY  | 5.5L                    |
| ENGINE OIL CAPACITY | 1.1L                    |
| DRIVING MODEL       | GEAR TYPE               |
| GEAR                | 2 FORWARD + 1 REVERSE   |
| TILLING DEPTH       | ≥100MM                  |
| TILLING DEPTH       | 850-1350MM              |
| NW                  | 125/135KG               |

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## ENGINE SUPPORT -A

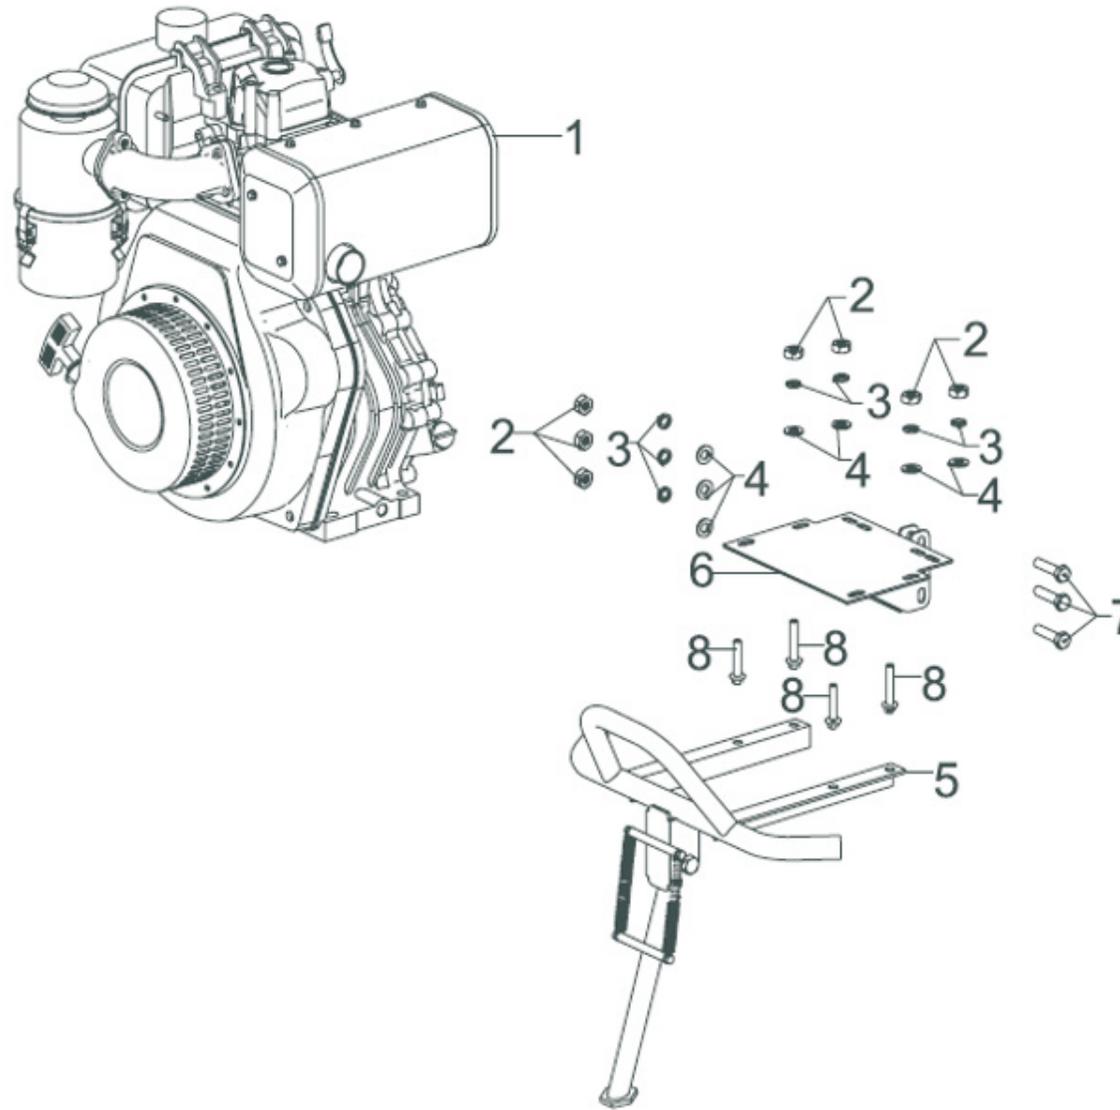


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

| SL NO | PART NO              | DESCRIPTION            | SL NO | PART NO | DESCRIPTION |
|-------|----------------------|------------------------|-------|---------|-------------|
| 1     | AM-MPT-1100-9DC-TA01 | ENGINE                 |       |         |             |
| 2     | AM-MPT-1100-9DC-TA02 | HEXAGON NUT            |       |         |             |
| 3     | AM-MPT-1100-9DC-TA03 | STANDARD SPRING WASHER |       |         |             |
| 4     | AM-MPT-1100-9DC-TA04 | FLAT WASHER            |       |         |             |
| 5     | AM-MPT-1100-9DC-TA05 | GUARD                  |       |         |             |
| 6     | AM-MPT-1100-9DC-TA06 | ENGINE CONNETING SEAT  |       |         |             |
| 7     | AM-MPT-1100-9DC-TA07 | HEXAGONAL HEAD BOLT    |       |         |             |
| 8     | AM-MPT-1100-9DC-TA08 | HEXAGONAL HEAD BOLT    |       |         |             |
| 9     |                      |                        |       |         |             |
| 10    |                      |                        |       |         |             |
| 11    |                      |                        |       |         |             |
| 12    |                      |                        |       |         |             |
| 13    |                      |                        |       |         |             |
| 14    |                      |                        |       |         |             |
| 15    |                      |                        |       |         |             |
| 16    |                      |                        |       |         |             |

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## GEAR BOX - B

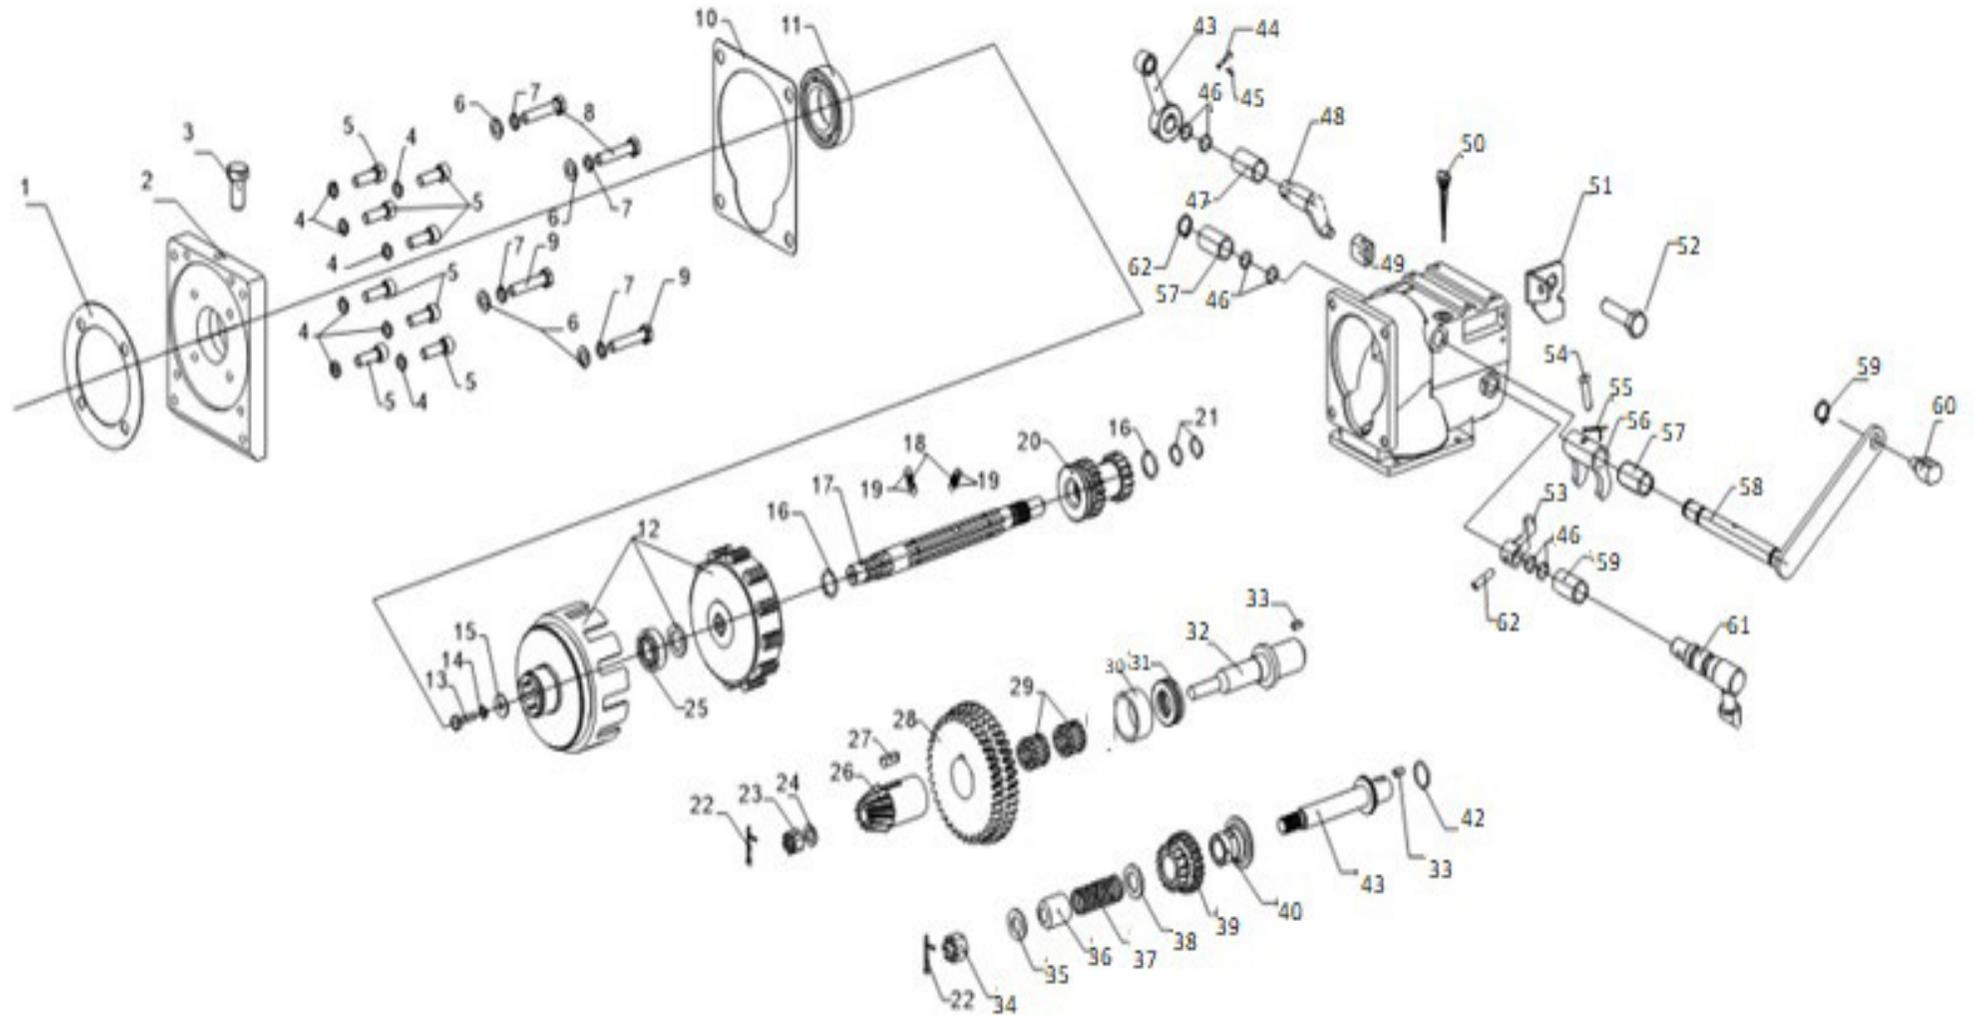

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION


| SL NO | PART NO              | DESCRIPTION                       | SL NO | PART NO              | DESCRIPTION              |
|-------|----------------------|-----------------------------------|-------|----------------------|--------------------------|
| 1     | AM-MPT-1100-9DC-TB01 | ENGINE GASKET                     | 17    | AM-MPT-1100-9DC-TB17 | MAIN AXLE                |
| 2     | AM-MPT-1100-9DC-TB02 | FLANGE                            | 18    | AM-MPT-1100-9DC-TB18 | STOPPER SPRING           |
| 3     | AM-MPT-1100-9DC-TB03 | PRESSURE RELIEF BOLT              | 19    | AM-MPT-1100-9DC-TB19 | STEEL BALL               |
| 4     | AM-MPT-1100-9DC-TB04 | STANDARD SPRING WASHER            | 20    | AM-MPT-1100-9DC-TB20 | D GEAR                   |
| 5     | AM-MPT-1100-9DC-TB05 | HEXAGON SOCKET HEAD CAP SCREW     | 21    | AM-MPT-1100-9DC-TB21 | O-TYPE RUBBER SEAL RING  |
| 6     | AM-MPT-1100-9DC-TB06 | FLAT WASHER                       | 22    | AM-MPT-1100-9DC-TB22 | COTTER PIN               |
| 7     | AM-MPT-1100-9DC-TB07 | STANDARD SPRING WASHER            | 23    | AM-MPT-1100-9DC-TB23 | HEXAGON NUTS             |
| 8     | AM-MPT-1100-9DC-TB08 | HEXAGONAL HEAD BOLT - FULL THREAD | 24    | AM-MPT-1100-9DC-TB24 | FLAT WASHER              |
| 9     | AM-MPT-1100-9DC-TB09 | HEXAGONAL HEAD BOLT               | 25    | AM-MPT-1100-9DC-TB25 | DEEP GROOVE BALL BEARING |
| 10    | AM-MPT-1100-9DC-TB10 | FLANGE SEAL GASKET                | 26    | AM-MPT-1100-9DC-TB26 | COUNTERSHAFT BEVEL GEAR  |
| 11    | AM-MPT-1100-9DC-TB11 | DEEP GROOVE BALL BEARING          | 27    | AM-MPT-1100-9DC-TB27 | GENERAL FLAT KEY         |
| 12    | AM-MPT-1100-9DC-TB12 | CLUTCH                            | 28    | AM-MPT-1100-9DC-TB28 | D GEAR                   |
| 13    | AM-MPT-1100-9DC-TB13 | HEXAGONAL HEAD BOLT               | 29    | AM-MPT-1100-9DC-TB29 | NEEDLE BEARING           |
| 14    | AM-MPT-1100-9DC-TB14 | STANDARD SPRING WASHER            | 30    | AM-MPT-1100-9DC-TB30 | BUSH                     |
| 15    | AM-MPT-1100-9DC-TB15 | FLAT WASHER                       | 31    | AM-MPT-1100-9DC-TB31 | BALL BEARING             |
| 16    | AM-MPT-1100-9DC-TB16 | STILL RING                        | 32    | AM-MPT-1100-9DC-TB32 | COUNTERSHAFT             |

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

| SL NO | PART NO              | DESCRIPTION              | SL NO | PART NO              | DESCRIPTION                 |
|-------|----------------------|--------------------------|-------|----------------------|-----------------------------|
| 33    | AM-MPT-1100-9DC-TB33 | PIN                      | 49    | AM-MPT-1100-9DC-TB49 | SHIFT FORK                  |
| 34    | AM-MPT-1100-9DC-TB34 | HEXAGON SLOTTED NUT      | 50    | AM-MPT-1100-9DC-TB50 | OIL DIPSTICK SUBASSEMBLY    |
| 35    | AM-MPT-1100-9DC-TB35 | FLAT WASHER              | 51    | AM-MPT-1100-9DC-TB51 | INHAUL CABLE BASE           |
| 36    | AM-MPT-1100-9DC-TB36 | STANDARD SPRING WASHER   | 52    | AM-MPT-1100-9DC-TB52 | BOLT                        |
| 37    | AM-MPT-1100-9DC-TB37 | REVERSE GEAR SPRING      | 53    | AM-MPT-1100-9DC-TB53 | SHIFTS FORK                 |
| 38    | AM-MPT-1100-9DC-TB38 | Washer                   | 54    | AM-MPT-1100-9DC-TB54 | PIN SHAFT                   |
| 39    | AM-MPT-1100-9DC-TB39 | GEAR                     | 55    | AM-MPT-1100-9DC-TB55 | COTTER PIN                  |
| 40    | AM-MPT-1100-9DC-TB40 | REVERSE GEAR PUSH PLATE  | 56    | AM-MPT-1100-9DC-TB56 | CLUTCH FORK                 |
| 41    | AM-MPT-1100-9DC-TB41 | REVERSE SHAFT            | 57    | AM-MPT-1100-9DC-TB57 | BUSH                        |
| 42    | AM-MPT-1100-9DC-TB42 | O-TYPE RUBBER SEAL RING  | 58    | AM-MPT-1100-9DC-TB58 | FORK SUBASSEMBLY, SHIFTS    |
| 43    | AM-MPT-1100-9DC-TB43 | SHIFT ARM                | 59    | AM-MPT-1100-9DC-TB59 | CIRCLIP FOR SHAFT - TYPE A  |
| 44    | AM-MPT-1100-9DC-TB44 | PIN SHAFT                | 60    | AM-MPT-1100-9DC-TB60 | INHAUL CABLE BASE           |
| 45    | AM-MPT-1100-9DC-TB45 | COTTER PIN               | 61    | AM-MPT-1100-9DC-TB61 | REVERSE FORK SUBASSY        |
| 46    | AM-MPT-1100-9DC-TB46 | O-TYPE RUBBER SEAL RING  | 62    | AM-MPT-1100-9DC-TB62 | SLOTTED FLAT END SET SCREWS |
| 47    | AM-MPT-1100-9DC-TB47 | BUSH                     |       |                      |                             |
| 48    | AM-MPT-1100-9DC-TB48 | FORK SUBASSEMBLY, SHIFTS |       |                      |                             |

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## REAR UPPER GEAR BOX - C

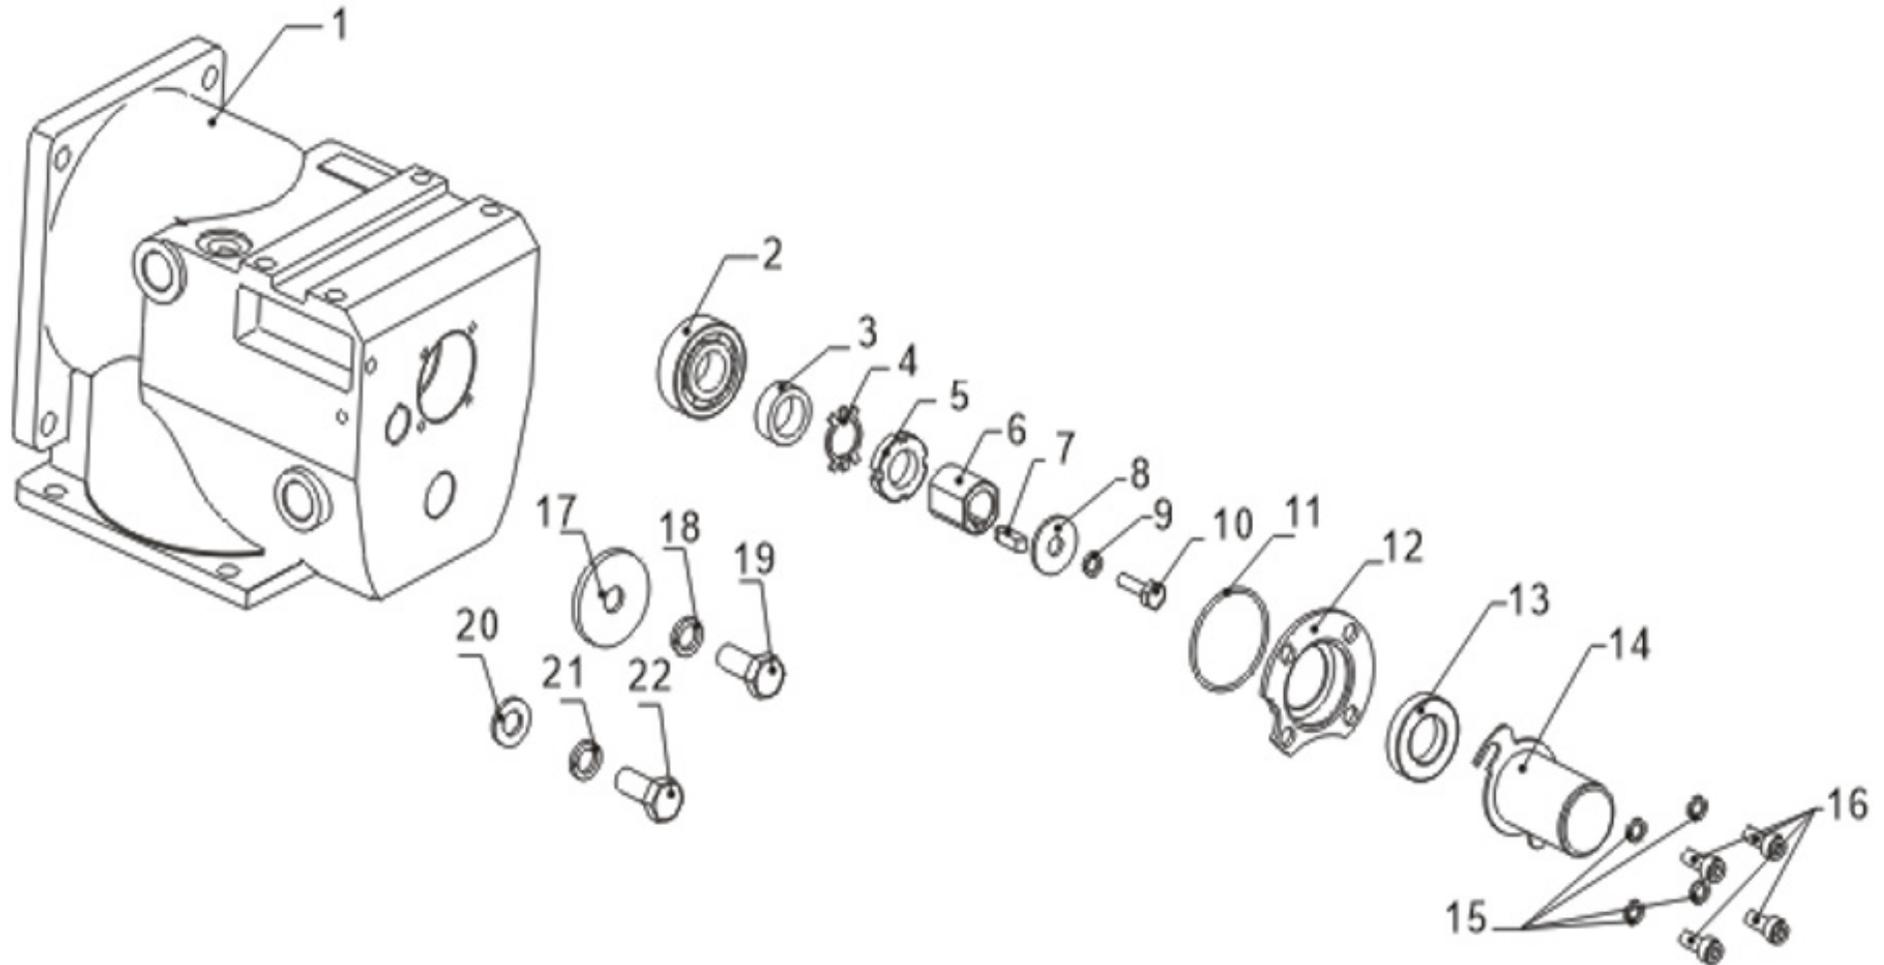


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

| SL NO | PART NO              | DESCRIPTION                  | SL NO | PART NO              | DESCRIPTION            |
|-------|----------------------|------------------------------|-------|----------------------|------------------------|
| 1     | AM-MPT-1100-9DC-TC01 | TRANSMISSION BOX BODY        | 17    | AM-MPT-1100-9DC-TC17 | FLAT WASHER            |
| 2     | AM-MPT-1100-9DC-TC02 | DEEP GROOVE BALL BEARING     | 18    | AM-MPT-1100-9DC-TC18 | FLAT WASHER            |
| 3     | AM-MPT-1100-9DC-TC03 | BUSH                         | 19    | AM-MPT-1100-9DC-TC19 | HEXAGONAL HEAD BOLT    |
| 4     | AM-MPT-1100-9DC-TC04 | LOCK WASHER FOR ROUND NUTS   | 20    | AM-MPT-1100-9DC-TC20 | FLAT WASHER            |
| 5     | AM-MPT-1100-9DC-TC05 | SMALL ROUND NUT              | 21    | AM-MPT-1100-9DC-TC21 | STANDARD SPRING WASHER |
| 6     | AM-MPT-1100-9DC-TC06 | FLAT KEY SET                 | 22    | AM-MPT-1100-9DC-TC22 | HEXAGONAL HEAD BOLT    |
| 7     | AM-MPT-1100-9DC-TC07 | FLAT KEY                     |       |                      |                        |
| 8     | AM-MPT-1100-9DC-TC08 | EXTRA LARGE GASKET - GRADE C |       |                      |                        |
| 9     | AM-MPT-1100-9DC-TC09 | STANDARD SPRING WASHER       |       |                      |                        |
| 10    | AM-MPT-1100-9DC-TC10 | HEXAGONAL HEAD BOLT          |       |                      |                        |
| 11    | AM-MPT-1100-9DC-TC11 | O-TYPE RUBBER SEAL RING      |       |                      |                        |
| 12    | AM-MPT-1100-9DC-TC12 | MAIN SHAFT GLAND             |       |                      |                        |
| 13    | AM-MPT-1100-9DC-TC13 | OIL SEAL                     |       |                      |                        |
| 14    | AM-MPT-1100-9DC-TC14 | MAIN SHAFT SAFETY GUARD      |       |                      |                        |
| 15    | AM-MPT-1100-9DC-TC15 | FLAT WASHER                  |       |                      |                        |
| 16    | AM-MPT-1100-9DC-TC16 | HEXAGONAL HEAD BOLT          |       |                      |                        |

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## LOWER GEAR BOX- D

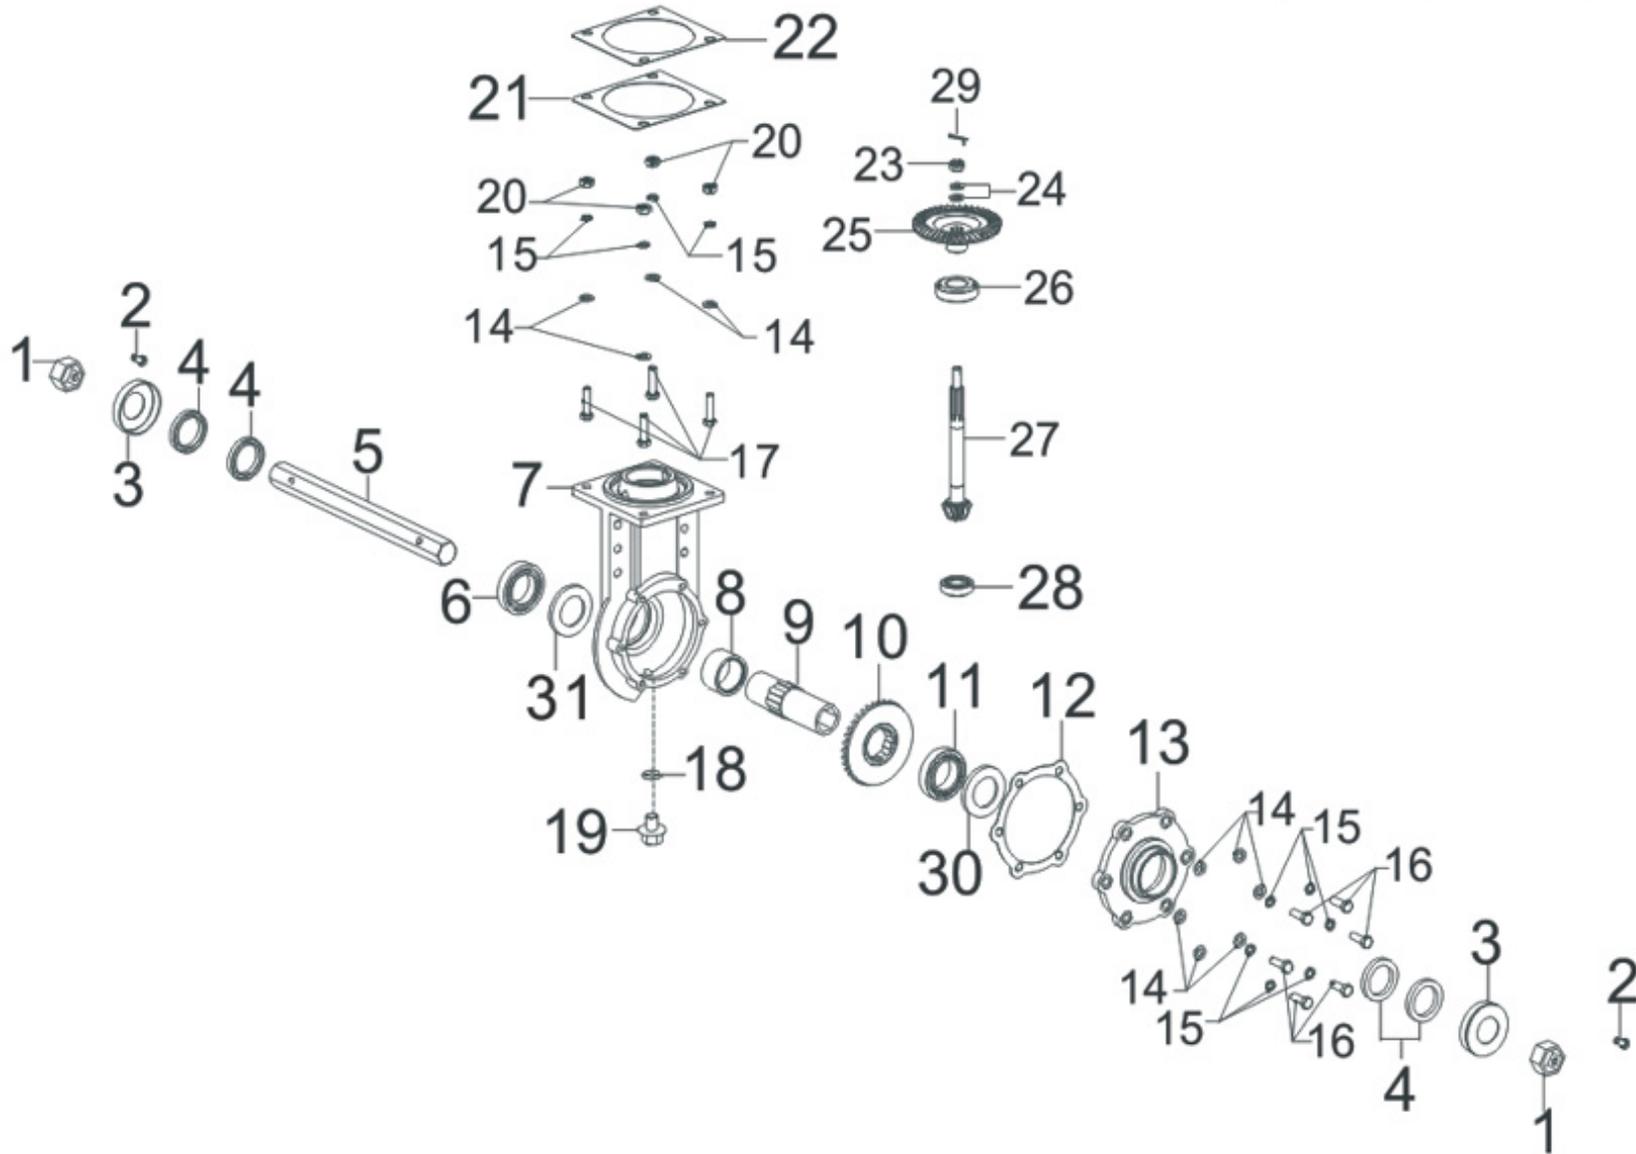


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

| SL NO | PART NO              | DESCRIPTION                   | SL NO | PART NO              | DESCRIPTION                     |
|-------|----------------------|-------------------------------|-------|----------------------|---------------------------------|
| 1     | AM-MPT-1100-9DC-TD01 | HEXAGONAL FIXING SLEEVE       | 17    | AM-MPT-1100-9DC-TD17 | HEXAGONAL HEAD BOLT             |
| 2     | AM-MPT-1100-9DC-TD02 | HEXAGONAL HEAD BOLT           | 18    | AM-MPT-1100-9DC-TD18 | O-TYPE RUBBER SEAL RING         |
| 3     | AM-MPT-1100-9DC-TD03 | OUTPUT SHAFT DUST-PROOF COVER | 19    | AM-MPT-1100-9DC-TD19 | DRAIN PLUG BOLT                 |
| 4     | AM-MPT-1100-9DC-TD04 | OIL SEAL                      | 20    | AM-MPT-1100-9DC-TD20 | HEXAGON NUT                     |
| 5     | AM-MPT-1100-9DC-TD05 | OUTPUT SHAFT                  | 21    | AM-MPT-1100-9DC-TD21 | MOULD ASSEMBLING SEAL GASKET    |
| 6     | AM-MPT-1100-9DC-TD06 | DEEP GROOVE BALL BEARING      | 22    | AM-MPT-1100-9DC-TD22 | MOULD ASSEMBLING SEAL GASKET    |
| 7     | AM-MPT-1100-9DC-TD07 | TRANSMISSION BOX BODY         | 23    | AM-MPT-1100-9DC-TD23 | TYPE 1 HEXAGONAL SLOTTED NUT    |
| 8     | AM-MPT-1100-9DC-TD08 | OUTPUT SHAFT SPACER BUSH      | 24    | AM-MPT-1100-9DC-TD24 | FLAT WASHER                     |
| 9     | AM-MPT-1100-9DC-TD09 | HEXAGONAL OUTPUT SHAFT SLEEVE | 25    | AM-MPT-1100-9DC-TD25 | DRIVEN BEVEL GEAR               |
| 10    | AM-MPT-1100-9DC-TD10 | TRANSPORTATION BEVEL GEAR     | 26    | AM-MPT-1100-9DC-TD26 | TAPERED ROLLER BEARINGS         |
| 11    | AM-MPT-1100-9DC-TD11 | TAPERED ROLLER BEARINGS       | 27    | AM-MPT-1100-9DC-TD27 | TRANSPORTATION BEVEL GEAR SHAFT |
| 12    | AM-MPT-1100-9DC-TD12 | END COVER SEALING GASKET      | 28    | AM-MPT-1100-9DC-TD28 | TAPERED ROLLER BEARINGS         |
| 13    | AM-MPT-1100-9DC-TD13 | TRANSMISSION BOX COVER        | 29    | AM-MPT-1100-9DC-TD29 | COTTER PIN                      |
| 14    | AM-MPT-1100-9DC-TD14 | FLAT WASHER                   | 30    | AM-MPT-1100-9DC-TD30 | FLAT WASHER                     |
| 15    | AM-MPT-1100-9DC-TD15 | STANDARD SPRING WASHER        | 31    | AM-MPT-1100-9DC-TD31 | FLAT WASHER                     |
| 16    | AM-MPT-1100-9DC-TD16 | HEXAGONAL HEAD BOLT           |       |                      |                                 |

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## HANDLE - E

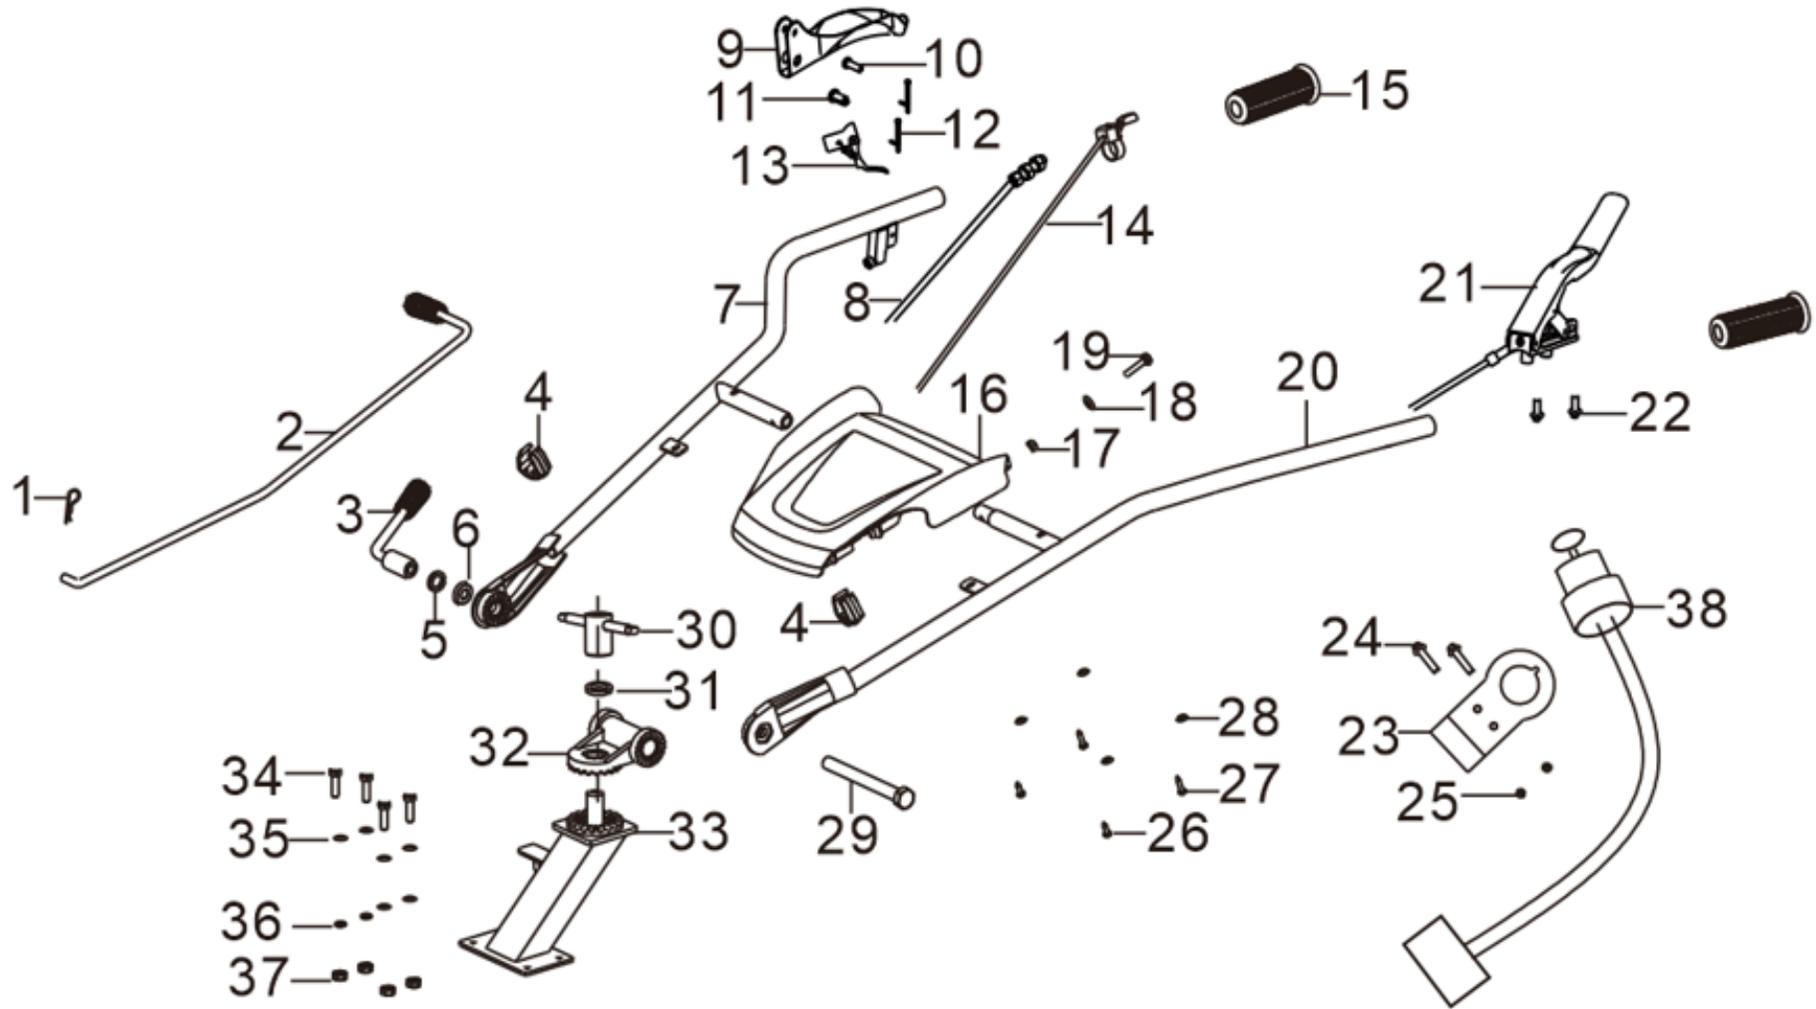

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION


| SL NO | PART NO              | DESCRIPTION            | SL NO | PART NO              | DESCRIPTION                                |
|-------|----------------------|------------------------|-------|----------------------|--|
| 1     | AM-MPT-1100-9DC-TE01 | CLIP                   | 17    | AM-MPT-1100-9DC-TE17 | NON-METALLIC HEX LOCK NUT                  |
| 2     | AM-MPT-1100-9DC-TE02 | GEAR LEVER             | 18    | AM-MPT-1100-9DC-TE18 | FLAT WASHER                                |
| 3     | AM-MPT-1100-9DC-TE03 | LOCK HANDLE            | 19    | AM-MPT-1100-9DC-TE19 | HEXAGONAL HEAD BOLT                        |
| 4     | AM-MPT-1100-9DC-TE04 | WIRE CLIP              | 20    | AM-MPT-1100-9DC-TE20 | HANDLE TUBE ASSY                           |
| 5     | AM-MPT-1100-9DC-TE05 | FLAT WASHER            | 21    | AM-MPT-1100-9DC-TE21 | FORWARD CLUTCH HANDLE ASSEMBLY             |
| 6     | AM-MPT-1100-9DC-TE06 | FLAT WASHER            | 22    | AM-MPT-1100-9DC-TE22 | BOLT                                       |
| 7     | AM-MPT-1100-9DC-TE07 | HANDLE TUBE ASSY       | 23    | AM-MPT-1100-9DC-TE23 | FIXING PLATE                               |
| 8     | AM-MPT-1100-9DC-TE08 | REVERSE GEAR CABLE     | 24    | AM-MPT-1100-9DC-TE24 | BOLT                                       |
| 9     | AM-MPT-1100-9DC-TE09 | REVERSE CLUTCH HANDLE  | 25    | AM-MPT-1100-9DC-TE25 | NON-METALLIC HEX LOCK NUT                  |
| 10    | AM-MPT-1100-9DC-TE10 | PIN SHAFT              | 26    | AM-MPT-1100-9DC-TE26 | CROSS-RECESSED PAN HEAD SELF-TAPPING SCREW |
| 11    | AM-MPT-1100-9DC-TE11 | PIN SHAFT              | 27    | AM-MPT-1100-9DC-TE27 | CROSS-RECESSED PAN HEAD SELF-TAPPING SCREW |
| 12    | AM-MPT-1100-9DC-TE12 | COTTER PIN             | 28    | AM-MPT-1100-9DC-TE28 | FLAT WASHER                                |
| 13    | AM-MPT-1100-9DC-TE13 | SEAT SUBASSEMBLY       | 29    | AM-MPT-1100-9DC-TE29 | HEXAGONAL HEAD BOLT                        |
| 14    | AM-MPT-1100-9DC-TE14 | THROTILE COCK ASSEMBLY | 30    | AM-MPT-1100-9DC-TE30 | LOCK HANDLE                                |
| 15    | AM-MPT-1100-9DC-TE15 | HANDLE RUBBER SLEEVE   | 31    | AM-MPT-1100-9DC-TE31 | FLAT WASHER                                |
| 16    | AM-MPT-1100-9DC-TE16 | PANEL                  | 32    | AM-MPT-1100-9DC-TE32 | TOOTH DISK PLATE                           |





# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## FENDER - G

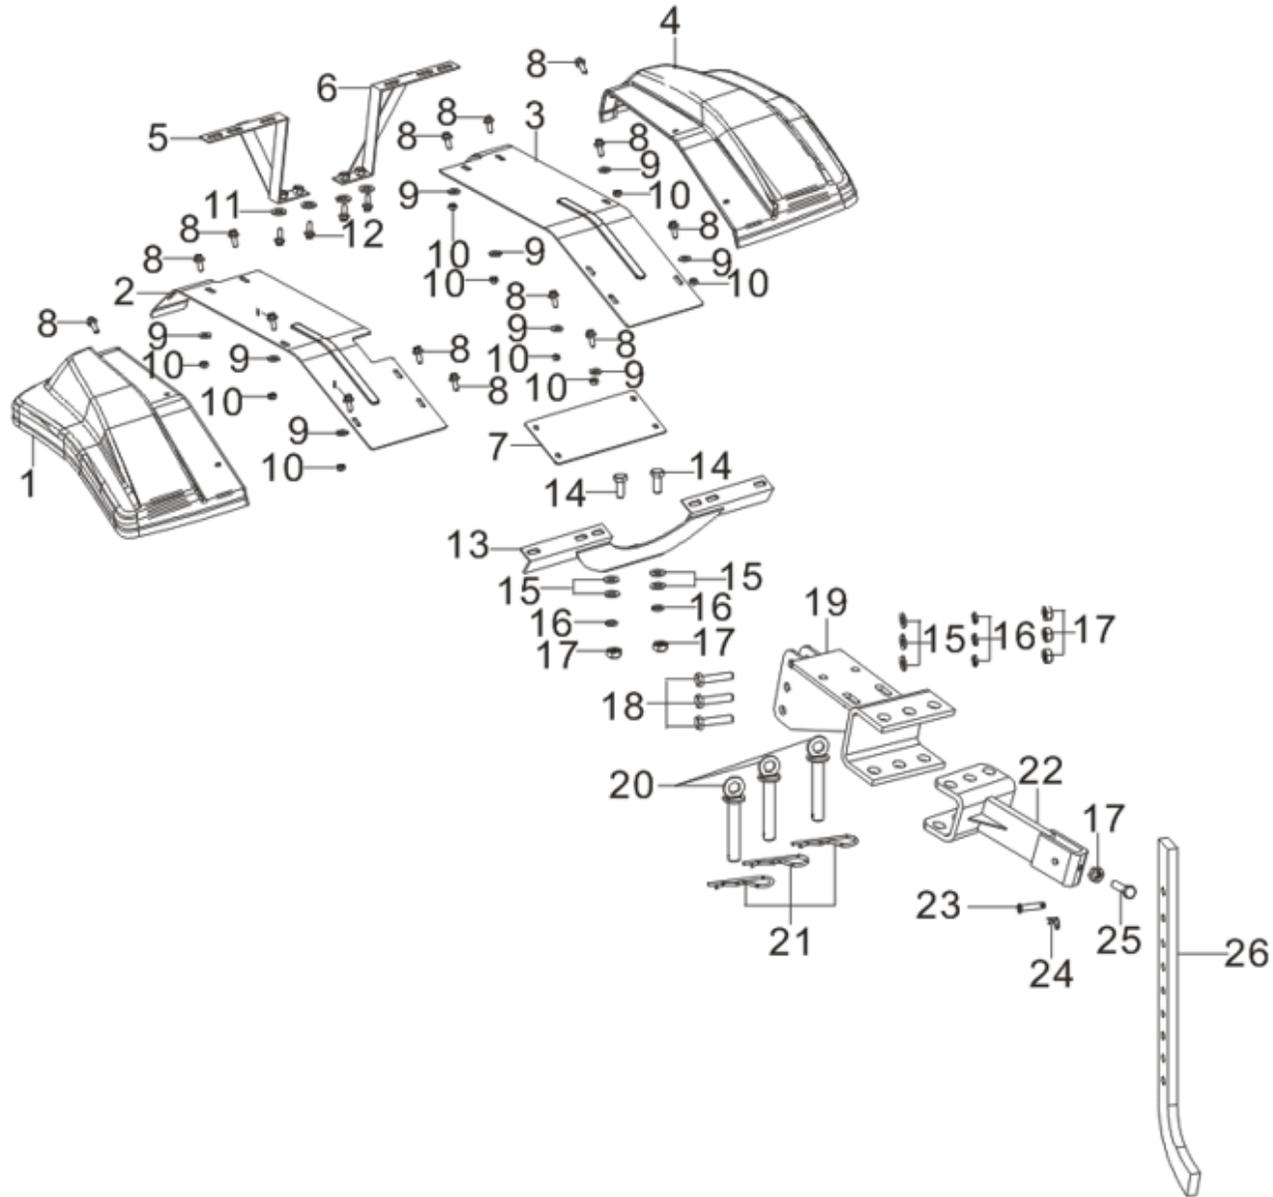


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

| SL NO | PART NO              | DESCRIPTION                | SL NO | PART NO              | DESCRIPTION         |
|-------|----------------------|----------------------------|-------|----------------------|---------------------|
| 1     | AM-MPT-1100-9DC-TG01 | FENDER, MINI-TILLER - LEFT | 17    | AM-MPT-1100-9DC-TG17 | HEXAGON NUT         |
| 2     | AM-MPT-1100-9DC-TG02 | FENDER, MINI-TILLER - LEFT | 18    | AM-MPT-1100-9DC-TG18 | HEXAGONAL HEAD BOLT |
| 3     | AM-MPT-1100-9DC-TG03 | FENDER, MINI-TILLER- RIGHT | 19    | AM-MPT-1100-9DC-TG19 | TRAILING BODY       |
| 4     | AM-MPT-1100-9DC-TG04 | FENDER, MINI-TILLER- RIGHT | 20    | AM-MPT-1100-9DC-TG20 | PIN SHAFT           |
| 5     | AM-MPT-1100-9DC-TG05 | FRONT FENDER SUPPORT       | 21    | AM-MPT-1100-9DC-TG21 | SPLIT PIN           |
| 6     | AM-MPT-1100-9DC-TG06 | FRONT FENDER SUPPORT       | 22    | AM-MPT-1100-9DC-TG22 | CONNECTION FRAME    |
| 7     | AM-MPT-1100-9DC-TG07 | MINI TILLER FENDER         | 23    | AM-MPT-1100-9DC-TG23 | PIN SHAFT           |
| 8     | AM-MPT-1100-9DC-TG08 | BOLT                       | 24    | AM-MPT-1100-9DC-TG24 | CLIP                |
| 9     | AM-MPT-1100-9DC-TG09 | LARGE WASHER - GRADE A     | 25    | AM-MPT-1100-9DC-TG25 | HEXAGONAL HEAD BOLT |
| 10    | AM-MPT-1100-9DC-TG10 | NON-METALLIC HEX LOCK NUT  | 26    | AM-MPT-1100-9DC-TG26 | DAMPING ARM         |
| 11    | AM-MPT-1100-9DC-TG11 | FLAT WASHER                |       |                      |                     |
| 12    | AM-MPT-1100-9DC-TG12 | BOLT                       |       |                      |                     |
| 13    | AM-MPT-1100-9DC-TG13 | REAR FENDER SUPPORT        |       |                      |                     |
| 14    | AM-MPT-1100-9DC-TG14 | HEXAGONAL HEAD BOLT        |       |                      |                     |
| 15    | AM-MPT-1100-9DC-TG15 | FLAT WASHER                |       |                      |                     |
| 16    | AM-MPT-1100-9DC-TG16 | STANDARD SPRING WASHER     |       |                      |                     |

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION


## LEFT BLADES- H

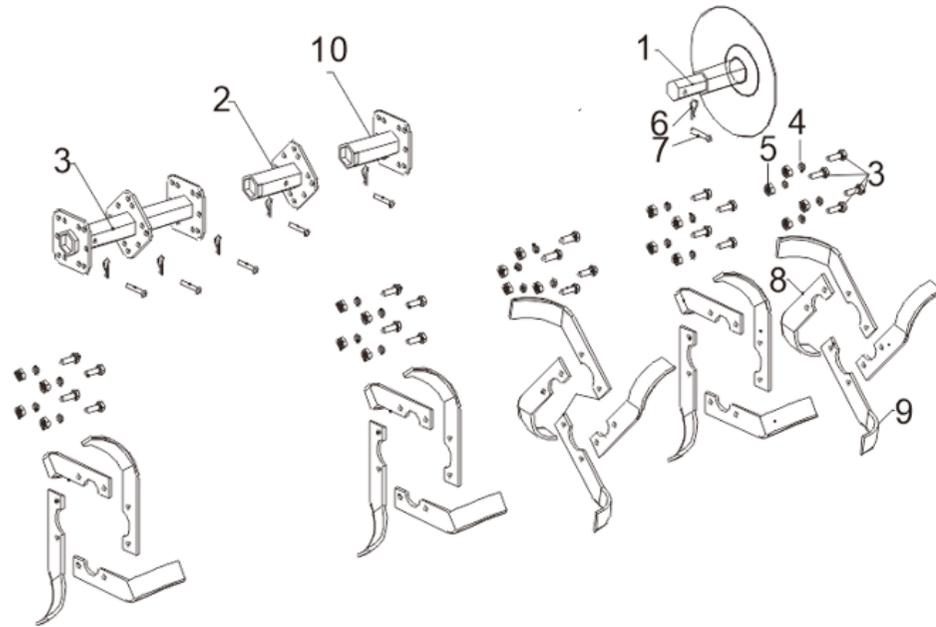

| SL NO | PART NO              | DESCRIPTION    |
|-------|----------------------|----------------|
| 1     | AM-MPT-1100-9DC-TH01 | TRIMMING WHEEL |
| 2     | AM-MPT-1100-9DC-TH02 | Shaft          |
| 3     | AM-MPT-1100-9DC-TH03 | Shaft          |
| 4     | AM-MPT-1100-9DC-TH04 | FLAT WASHER    |
| 5     | AM-MPT-1100-9DC-TH05 | HEXAGON NUT    |
| 6     | AM-MPT-1100-9DC-TH06 | CLIP           |
| 7     | AM-MPT-1100-9DC-TH07 | PIN SHAFT      |
| 8     | AM-MPT-1100-9DC-TH08 | ROTARY BLADE   |
| 9     | AM-MPT-1100-9DC-TH09 | ROTARY BLADE   |
| 10    | AM-MPT-1100-9DC-TH10 | Shaft          |
|       |                      |                |
|       |                      |                |
|       |                      |                |

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION


## RIGHT BLADES- J

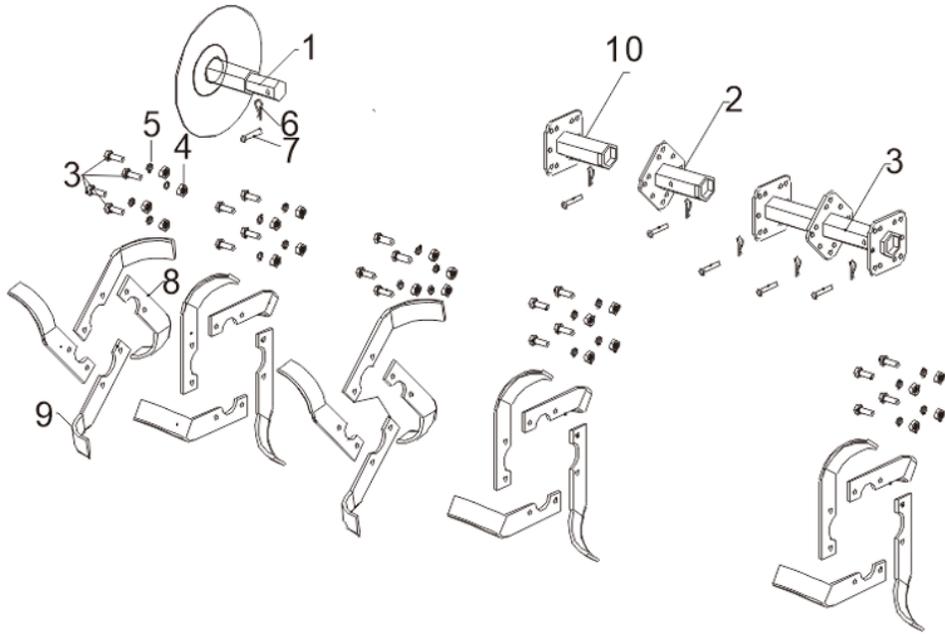


| SL NO | PART NO              | DESCRIPTION    |
|-------|----------------------|----------------|
| 1     | AM-MPT-1100-9DR-TJ01 | Trimming Wheel |
| 2     | AM-MPT-1100-9DR-TJ02 | Shaft          |
| 3     | AM-MPT-1100-9DR-TJ03 | Cylinder       |
| 4     | AM-MPT-1100-9DR-TJ04 | Washer Flat    |
| 5     | AM-MPT-1100-9DR-TJ05 | Hexagon Nut    |
| 6     | AM-MPT-1100-9DR-TJ06 | Clip           |
| 7     | AM-MPT-1100-9DR-TJ07 | Pin Shaft      |
| 8     | AM-MPT-1100-9DR-TJ08 | Rotary Blade   |
| 9     | AM-MPT-1100-9DR-TJ09 | Rotary Blade   |
| 10    | AM-MPT-1100-9DR-TJ10 | Shaft          |
| 11    |                      |                |
| 12    |                      |                |


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## LEFT & RIGHT WHEEL ASSY -K

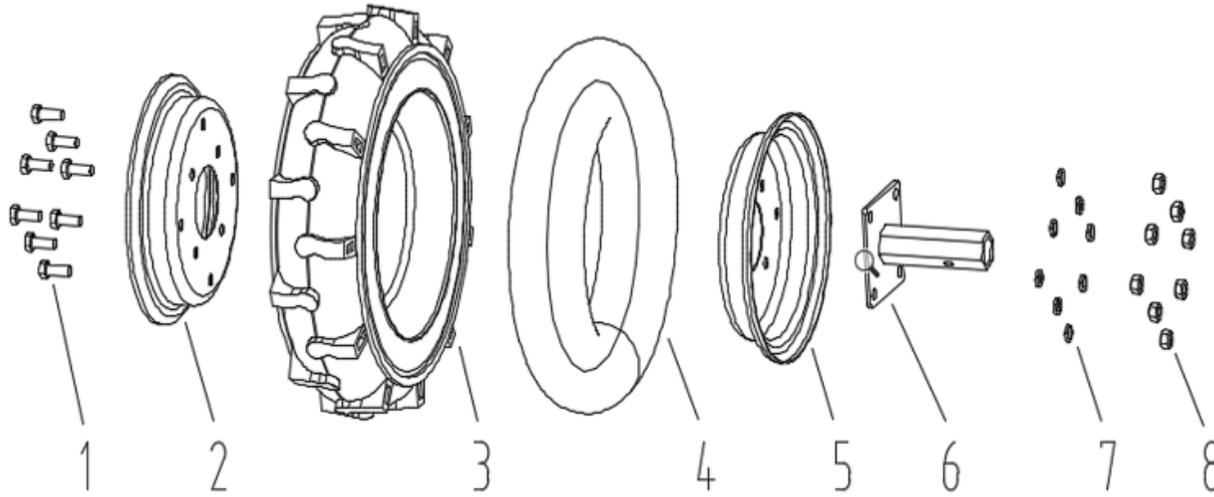

| SL NO | PART NO              | DESCRIPTION         | SL NO | PART NO              | DESCRIPTION      |
|-------|----------------------|---------------------|-------|----------------------|------------------|
| 1     | AM-MPT-1100-9DR-TK01 | HEXAGONAL HEAD BOLT | 6     | AM-MPT-1100-9DR-TK06 | REAR WHEEL SHAFT |
| 2     | AM-MPT-1100-9DR-TK02 | WHEEL HUB           | 7     | AM-MPT-1100-9DR-TK07 | FLAT WASHER      |
| 3     | AM-MPT-1100-9DR-TK03 | OUTER TUBE          | 8     | AM-MPT-1100-9DR-TK08 | HEXAGON NUT      |
| 4     | AM-MPT-1100-9DR-TK04 | INNER TUBE          |       |                      |                  |
| 5     | AM-MPT-1100-9DR-TK05 | WHEEL HUB           |       |                      |                  |

 

 

# WARRANTY CARD

## CUSTOMER COPY

|   |   |   |                    |
|---|---|---|--------------------|
| DATE _____  | DATE OF DELIVERY _____  | DEALERS OFFICIAL SEAL   | DEALERS SIGN _____ |
| PURCHASERS NAME & ADDRESS _____<br>_____  | <br>CUSTOMER SIGN |  |                    |
| PRODUCT NAME  | PRODUCT SERIAL NO.  | INVOICE/DN NO.  |                    |
|  |                   |  |                    |

I/Will accept the terms and conditions of warranty as in the warranty card

## DEALERS COPY

|   |   |   |                    |
|---|---|---|--------------------|
| DATE _____  | DATE OF DELIVERY _____  | DEALERS OFFICIAL SEAL   | DEALERS SIGN _____ |
| PURCHASERS NAME & ADDRESS _____<br>_____  | <br>CUSTOMER SIGN |  |                    |
| PRODUCT NAME  | PRODUCT SERIAL NO.  | INVOICE/DN NO.  |                    |
|  |                   |  |                    |

I/Will accept the terms and conditions of warranty as in the warranty card

## COMPANY COPY

|  |   |   |                    |
|--|---|---|--------------------|
| DATE _____   | DATE OF DELIVERY _____  | DEALERS OFFICIAL SEAL   | DEALERS SIGN _____ |
| PURCHASERS NAME & ADDRESS _____<br>_____   | <br>CUSTOMER SIGN |  |                    |
| PRODUCT NAME   | PRODUCT SERIAL NO.  | INVOICE/DN NO.  |                    |
|  |                   |  |                    |

I/Will accept the terms and conditions of warranty as in the warranty card

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction



**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE


DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

# DOS


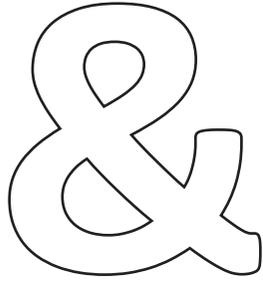


# DONT'S

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
9. For more query kindly contact for our Service Center/Dealer/ franchise

# Agrimate Army For Pest Control

ANY WHERE - ANY TIME - ANY CROP

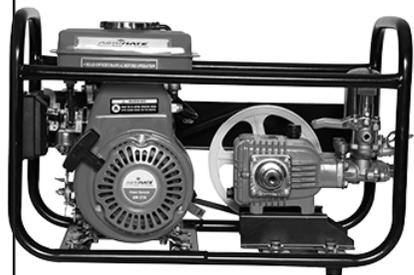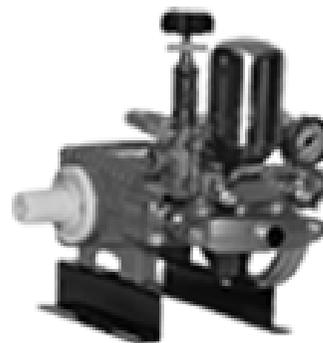

Marketed by:  
**ratnagiri  
impex**  
BRINGING YOU THE FUTURE... NOW

**RATNAGIRI IMPEX PVT., LTD.,**

Annapurna House, #1 / 1G, 7th Cross, New  
Guddadahalli

Mysore Road, Bangalore - 560 026

Missed Call : 7393 938 938

Email: [ask@agrimart.in](mailto:ask@agrimart.in)