



## INTERCULTIVATOR/ POWER WEEDER AM-MPT-1100-9D-BRM



Thanks For Ratnagiri Impex Pvt Ltd. This machine is our company in full absorption of the advantages of a variety of rural management machines at home and abroad, combined with the of soil quality, climate and users' different usage habits, A new type of multifunctional pastoral management machinery is designed.

When you buy this product, in order to fully understand the performance and characteristics of the machine, ensure the correct operation, correct maintenance, correct repair, in order to give full play to the maximum performance of the machine, please read this manual carefully.

In order to improve the product performance and constantly meet the customer needs , the performance of this product may continuously improve and improve , this manual may differ slightly from the actual product without notice , please understanding .

If there is unknown , please contact the dealer or directly contact our company

1. Use and scope of application.....	5
2. Main construction and working principles...	5
3. Main performance and parameters.....	6
4. Installation and adjustment.....	6
5. Use Operation.....	7
6. Repair and maintenance.....	8
7. Parking.....	9
8. Safety precautions.....	9
9. Failure analysis and troubleshooting .....	11
Appendix A: List of vulnerable parts.....	13
Appendix B: Annex List.....	13

## 1. Use and scope of application

1. Main uses : rotary tillage , land reclamation , soil loosening , ditches , soil cultivation , ridges in agricultural greenhouses and farmland

2. Scope of adaptation: greenhouse operations, vegetable fields, flower farms, orchards, paddy fields, hillsides and other small plots.

### 2. Main construction and working principle

The advanced low speed engine is used as the power, which is driven to the gearbox by the gear shaft, and then to the tillage position by the gearbox gear speed change. Replacement of different parts of the carry out a variety of farmland operations.



1. Main uses : rotary tillage , land reclamation , soil loosening , ditches , soil cultivation , ridges in agricultural greenhouses and farmland

2. Scope of adaptation: greenhouse operations, vegetable fields, flower farms, orchards, paddy fields, hillsides and other small plots.

### 2. Main construction and working principle

The advanced low speed engine is used as the power, which is driven to the gearbox by the gear shaft, and then to the tillage position by the gearbox gear speed change. Replacement of different parts of the carry out a variety of farmland operations.

## 3. Main performance and parameters

Main performance

- ☐ With a hoe can work hard, the installation of trench opener can open the ditch operation

	Item	Unit	Value
1	Type name	/	3TGQ-4C
	Structural	/	two wheel drive
	Overall dimension(L×W×H)	mm	1600×720×860
	Main gear box Structural	/	Gear driven
	Main gear box material	/	Iron
	Secondary gearbox structure	/	Gear+ chain
	Secondary gear box material	/	Iron
	Level adjustment	/	270°
	Vertical adjustment	/	29°
	Engine output transmission mode	/	gear drive
	Main Clutch Type	/	friction disk
	Main clutch condition		normally open
	Walking wheel type	/	rubber
	Drive wheel type during operation	/	Drive tool wheel
	Running speed	km/h	≤10
	Power	/	186 diesel engine
	rated power	kW	6.6
	rated speed	r/min	3600
	Start - up mode	/	Hand pull
	Fuel type	/	Diesel

#### 4. Installation and adjustment

Installation conditions and technical requirements

- ☐1 ☐ No loosening of fasteners
- ☐2 ☐ Enough lubricant has been added as indicated
- ☐3 ☐ Run slightly, check for no abnormal sound and fever

The rotary tiller is installed with left and right

- 1 ☐ Adjustmen
- 2 ☐ Handle up and down: Loosen adjustment handle, adjust to proper position, then lock
- 3 ☐ Control handle rotation: grip adjustment separation handle, at 360 arbitrary adjustment, adjust to their
- 4 ☐ own working position, release adjustment separation handle
- ☐4 ☐ Clutch adjustment : adjust the clutch tension and adjust to : When the clutch is released , the hand pulls the engine
- ☐5 ☐ and the triangular belt does not rotate with the engine pulley ; when closing the clutch , the hand pulls the engine
- to drive the transmission spindle.
- ☐6 ☐

#### 4. Use Operation

##### Preparation before use

Check for adequate engine and transmission lubrication oil before working

- e. Check that the parts are flexible and that the fasteners are loose. Fastening must be adjusted if loose
- f. Check that the fuel meets the standards requirements
- g. Check that the tilling parts are damaged or properly installed

##### 1 ☐ Start-up

When starting, must follow the engine start-up requirements, posture to be correct

ΔNote Belt adjustment is impossible during engine operation Do not touch the silencer to



avoid damage to you

## 2 ☐ Operate

☐1 ☐ In order to ensure the normal operation of the engine and prolong its service life, the engine must run for 5-10 minutes before carrying out farmland operation.

☐2 ☐ When working , hang the gear , light refueling door , slowly close the clutch handle , you can carry out farm operation .Release sen clutch to cut power.

**ΔNote** It is strictly forbidden to use clutch to control speed. It is strictly forbidden not to use clutch to switch gear.

(3) When trench is opened, the working depth is controlled by the depth limiting wheel, and the depth limiting wheel can be increased by raising the depth limiting wheel, whereas the depth

becomes shallow.

(4) Remove rubber wheel and install iron wheel during furrow and ridge operation.

(5) Can gradually increase the depth, but also repeated, until the depth of ploughing requirements.

(6) If the machine does not reach the speed will overload operation, should adjust the operation method in time, and pay attention to safety.

## 4. Repair and maintenance

3. When the new machine is used, it must go through 60 hours running-in period, no high speed operation and heavy load operation during the running-in period.

2.After the engine, gearbox is initially used 15-20 hours, the lubricating oil must be replaced, and then every 50-60 hours. The gearbox must ensure adequate oil.

## 7. Parking

### 1.Short-term parking

- The components must be cleaned and switched off after each operation;
- When parked, do not approach flammable substances and stay away from the source of fire;
- Check whether all parts are loose and damaged and solve problems.

### 2.Long-term parking

Clean the engine and transmission oil in hot vehicle

- condition (Note : inject new oil when starting again );
- Push transmission lever to neutral position , place clutch in natural position;
- Apply lubricating oil or butter to all cables and after cleaning;
- Remove the dust and debris from the engine cooling parts;
- Keep away from fire and flammable and corrosive substances; place in a dry place.

## 8.Safety precautions

1. The new machine must be run-in according to the maintenance requirements, the running-in period can not be high-speed heavy load operation

2. After the engine and gearbox are initially used 15-20 hours, the lubricating oil must be replaced and every 50-60 hours thereafter.

3. Engine maintenance according to engine instructions

4. Unqualified fuel and lubricants are strictly prohibited

5. The machine must be trained by technical personnel or familiar with the instructions . People who are not familiar with the operation essentials are not operate

6. Check that the gear is in neutral position before operation

7. When the tool is running, it is strictly forbidden to approach the working tool

SL NO	PART NO	DESCRIPTION
1	AM-MPT-9D-BRE-T01	SHIFT GEAR BOX
2	AM-MPT-9D-BRE-T02	UP SHIFT GEAR BOX
3	AM-MPT-9D-BRE-T03	DOUBLE GEAR 18 TEETH
4	AM-MPT-9D-BRE-T04	DOUBLE GEAR 28 TEETH
5	AM-MPT-9D-BRE-T05	DOUBLE GEAR 16 TEETH
6	AM-MPT-9D-BRE-T06	DOUBLE GEAR 44 TEETH
7	AM-MPT-9D-BRE-T07	PRINCIPAL AXES
8	AM-MPT-9D-BRE-T08	ROLLING BEARINGS
9	AM-MPT-9D-BRE-T09	ROLLING BEARINGS
10	AM-MPT-9D-BRE-T10	COUNTERSHAFT 24 TEETH
11	AM-MPT-9D-BRE-T11	POSITIVE & NEGATIVE AXIS
12	AM-MPT-9D-BRE-T12	AXES 42 TEETH
13	AM-MPT-9D-BRE-T13	AXES 16 TEETH
14	AM-MPT-9D-BRE-T14	AXES 32 TEETH
15	AM-MPT-9D-BRE-T15	AXES DOUBLE GEAR 16 TEETH
16	AM-MPT-9D-BRE-T16	AXES
17	AM-MPT-9D-BRE-T17	AXES 30TEETH
18	AM-MPT-9D-BRE-T18	AXIS 30- 2
19	AM-MPT-9D-BRE-T19	AXES 26 TEETH
20	AM-MPT-9D-BRE-T20	AXIS 30 TEETH

21	AM-MPT-9D-BRE-T21	SPROCKET
22	AM-MPT-9D-BRE-T22	SPROCKET
23	AM-MPT-9D-BRE-T23	COUNTERSHAFT DOUBLE GEAR SHAFT 20TEETH
24	AM-MPT-9D-BRE-T24	COUNTERSHAFT DOUBLE GEAR SHAFT 30TEETH
25	AM-MPT-9D-BRE-T25	COUNETSHAFT 28 WIDTH
26	AM-MPT-9D-BRE-T26	KEYWAY GEAR
27	AM-MPT-9D-BRE-T27	GASKET
28	AM-MPT-9D-BRE-T28	BALL BEARING
29	AM-MPT-9D-BRE-T29	GASKET
30	AM-MPT-9D-BRE-T30	BALL BEARING
31	AM-MPT-9D-BRE-T31	SHAFT USE
32	AM-MPT-9D-BRE-T32	UMBRELLA GEAR
33	AM-MPT-9D-BRE-T33	UPPER GEAR SHAFT
34	AM-MPT-9D-BRE-T34	AXIS 24 TEETH
35	AM-MPT-9D-BRE-T35	UMBRELLA GEAR
36	AM-MPT-9D-BRE-T36	ROLLING BEARINGS
37	AM-MPT-9D-BRE-T37	ROLLING BEARING
38	AM-MPT-9D-BRE-T38	ROLLING BEARING
39	AM-MPT-9D-BRE-T39	FLANGE OUTPUT AXES
40	AM-MPT-9D-BRE-T40	CLUTCH FORK

41	AM-MPT-9D-BRE-T41	AXES, CLUTCH FORK
42	AM-MPT-9D-BRE-T42	O RING
43	AM-MPT-9D-BRE-T43	CIRCLIP DIN
44	AM-MPT-9D-BRE-T44	NUT
45	AM-MPT-9D-BRE-T45	O RING
46	AM-MPT-9D-BRE-T46	FRONT BOX GASKET
47	AM-MPT-9D-BRE-T47	OIL PLUG BAFFLE
48	AM-MPT-9D-BRE-T48	AXES SLEEVE 2
49	AM-MPT-9D-BRE-T49	AXES SLEEVE 1
50	AM-MPT-9D-BRE-T50	AXES SLEEVE 2
51	AM-MPT-9D-BRE-T51	AXES SLEEVE 1
52	AM-MPT-9D-BRE-T52	AXES SLEEVE 2
53	AM-MPT-9D-BRE-T53	AXES SLEEVE 1
54	AM-MPT-9D-BRE-T54	AXES SLEEVE 2
55	AM-MPT-9D-BRE-T55	COTTOR PIN
56	AM-MPT-9D-BRE-T56	AXES SLEEVE
57	AM-MPT-9D-BRE-T57	GEAR
58	AM-MPT-9D-BRE-T58	GEAR
59	AM-MPT-9D-BRE-T59	CYLINDER GEAR
60	AM-MPT-9D-BRE-T60	DIFFERERENTIAL GEAR

61	AM-MPT-9D-BRE-T61	DIFFERENTIAL FEATURE
62	AM-MPT-9D-BRE-T62	PIN
63	AM-MPT-9D-BRE-T63	BOLT
64	AM-MPT-9D-BRE-T64	CLUTCH TOOTH
65	AM-MPT-9D-BRE-T65	FLANGE OUTPUT AXES SHORT
66	AM-MPT-9D-BRE-T66	FLANGE OUTPUT AXES LONG
67	AM-MPT-9D-BRE-T67	SPRING
68	AM-MPT-9D-BRE-T68	AXIS SLEEVE
69	AM-MPT-9D-BRE-T69	OIL PLUG
70	AM-MPT-9D-BRE-T70	OIL SEAL
71	AM-MPT-9D-BRE-T71	OIL PLUG
72	AM-MPT-9D-BRE-T72	OIL PLUG
73	AM-MPT-9D-BRE-T73	OIL PLUG
74	AM-MPT-9D-BRE-T74	OIL SEAL
75	AM-MPT-9D-BRE-T75	OIL SEAL
76	AM-MPT-9D-BRE-T76	PLUG CAP
77	AM-MPT-9D-BRE-T77	CIRCLIP DIN
78	AM-MPT-9D-BRE-T78	CIRCLIP DIN
79	AM-MPT-9D-BRE-T79	CIRCLIP DIN
80	AM-MPT-9D-BRE-T80	CLUTCH



81	AM-MPT-9D-BRE-T81	DIN
82	AM-MPT-9D-BRE-T82	SPRING
83	AM-MPT-9D-BRE-T83	STEEL BALL
84	AM-MPT-9D-BRE-T84	HEXAGON NUT
85	AM-MPT-9D-BRE-T85	DIN
86	AM-MPT-9D-BRE-T86	DIN
87	AM-MPT-9D-BRE-T87	COMPOUND GASKET
88	AM-MPT-9D-BRE-T88	WALKING SHAFT LEVER
89	AM-MPT-9D-BRE-T89	DICTHING SHIFT LEVER
90	AM-MPT-9D-BRE-T90	ROTATION DIRECTION CHANGE FORK
91	AM-MPT-9D-BRE-T91	WALKING FORK
92	AM-MPT-9D-BRE-T92	SEAT, CABLE
93	AM-MPT-9D-BRE-T93	CHAIN LINK
94	AM-MPT-9D-BRE-T94	CHAIN LINK
95	AM-MPT-9D-BRE-T95	ISO 4762
96	AM-MPT-9D-BRE-T96	LOCATION PIN
97	AM-MPT-9D-BRE-T97	BS 3673
98	AM-MPT-9D-BRE-T98	DIFFERENTIAL FEATURE FORK
99	AM-MPT-9D-BRE-T99	DIFFERENTIAL FEATURE LEVER
100	AM-MPT-9D-BRE-T100	PIN

## INSPECTION & MAINTENANCE

For safety use, make sure the machine is cleaned every three-months. Before working, make sure to inspect the filter and the nozzle, and ensure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase in order to repair or get the substitute.

Before Packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.



Meaning of crossed - out wheeled dustbin:

Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

## Warranty Card

### CUSTOMER COPY



Date \_\_\_\_\_

Purchaser's Name & Address

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Product Name

AM-MPT-1100-9D-BRM INTERCULTIVATOR/ POWER  
WEEDER

Product Serial No.

\_\_\_\_\_

Invoice / DN No.

\_\_\_\_\_

Date of Delivery

\_\_\_\_\_

Dealer's Office Seal

\_\_\_\_\_

Dealer Sign \_\_\_\_\_

Customer Sign. \_\_\_\_\_

I/We accept the terms and conditions of Warranty as  
in the Warranty Card.

## Warranty Card

### DEALER'S COPY



Date \_\_\_\_\_

Purchaser's Name & Address

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Product Name

AM-MPT-1100-9D-BRM  
INTERCULTIVATOR/ POWER WEEDER

Product Serial No.

\_\_\_\_\_

Invoice / DN No.

\_\_\_\_\_

Date of Delivery

\_\_\_\_\_

Dealer's Office Seal

\_\_\_\_\_

Dealer Sign \_\_\_\_\_

Customer Sign. \_\_\_\_\_

I/We accept the terms and conditions of Warranty as  
in the Warranty Card.

## Warranty Card

### COMPANY COPY



Date \_\_\_\_\_

Purchaser's Name & Address

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Product Name

AM-MPT-1100-9D-BRM  
INTERCULTIVATOR/ POWER WEEDER

Product Serial No.

\_\_\_\_\_

Invoice / DN No.

\_\_\_\_\_

Date of Delivery

\_\_\_\_\_

Dealer's Office Seal

\_\_\_\_\_

Dealer Sign \_\_\_\_\_

Customer Sign. \_\_\_\_\_

I/We accept the terms and conditions of Warranty as  
in the Warranty Card.

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

**WARRANTY null & void if**

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

**WARRANTY null & void if**

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

**WARRANTY null & void if**

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction



ISO 9001-2015  
CERTIFIED COMPANY

## WARRANTY AND FREE SERVICE COUPON

Dealer's Office Seal

--	--

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged

agriculture horticulture sericulture plantations forestry garden health care



ISO 9001-2015  
CERTIFIED COMPANY

## WARRANTY AND FREE SERVICE COUPON

Dealer's Office Seal

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.

agriculture horticulture sericulture plantations forestry garden health care



ISO 9001-2015  
CERTIFIED COMPANY

## WARRANTY AND FREE SERVICE COUPON

Dealer's Office Seal

Max

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.

agriculture horticulture sericulture plantations forestry garden health care



# AGRI MART MEGA<sup>TM</sup>

FARM EQUIPMENT | GREEN CARE | SERVICES



# Do's & Don'ts

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments.
- Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
- Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment.
- Do not use the machine within range of persons unless they wear protective clothing.
- Do not operate the machine when fatigued or under the influence of alcohol or drugs.
- For more query kindly contact for our Service Center/Dealer/ franchise



Small and Timely Maintenance - Big Savings

# MULTIPLY PROFITS

## WITH OUR MULTI CROP, MULTI PURPOSE EQUIPMENTS



### RANGE OF PRODUCTS



BATTERY /  
MANUAL  
SPRAYER



PORTABLE  
POWER  
SPRAYER



KNAPSACK  
POWER  
SPRAYER



ROTARY  
TILLER



CHAFF  
CUTTER



TEA  
PRUNER



FOGGER



POWER  
WEEDER



CHAINSAW



ROTARY  
TILLER



LAWN  
MOWER



HIGH  
PRESSURE  
WASHER



EARTH  
AUGER



RIDE ON  
MOWER



### RANGE OF PRODUCTS



Advanced Technology

### RANGE OF PRODUCTS



BRUSH CUTTER  
- PUSH TYPE



BRUSH CUTTER -  
BACK PACK



BRUSH CUTTER -  
MULTI TOOL



POLE PRUNER



BLOWER  
BACK PACK



LAWN MOWER



BRUSH  
CUTTER



BACK PACK  
BC



TILLER



FOGGER



EARTH  
AUGER



Green Panther®

### RANGE OF PRODUCTS

## OUR RETAIL FORMATS



IMPORTERS & MARKETING BY:

**Ratnagiri Impex Pvt. Ltd.**

Annapurna House, # 1/1G,  
7th Cross New Guddadahalli,  
Mysore Road Bangalore - 560 026, India

Ph: 080-26985100/1/2

Email: info@ratnagiriimpex.com



**TOLL FREE :**  
**1800-425-3036**

[www.ratnagiriimpex.com](http://www.ratnagiriimpex.com)

[www.agrimart.in](http://www.agrimart.in)



**ratnagiri  
impex**  
BRINGING YOU THE FUTURE... NOW

An ISO 9001:2015 Certified Company

agriculture | horticulture | sericulture | plantations | forestry | garden | health care