

## INTERCULTIVATOR/POWER WEEDER AM-MPT-1100-9D/6D CHAMPION- 3 GEAR TRANSMISSION DIGRAM WITH PART LIST



DISCLAIMER : DUE TO CONTANT UPGRADATION FEATURES & SPECIFICATIONS ARE SELECT TO CHANGE WITHOUT NOTICE  
BEFORE OPERATING THIS MACHINE PLEASE READ THIS INSTRUCTIONS MANUAL CAREFULLY

# INTRODUCTION

Dear Sir/ Madam,

Thank you for choosing Agrimate product. You are the proud owner of high technology & durable machine. Trust that our Franchisee/Dealer installed the product & installed the product and explained you about the usage & service instructions. Please visit our autorised dealer for your future requirement of our other equipments, genuine spares, accessories and services. Service coupons are attached with this manual and you can avail free service to keep your machine fit always to use on demand.

About Ratnagiri,


We import and market of high quality of agriculture wide range of equipments which we are selling through our authorised franchisee or dealer network. We are in this field from past years service the farmer. community. For further details, Please visit our website [www.agrimart.in](http://www.agrimart.in).  
& Give a missed call to 7393 938 938.

## TECHNICAL PARAMETERS

MODEL	AM-MPT-1100-9D CHAMPION
STARTING	RECOIL/STARTING
DISPLACEMENT	406CC
FUEL TANK CAPACITY	5.5L
ENGINE OIL CAPACITY	1.1L
DRIVING MODEL	GEAR TYPE
GEAR	2 FORWARD + 1 REVERSE
TILLING DEPTH	≥100MM
TILLING DEPTH	850-1350MM
NW	125/135KG

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## ENGINE SUPPORT -A

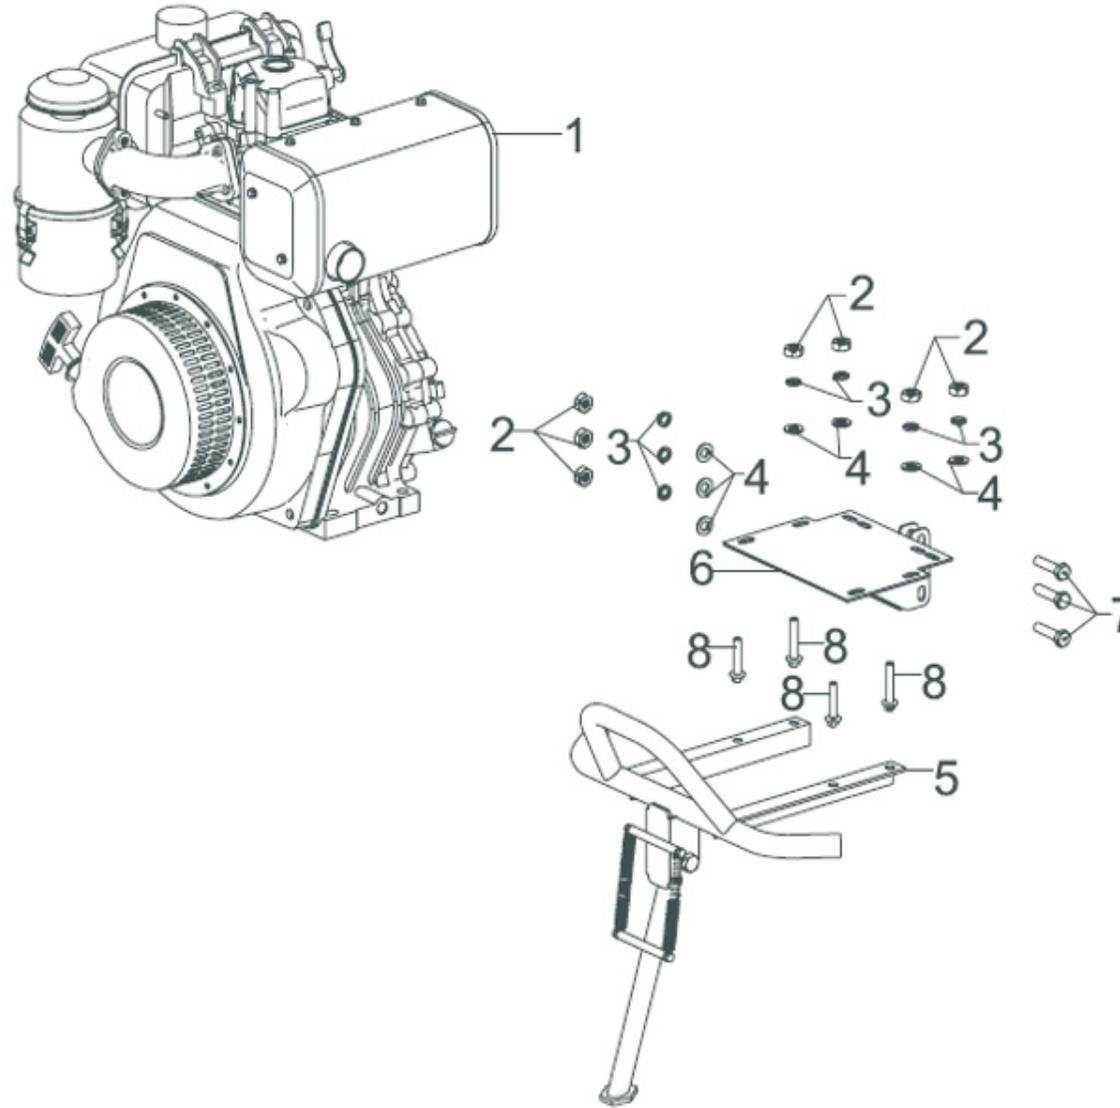


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-MPT-1100-9DC-TA01	ENGINE			
2	AM-MPT-1100-9DC-TA02	HEXAGON NUT			
3	AM-MPT-1100-9DC-TA03	STANDARD SPRING WASHER			
4	AM-MPT-1100-9DC-TA04	FLAT WASHER			
5	AM-MPT-1100-9DC-TA05	GUARD			
6	AM-MPT-1100-9DC-TA06	ENGINE CONNETING SEAT			
7	AM-MPT-1100-9DC-TA07	HEXAGONAL HEAD BOLT			
8	AM-MPT-1100-9DC-TA08	HEXAGONAL HEAD BOLT			
9					
10					
11					
12					
13					
14					
15					
16					

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## GEAR BOX - B

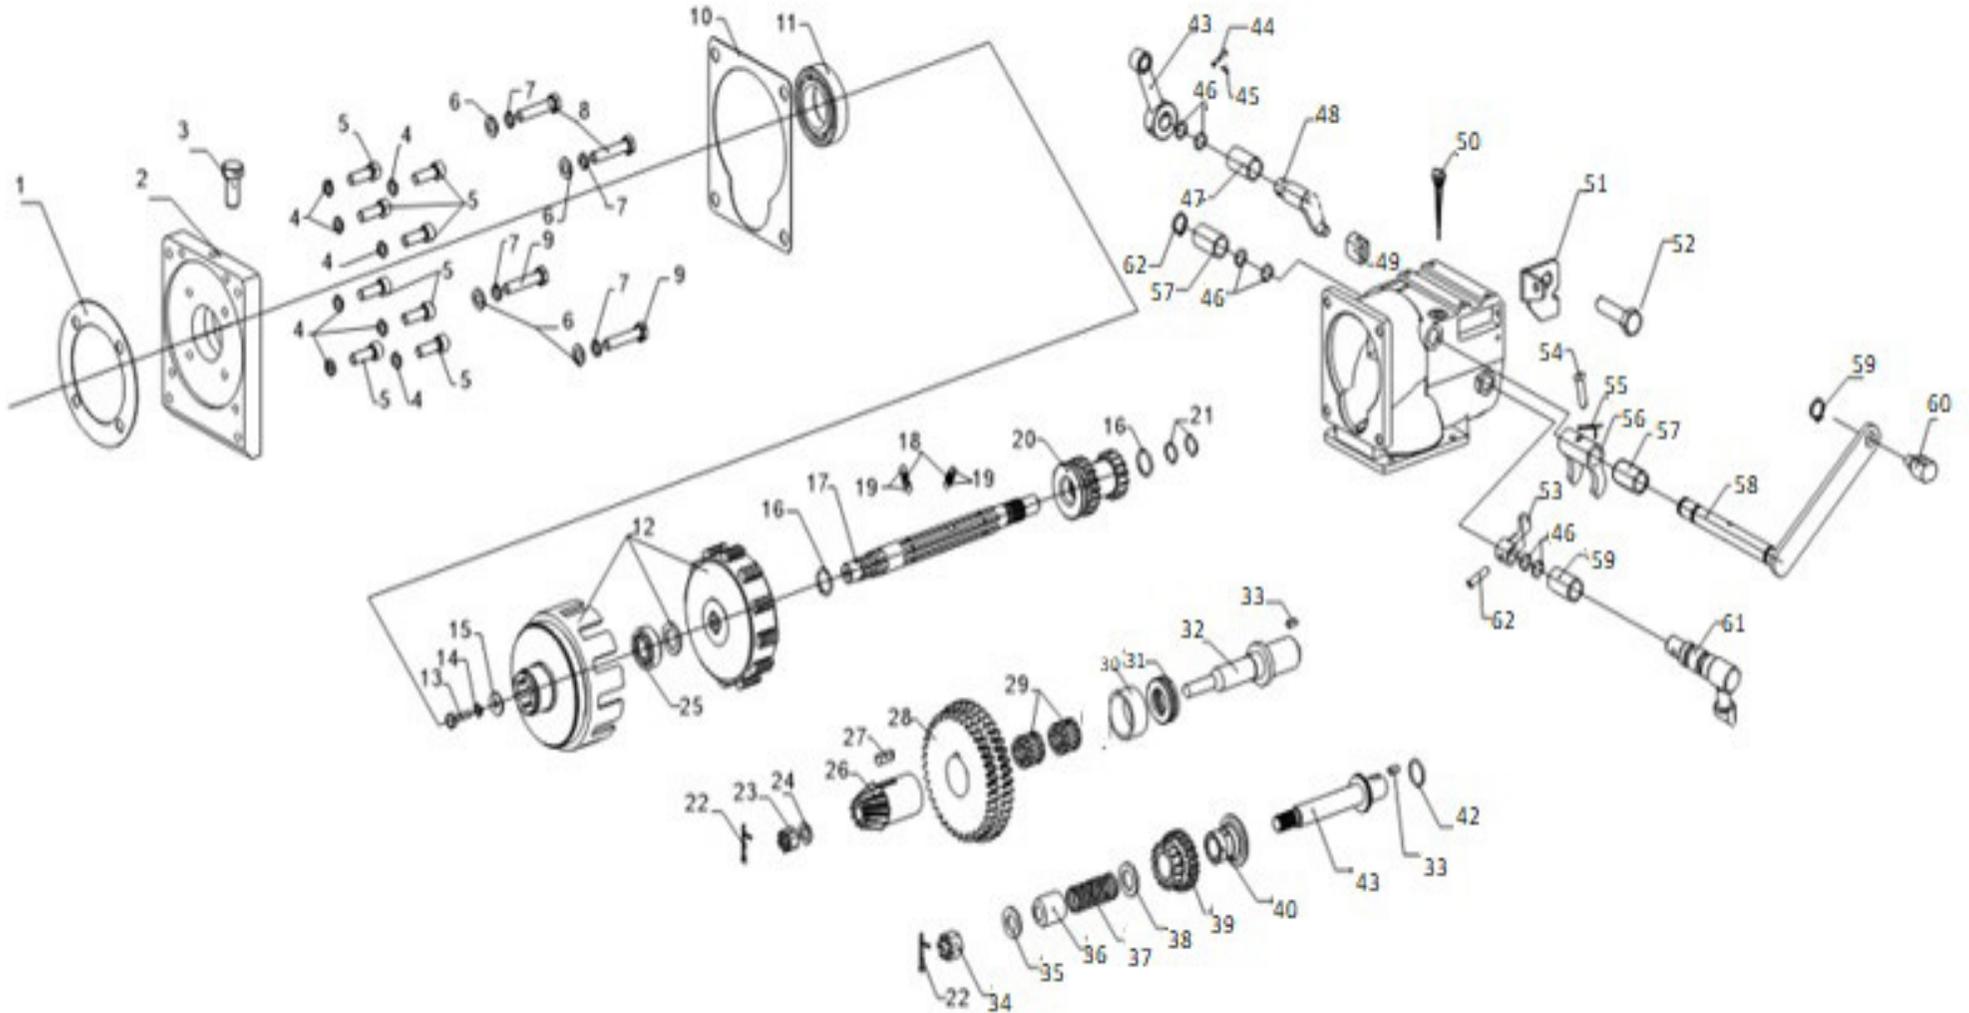

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION


SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-MPT-1100-9DC-TB01	ENGINE GASKET	17	AM-MPT-1100-9DC-TB17	MAIN AXLE
2	AM-MPT-1100-9DC-TB02	FLANGE	18	AM-MPT-1100-9DC-TB18	STOPPER SPRING
3	AM-MPT-1100-9DC-TB03	PRESSURE RELIEF BOLT	19	AM-MPT-1100-9DC-TB19	STEEL BALL
4	AM-MPT-1100-9DC-TB04	STANDARD SPRING WASHER	20	AM-MPT-1100-9DC-TB20	D GEAR
5	AM-MPT-1100-9DC-TB05	HEXAGON SOCKET HEAD CAP SCREW	21	AM-MPT-1100-9DC-TB21	O-TYPE RUBBER SEAL RING
6	AM-MPT-1100-9DC-TB06	FLAT WASHER	22	AM-MPT-1100-9DC-TB22	COTTER PIN
7	AM-MPT-1100-9DC-TB07	STANDARD SPRING WASHER	23	AM-MPT-1100-9DC-TB23	HEXAGON NUTS
8	AM-MPT-1100-9DC-TB08	HEXAGONAL HEAD BOLT - FULL THREAD	24	AM-MPT-1100-9DC-TB24	FLAT WASHER
9	AM-MPT-1100-9DC-TB09	HEXAGONAL HEAD BOLT	25	AM-MPT-1100-9DC-TB25	DEEP GROOVE BALL BEARING
10	AM-MPT-1100-9DC-TB10	FLANGE SEAL GASKET	26	AM-MPT-1100-9DC-TB26	COUNTERSHAFT BEVEL GEAR
11	AM-MPT-1100-9DC-TB11	DEEP GROOVE BALL BEARING	27	AM-MPT-1100-9DC-TB27	GENERAL FLAT KEY
12	AM-MPT-1100-9DC-TB12	CLUTCH	28	AM-MPT-1100-9DC-TB28	D GEAR
13	AM-MPT-1100-9DC-TB13	HEXAGONAL HEAD BOLT	29	AM-MPT-1100-9DC-TB29	NEEDLE BEARING
14	AM-MPT-1100-9DC-TB14	STANDARD SPRING WASHER	30	AM-MPT-1100-9DC-TB30	BUSH
15	AM-MPT-1100-9DC-TB15	FLAT WASHER	31	AM-MPT-1100-9DC-TB31	BALL BEARING
16	AM-MPT-1100-9DC-TB16	STILL RING	32	AM-MPT-1100-9DC-TB32	COUNTERSHAFT

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
33	AM-MPT-1100-9DC-TB33	PIN	49	AM-MPT-1100-9DC-TB49	SHIFT FORK
34	AM-MPT-1100-9DC-TB34	HEXAGON SLOTTED NUT	50	AM-MPT-1100-9DC-TB50	OIL DIPSTICK SUBASSEMBLY
35	AM-MPT-1100-9DC-TB35	FLAT WASHER	51	AM-MPT-1100-9DC-TB51	INHAUL CABLE BASE
36	AM-MPT-1100-9DC-TB36	STANDARD SPRING WASHER	52	AM-MPT-1100-9DC-TB52	BOLT
37	AM-MPT-1100-9DC-TB37	REVERSE GEAR SPRING	53	AM-MPT-1100-9DC-TB53	SHIFTS FORK
38	AM-MPT-1100-9DC-TB38	Washer	54	AM-MPT-1100-9DC-TB54	PIN SHAFT
39	AM-MPT-1100-9DC-TB39	GEAR	55	AM-MPT-1100-9DC-TB55	COTTER PIN
40	AM-MPT-1100-9DC-TB40	REVERSE GEAR PUSH PLATE	56	AM-MPT-1100-9DC-TB56	CLUTCH FORK
41	AM-MPT-1100-9DC-TB41	REVERSE SHAFT	57	AM-MPT-1100-9DC-TB57	BUSH
42	AM-MPT-1100-9DC-TB42	O-TYPE RUBBER SEAL RING	58	AM-MPT-1100-9DC-TB58	FORK SUBASSEMBLY, SHIFTS
43	AM-MPT-1100-9DC-TB43	SHIFT ARM	59	AM-MPT-1100-9DC-TB59	CIRCLIP FOR SHAFT - TYPE A
44	AM-MPT-1100-9DC-TB44	PIN SHAFT	60	AM-MPT-1100-9DC-TB60	INHAUL CABLE BASE
45	AM-MPT-1100-9DC-TB45	COTTER PIN	61	AM-MPT-1100-9DC-TB61	REVERSE FORK SUBASSY
46	AM-MPT-1100-9DC-TB46	O-TYPE RUBBER SEAL RING	62	AM-MPT-1100-9DC-TB62	SLOTTED FLAT END SET SCREWS
47	AM-MPT-1100-9DC-TB47	BUSH			
48	AM-MPT-1100-9DC-TB48	FORK SUBASSEMBLY, SHIFTS			

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## REAR UPPER GEAR BOX - C

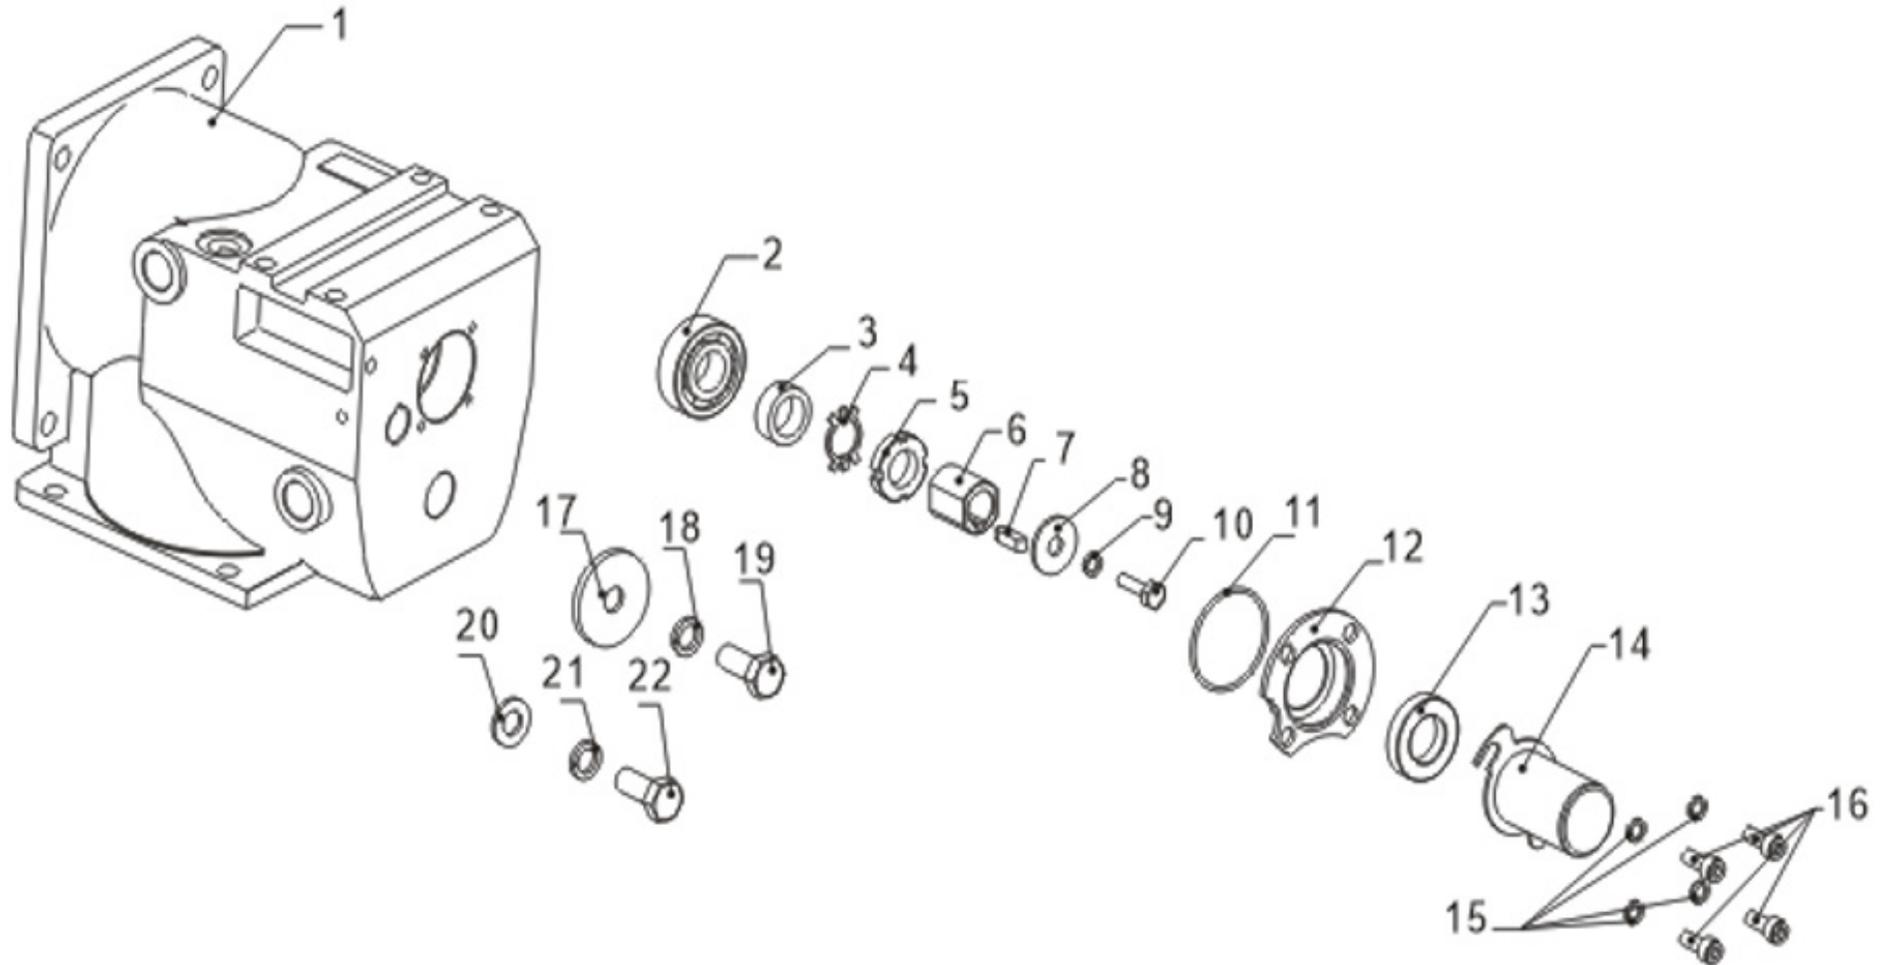


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-MPT-1100-9DC-TC01	TRANSMISSION BOX BODY	17	AM-MPT-1100-9DC-TC17	FLAT WASHER
2	AM-MPT-1100-9DC-TC02	DEEP GROOVE BALL BEARING	18	AM-MPT-1100-9DC-TC18	FLAT WASHER
3	AM-MPT-1100-9DC-TC03	BUSH	19	AM-MPT-1100-9DC-TC19	HEXAGONAL HEAD BOLT
4	AM-MPT-1100-9DC-TC04	LOCK WASHER FOR ROUND NUTS	20	AM-MPT-1100-9DC-TC20	FLAT WASHER
5	AM-MPT-1100-9DC-TC05	SMALL ROUND NUT	21	AM-MPT-1100-9DC-TC21	STANDARD SPRING WASHER
6	AM-MPT-1100-9DC-TC06	FLAT KEY SET	22	AM-MPT-1100-9DC-TC22	HEXAGONAL HEAD BOLT
7	AM-MPT-1100-9DC-TC07	FLAT KEY			
8	AM-MPT-1100-9DC-TC08	EXTRA LARGE GASKET - GRADE C			
9	AM-MPT-1100-9DC-TC09	STANDARD SPRING WASHER			
10	AM-MPT-1100-9DC-TC10	HEXAGONAL HEAD BOLT			
11	AM-MPT-1100-9DC-TC11	O-TYPE RUBBER SEAL RING			
12	AM-MPT-1100-9DC-TC12	MAIN SHAFT GLAND			
13	AM-MPT-1100-9DC-TC13	OIL SEAL			
14	AM-MPT-1100-9DC-TC14	MAIN SHAFT SAFETY GUARD			
15	AM-MPT-1100-9DC-TC15	FLAT WASHER			
16	AM-MPT-1100-9DC-TC16	HEXAGONAL HEAD BOLT			

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## LOWER GEAR BOX- D

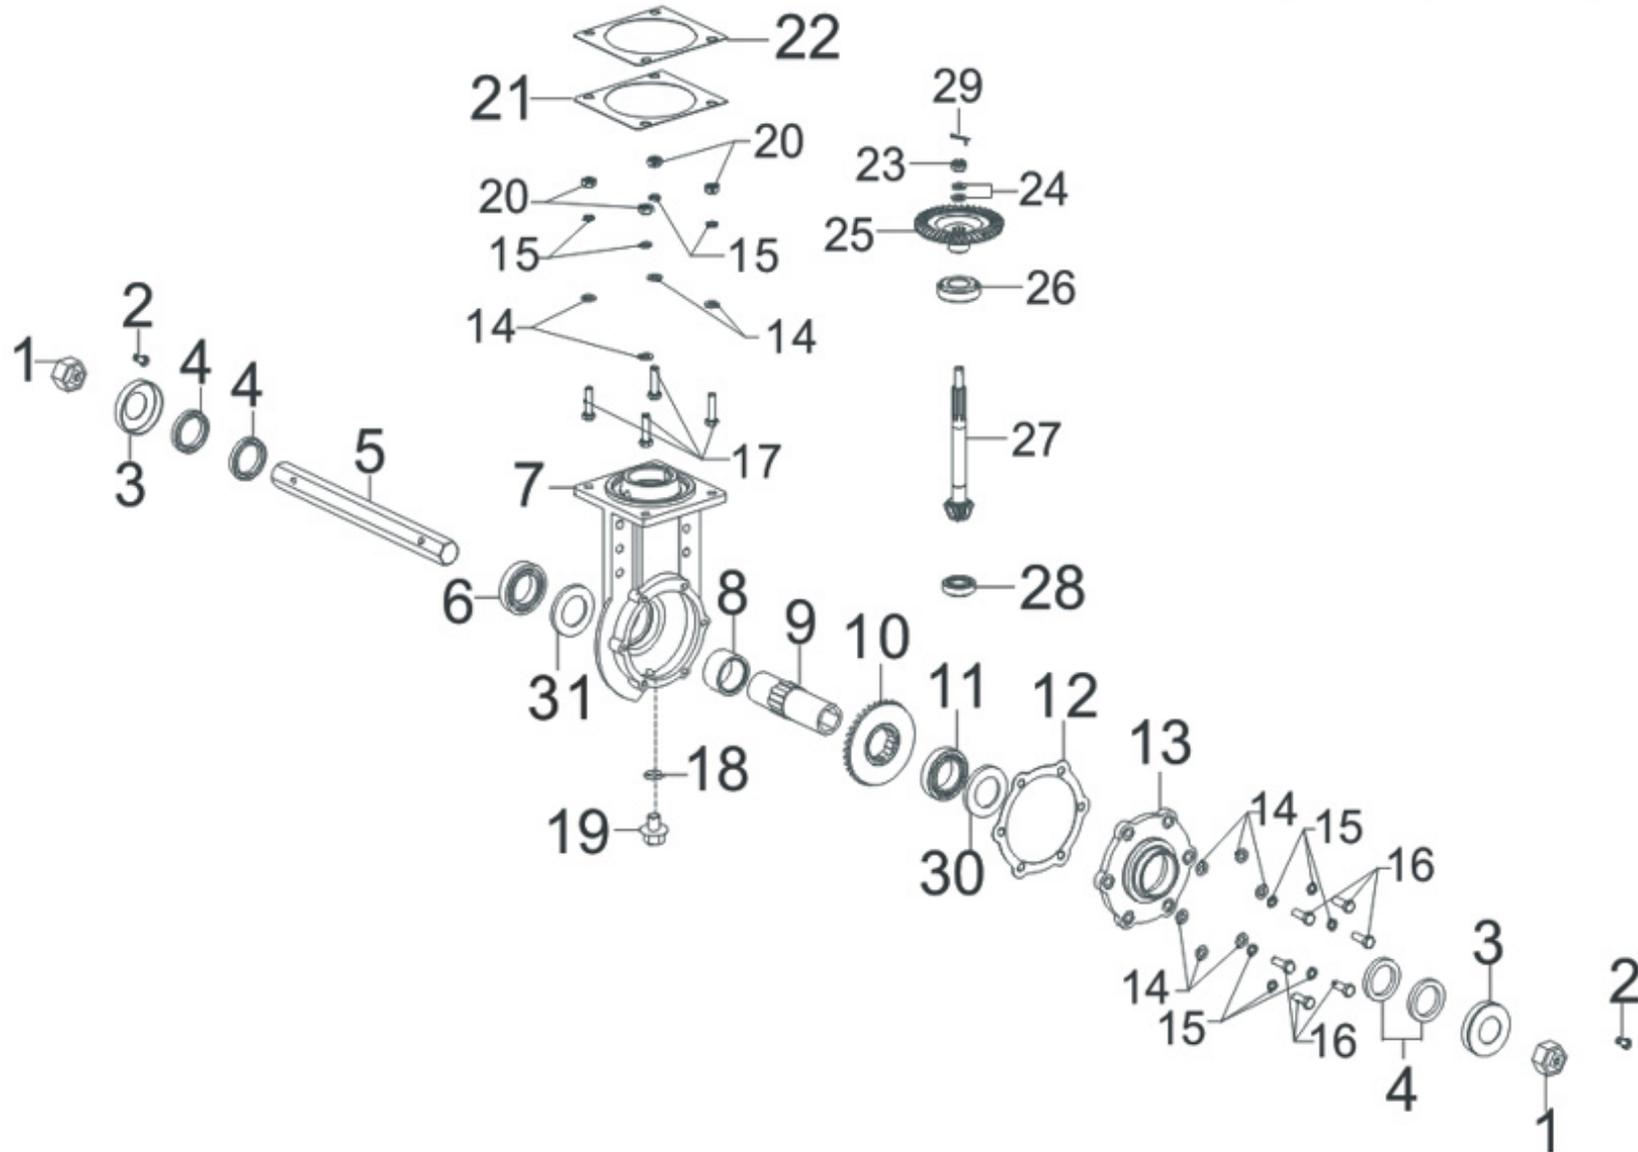


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-MPT-1100-9DC-TD01	HEXAGONAL FIXING SLEEVE	17	AM-MPT-1100-9DC-TD17	HEXAGONAL HEAD BOLT
2	AM-MPT-1100-9DC-TD02	HEXAGONAL HEAD BOLT	18	AM-MPT-1100-9DC-TD18	O-TYPE RUBBER SEAL RING
3	AM-MPT-1100-9DC-TD03	OUTPUT SHAFT DUST-PROOF COVER	19	AM-MPT-1100-9DC-TD19	DRAIN PLUG BOLT
4	AM-MPT-1100-9DC-TD04	OIL SEAL	20	AM-MPT-1100-9DC-TD20	HEXAGON NUT
5	AM-MPT-1100-9DC-TD05	OUTPUT SHAFT	21	AM-MPT-1100-9DC-TD21	MOULD ASSEMBLING SEAL GASKET
6	AM-MPT-1100-9DC-TD06	DEEP GROOVE BALL BEARING	22	AM-MPT-1100-9DC-TD22	MOULD ASSEMBLING SEAL GASKET
7	AM-MPT-1100-9DC-TD07	TRANSMISSION BOX BODY	23	AM-MPT-1100-9DC-TD23	TYPE 1 HEXAGONAL SLOTTED NUT
8	AM-MPT-1100-9DC-TD08	OUTPUT SHAFT SPACER BUSH	24	AM-MPT-1100-9DC-TD24	FLAT WASHER
9	AM-MPT-1100-9DC-TD09	HEXAGONAL OUTPUT SHAFT SLEEVE	25	AM-MPT-1100-9DC-TD25	DRIVEN BEVEL GEAR
10	AM-MPT-1100-9DC-TD10	TRANSPORTATION BEVEL GEAR	26	AM-MPT-1100-9DC-TD26	TAPERED ROLLER BEARINGS
11	AM-MPT-1100-9DC-TD11	TAPERED ROLLER BEARINGS	27	AM-MPT-1100-9DC-TD27	TRANSPORTATION BEVEL GEAR SHAFT
12	AM-MPT-1100-9DC-TD12	END COVER SEALING GASKET	28	AM-MPT-1100-9DC-TD28	TAPERED ROLLER BEARINGS
13	AM-MPT-1100-9DC-TD13	TRANSMISSION BOX COVER	29	AM-MPT-1100-9DC-TD29	COTTER PIN
14	AM-MPT-1100-9DC-TD14	FLAT WASHER	30	AM-MPT-1100-9DC-TD30	FLAT WASHER
15	AM-MPT-1100-9DC-TD15	STANDARD SPRING WASHER	31	AM-MPT-1100-9DC-TD31	FLAT WASHER
16	AM-MPT-1100-9DC-TD16	HEXAGONAL HEAD BOLT			

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## HANDLE - E

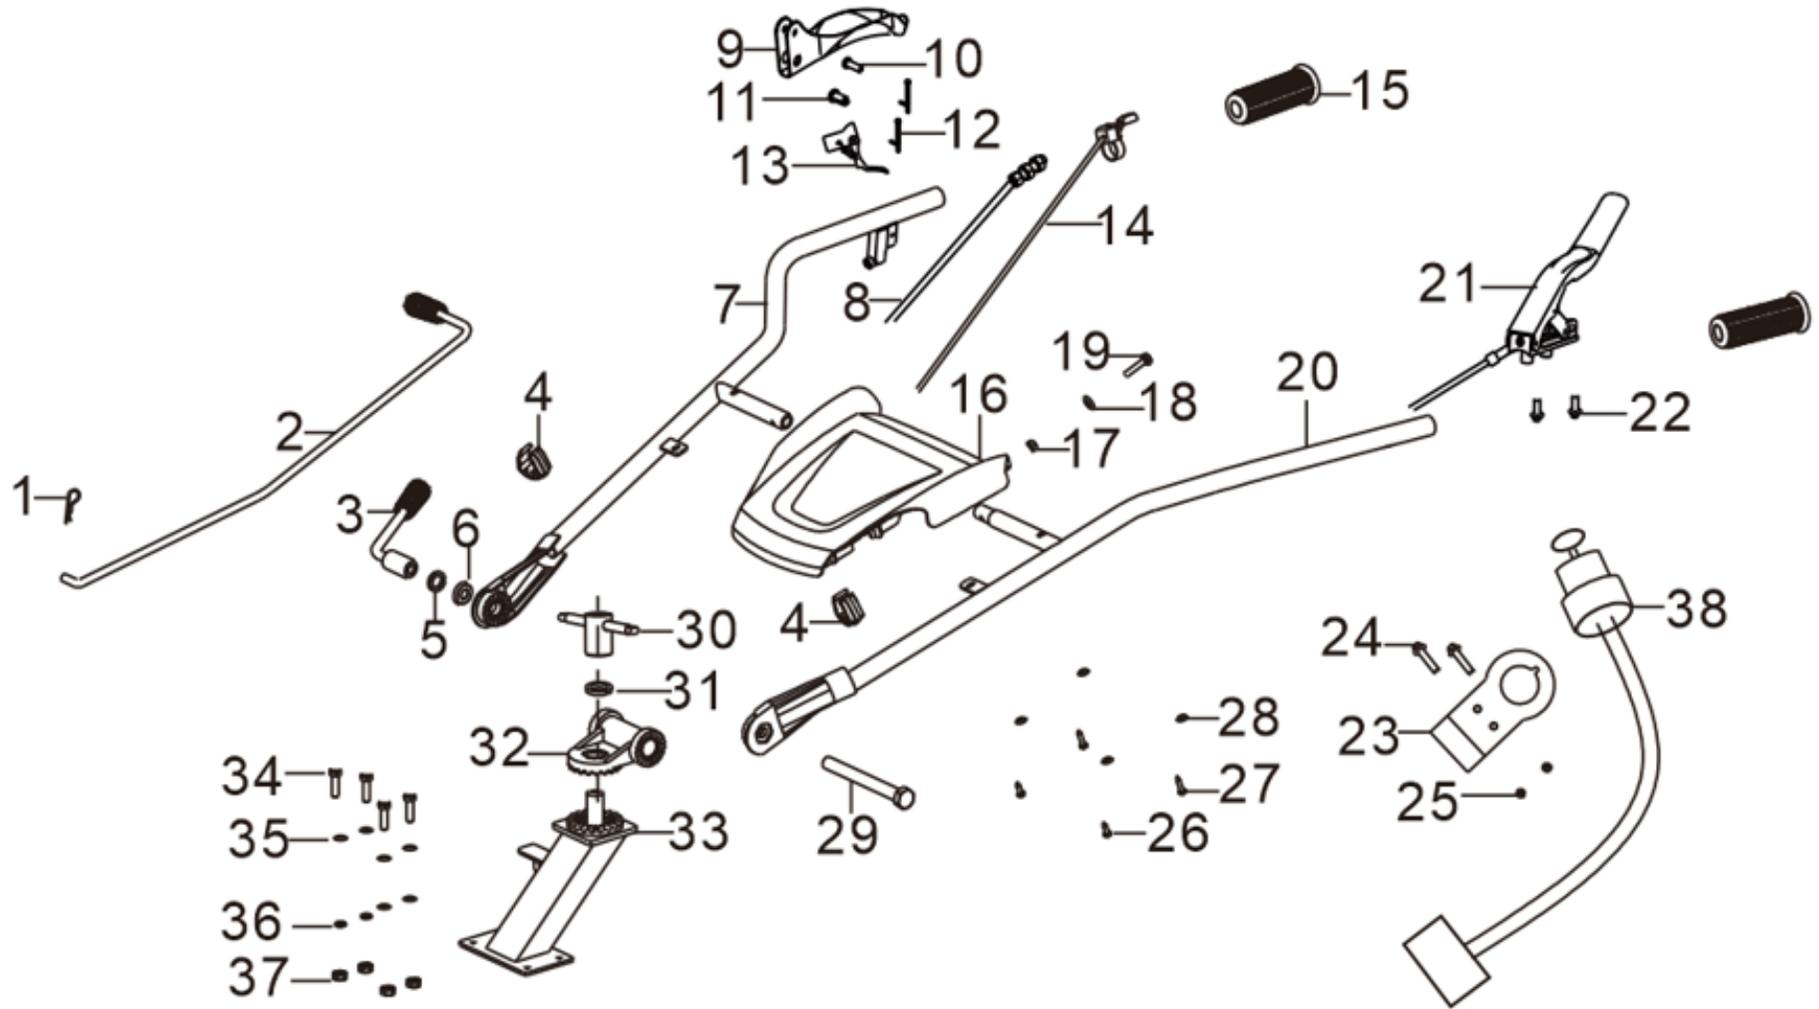

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION


SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-MPT-1100-9DC-TE01	CLIP	17	AM-MPT-1100-9DC-TE17	NON-METALLIC HEX LOCK NUT
2	AM-MPT-1100-9DC-TE02	GEAR LEVER	18	AM-MPT-1100-9DC-TE18	FLAT WASHER
3	AM-MPT-1100-9DC-TE03	LOCK HANDLE	19	AM-MPT-1100-9DC-TE19	HEXAGONAL HEAD BOLT
4	AM-MPT-1100-9DC-TE04	WIRE CLIP	20	AM-MPT-1100-9DC-TE20	HANDLE TUBE ASSY
5	AM-MPT-1100-9DC-TE05	FLAT WASHER	21	AM-MPT-1100-9DC-TE21	FORWARD CLUTCH HANDLE ASSEMBLY
6	AM-MPT-1100-9DC-TE06	FLAT WASHER	22	AM-MPT-1100-9DC-TE22	BOLT
7	AM-MPT-1100-9DC-TE07	HANDLE TUBE ASSY	23	AM-MPT-1100-9DC-TE23	FIXING PLATE
8	AM-MPT-1100-9DC-TE08	REVERSE GEAR CABLE	24	AM-MPT-1100-9DC-TE24	BOLT
9	AM-MPT-1100-9DC-TE09	REVERSE CLUTCH HANDLE	25	AM-MPT-1100-9DC-TE25	NON-METALLIC HEX LOCK NUT
10	AM-MPT-1100-9DC-TE10	PIN SHAFT	26	AM-MPT-1100-9DC-TE26	CROSS-RECESSED PAN HEAD SELF-TAPPING SCREW
11	AM-MPT-1100-9DC-TE11	PIN SHAFT	27	AM-MPT-1100-9DC-TE27	CROSS-RECESSED PAN HEAD SELF-TAPPING SCREW
12	AM-MPT-1100-9DC-TE12	COTTER PIN	28	AM-MPT-1100-9DC-TE28	FLAT WASHER
13	AM-MPT-1100-9DC-TE13	SEAT SUBASSEMBLY	29	AM-MPT-1100-9DC-TE29	HEXAGONAL HEAD BOLT
14	AM-MPT-1100-9DC-TE14	THROTILE COCK ASSEMBLY	30	AM-MPT-1100-9DC-TE30	LOCK HANDLE
15	AM-MPT-1100-9DC-TE15	HANDLE RUBBER SLEEVE	31	AM-MPT-1100-9DC-TE31	FLAT WASHER
16	AM-MPT-1100-9DC-TE16	PANEL	32	AM-MPT-1100-9DC-TE32	TOOTH DISK PLATE





# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## FENDER - G

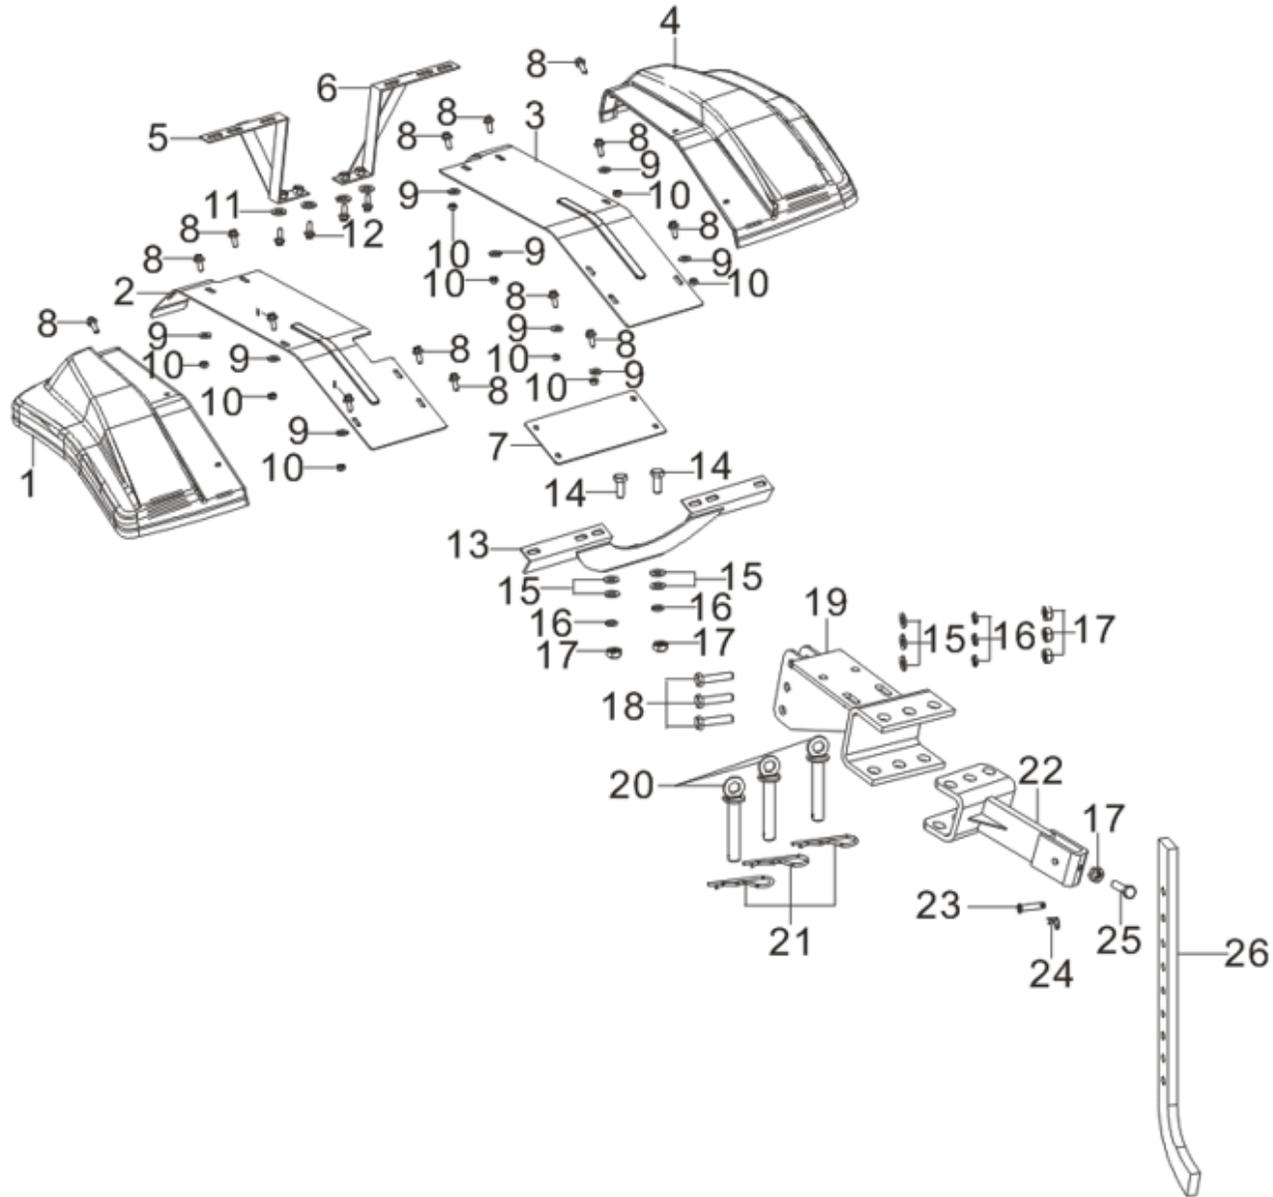


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-MPT-1100-9DC-TG01	FENDER, MINI-TILLER - LEFT	17	AM-MPT-1100-9DC-TG17	HEXAGON NUT
2	AM-MPT-1100-9DC-TG02	FENDER, MINI-TILLER - LEFT	18	AM-MPT-1100-9DC-TG18	HEXAGONAL HEAD BOLT
3	AM-MPT-1100-9DC-TG03	FENDER, MINI-TILLER- RIGHT	19	AM-MPT-1100-9DC-TG19	TRAILING BODY
4	AM-MPT-1100-9DC-TG04	FENDER, MINI-TILLER- RIGHT	20	AM-MPT-1100-9DC-TG20	PIN SHAFT
5	AM-MPT-1100-9DC-TG05	FRONT FENDER SUPPORT	21	AM-MPT-1100-9DC-TG21	SPLIT PIN
6	AM-MPT-1100-9DC-TG06	FRONT FENDER SUPPORT	22	AM-MPT-1100-9DC-TG22	CONNECTION FRAME
7	AM-MPT-1100-9DC-TG07	MINI TILLER FENDER	23	AM-MPT-1100-9DC-TG23	PIN SHAFT
8	AM-MPT-1100-9DC-TG08	BOLT	24	AM-MPT-1100-9DC-TG24	CLIP
9	AM-MPT-1100-9DC-TG09	LARGE WASHER - GRADE A	25	AM-MPT-1100-9DC-TG25	HEXAGONAL HEAD BOLT
10	AM-MPT-1100-9DC-TG10	NON-METALLIC HEX LOCK NUT	26	AM-MPT-1100-9DC-TG26	DAMPING ARM
11	AM-MPT-1100-9DC-TG11	FLAT WASHER			
12	AM-MPT-1100-9DC-TG12	BOLT			
13	AM-MPT-1100-9DC-TG13	REAR FENDER SUPPORT			
14	AM-MPT-1100-9DC-TG14	HEXAGONAL HEAD BOLT			
15	AM-MPT-1100-9DC-TG15	FLAT WASHER			
16	AM-MPT-1100-9DC-TG16	STANDARD SPRING WASHER			

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION


## LEFT BLADES- H

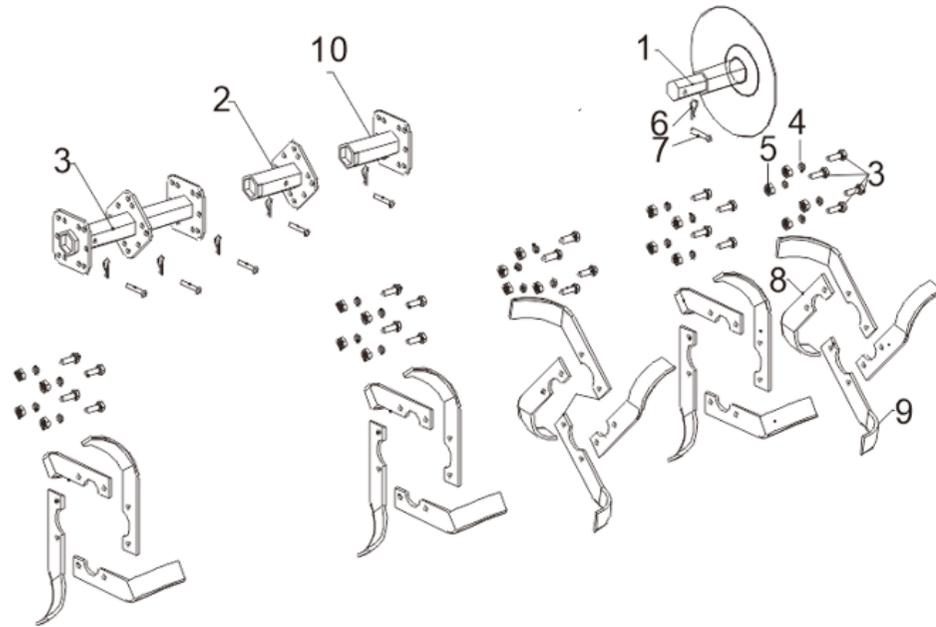

SL NO	PART NO	DESCRIPTION
1	AM-MPT-1100-9DC-TH01	TRIMMING WHEEL
2	AM-MPT-1100-9DC-TH02	CYLINDER
3	AM-MPT-1100-9DC-TH03	CYLINDER
4	AM-MPT-1100-9DC-TH04	FLAT WASHER
5	AM-MPT-1100-9DC-TH05	HEXAGON NUT
6	AM-MPT-1100-9DC-TH06	CLIP
7	AM-MPT-1100-9DC-TH07	PIN SHAFT
8	AM-MPT-1100-9DC-TH08	ROTARY BLADE
9	AM-MPT-1100-9DC-TH09	ROTARY BLADE
10	AM-MPT-1100-9DC-TH10	CYLINDER

# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION


## RIGHT BLADES- J

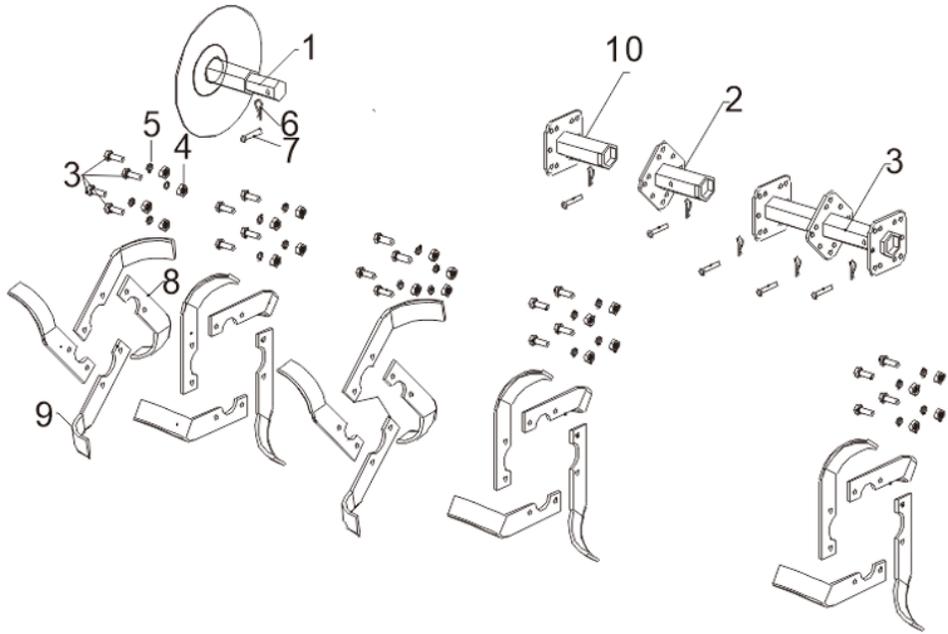


SL NO	PART NO	DESCRIPTION
1	AM-MPT-1100-9DR-TJ01	Trimming Wheel
2	AM-MPT-1100-9DR-TJ02	Cylinder
3	AM-MPT-1100-9DR-TJ03	Cylinder
4	AM-MPT-1100-9DR-TJ04	Washer Flat
5	AM-MPT-1100-9DR-TJ05	Hexagon Nut
6	AM-MPT-1100-9DR-TJ06	Clip
7	AM-MPT-1100-9DR-TJ07	Pin Shaft
8	AM-MPT-1100-9DR-TJ08	Rotary Blade
9	AM-MPT-1100-9DR-TJ09	Rotary Blade
10	AM-MPT-1100-9DR-TJ10	Cylinder
11		
12		


# TRANSMISSION DIAGRAM & PART LIST OF AM-MPT-9D/6D CHAMPION

## LEFT & RIGHT WHEEL ASSY -K

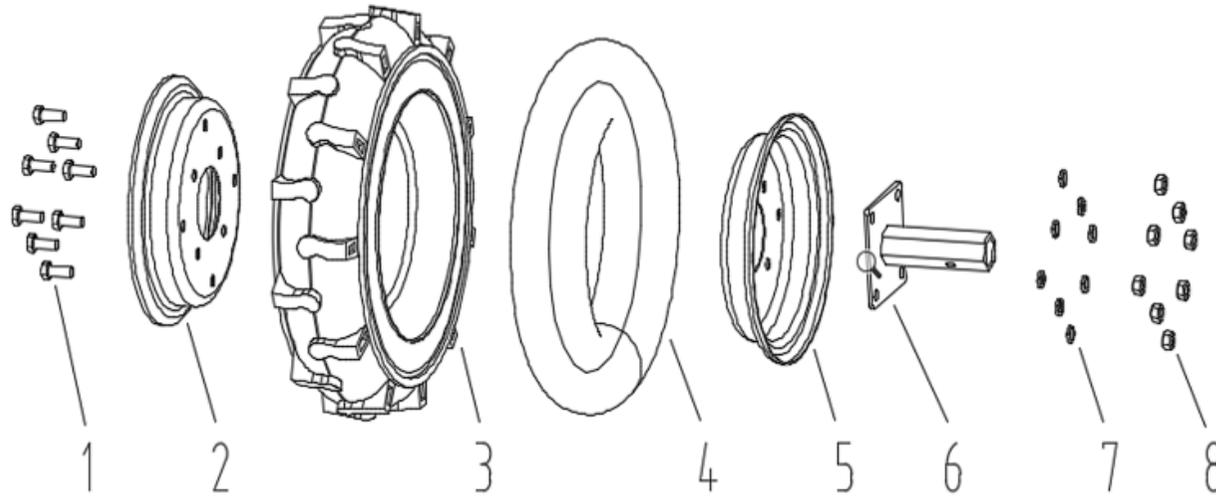


SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-MPT-1100-9DR-TK01	HEXAGONAL HEAD BOLT	6	AM-MPT-1100-9DR-TK06	REAR WHEEL SHAFT
2	AM-MPT-1100-9DR-TK02	WHEEL HUB	7	AM-MPT-1100-9DR-TK07	FLAT WASHER
3	AM-MPT-1100-9DR-TK03	OUTER TUBE	8	AM-MPT-1100-9DR-TK08	HEXAGON NUT
4	AM-MPT-1100-9DR-TK04	INNER TUBE			
5	AM-MPT-1100-9DR-TK05	WHEEL HUB			

 

 

# WARRANTY CARD
 
## CUSTOMER COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

## DEALERS COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

## COMPANY COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction



**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS



- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

# DOS & DONTs

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
9. For more query kindly contact for our Service Center/Dealer/ franchise

# Agrimate Army For Pest Control

ANY WHERE - ANY TIME - ANY CROP

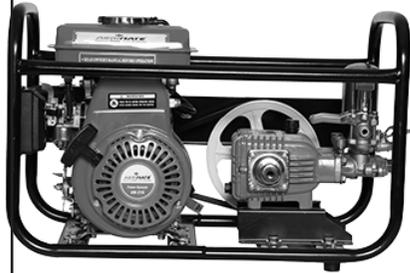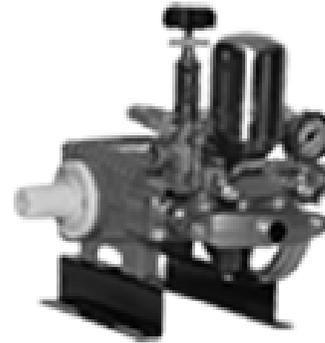

Marketed by:  
**ratnagiri  
impex**  
BRINGING YOU THE FUTURE... NOW

**RATNAGIRI IMPEX PVT., LTD.,**

Annapurna House, #1 / 1G, 7th Cross, New  
Guddadahalli

Mysore Road, Bangalore - 560 026

Missed Call : 7393 938 938

Email: [ask@agrimart.in](mailto:ask@agrimart.in)