


INTERCULTIVATOR / POWER WEEDER

AM-RT-212



AN ISO 9001 : 2015 CERTIFIED COMPANY

DIAGRAM & PART LIST OF AM-RT-212 INTERCULTIVATOR / POWER WEEDER

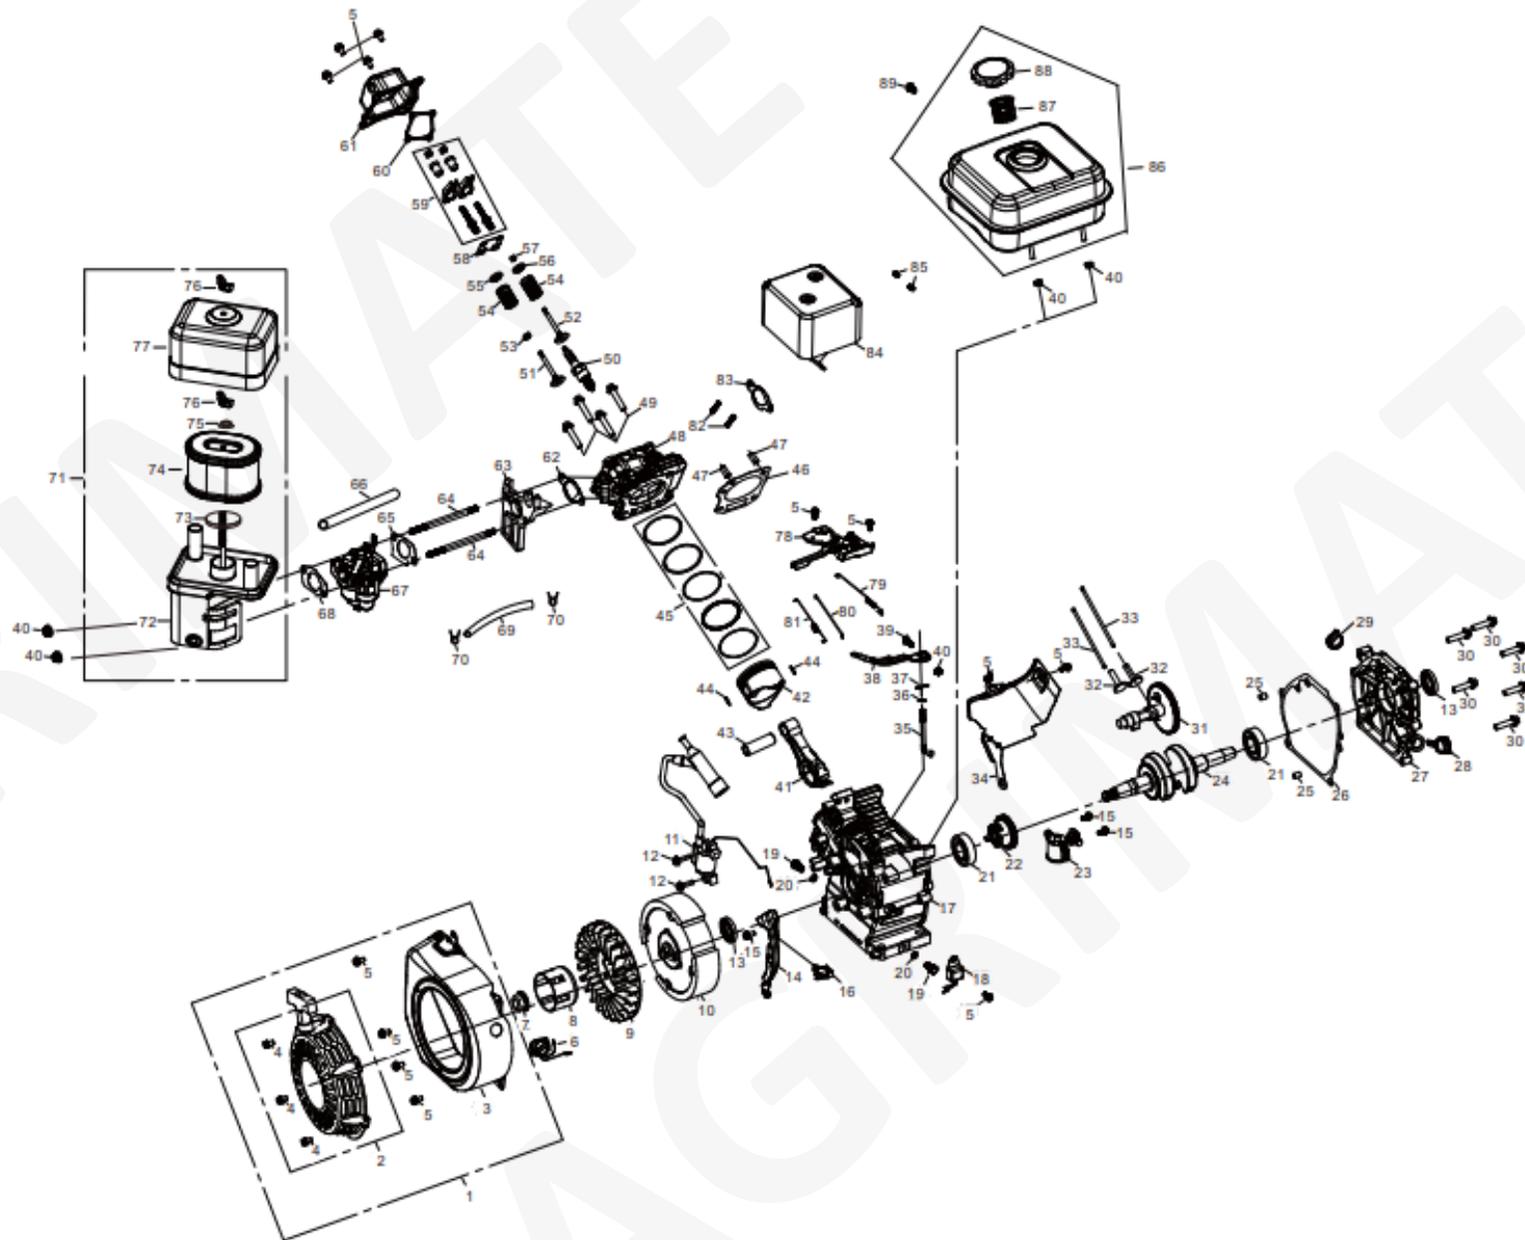

SPARE PARTS LIST OF AM-RT-212 INTERCULTIVATOR / POWER WEEDER

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
1	AM-212FP-EA01	Kick Starter Assy	17	AM-212FP-EA17	Crankcase
2	AM-212FP-EA02	Starter Pull Plate	18	AM-212FP-EA18	Oil Alert Unit
3	AM-212FP-EA03	Starting Hood	19	AM-212FP-EA19	Drain Bolt
4	AM-212FP-EA04	Bolt	20	AM-212FP-EA20	Double armed bolt
5	AM-212FP-EA05	Bolt	21	AM-212FP-EA21	Radial Ball Bearing
6	AM-212FP-EA06	Engine Stop Switch	22	AM-212FP-EA22	Governor Gear
7	AM-212FP-EA07	Nut	23	AM-212FP-EA23	oil Sensor
8	AM-212FP-EA08	Starter Pulley	24	AM-212FP-EA24	Crankshaft
9	AM-212FP-EA09	Fly Wheel Fan	25	AM-212FP-EA25	Set pin
10	AM-212FP-EA10	Fly Wheel	26	AM-212FP-EA26	Crankcase Gasket
11	AM-212FP-EA11	Ignition Coil Assy	27	AM-212FP-EA27	Crankcase cover Assy
12	AM-212FP-EA12	Double armed bolt	28	AM-212FP-EA28	Dipstick
13	AM-212FP-EA13	Oil Seal	29	AM-212FP-EA29	Oil Plug
14	AM-212FP-EA14	Side Plate Crankcase	30	AM-212FP-EA30	Bolt
15	AM-212FP-EA15	Bolt	31	AM-212FP-EA31	Camshaft Assy
16	AM-212FP-EA16	Plastic Clip	32	AM-212FP-EA32	Valve Lifter

SPARE PARTS LIST OF AM-RT-212 INTERCULTIVATOR / POWER WEEDER

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
33	AM-212FP-EA33	Push Rod	49	AM-212FP-EA49	Bolt
34	AM-212FP-EA34	Lead Wind Cover	50	AM-212FP-EA50	Spark Plug
35	AM-212FP-EA35	Swinging Rod	51	AM-212FP-EA51	Intake Valve
36	AM-212FP-EA36	Washer	52	AM-212FP-EA52	Exhaust Valve
37	AM-212FP-EA37	Split clin	53	AM-212FP-EA53	Inlet valve Oil seal
38	AM-212FP-EA38	Governor Arm	54	AM-212FP-EA54	Vakve spring
39	AM-212FP-EA39	Square head bolt	55	AM-212FP-EA55	Intake valve spring seat
40	AM-212FP-EA40	Nut	56	AM-212FP-EA56	exhaust valve spring seat
41	AM-212FP-EA41	Connecting Rod Assy	57	AM-212FP-EA57	Exhaust valve cap
42	AM-212FP-EA42	Piston	58	AM-212FP-EA58	Push Rod Guide plate
43	AM-212FP-EA43	Piston pin	59	AM-212FP-EA59	Rocker Arm Assy
44	AM-212FP-EA44	Piston Clip	60	AM-212FP-EA60	Gakst cylinder head gasket
45	AM-212FP-EA45	Piston Ring Assy	61	AM-212FP-EA61	Cylinder Head Cover
46	AM-212FP-EA46	Gasket, Cylinder Head	62	AM-212FP-EA62	Inlet Gasket
47	AM-212FP-EA47	Set pin	63	AM-212FP-EA63	Carburetor insulation
48	AM-212FP-EA48	Cylinder Head Comp.	64	AM-212FP-EA64	Double Arm Bolt

SPARE PARTS LIST OF AM-RT-212 INTERCULTIVATOR / POWER WEEDER

SL NO.	PART NO.	DESCRIPTION	SL NO.	PART NO.	DESCRIPTION
65	AM-212FP-EA65	Carburetor Gasket	81	AM-212FP-EA81	Throttle return Spring
66	AM-212FP-EA66	Airclean Pipe	82	AM-212FP-EA82	Double arm bolt
67	AM-212FP-EA67	Carburetor	83	AM-212FP-EA83	Gasket muffler pipe
68	AM-212FP-EA68	Gasket Air cleaner	84	AM-212FP-EA84	Muffler
69	AM-212FP-EA69	Fuel Pipe	85	AM-212FP-EA85	Nut
70	AM-212FP-EA70	Pipe Clip	86	AM-212FP-EA86	Fuel Tank
71	AM-212FP-EA71	Air cleaner	87	AM-212FP-EA87	Filter Screen of oil tank
72	AM-212FP-EA72	NA	88	AM-212FP-EA88	Fuel Tank cap
73	AM-212FP-EA73	Air filter Connection seat gasket	89	AM-212FP-EA89	Bolt
74	AM-212FP-EA74	Air filter element			
75	AM-212FP-EA75	NA			
76	AM-212FP-EA76	Butterfly nut			
77	AM-212FP-EA77	Upper cover of air filter			
78	AM-212FP-EA78	Governor Stay			
79	AM-212FP-EA79	Pulling Rod			
80	AM-212FP-EA80	Governor Spring			

INSPECTION & MAINTAINANCE

For safety use, make sure the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzle and ensure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.

Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

WARRANTY CARD

CUSTOMER COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	<input type="text"/> CUSTOMER SIGN	<input type="text"/>	
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
<input type="text" value="AM-RT-212"/>	<input type="text"/>	<input type="text"/>	

I/Will accept the terms and conditions of warranty as in the warranty card

DEALERS COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	<input type="text"/> CUSTOMER SIGN	<input type="text"/>	
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
<input type="text" value="AM-RT-212"/>	<input type="text"/>	<input type="text"/>	

I/Will accept the terms and conditions of warranty as in the warranty card

COMPANY COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	<input type="text"/> CUSTOMER SIGN	<input type="text"/>	
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
<input type="text" value="AM-RT-212"/>	<input type="text"/>	<input type="text"/>	

I/Will accept the terms and conditions of warranty as in the warranty card

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction



FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

AM-RT-212

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

AM-RT-212

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

AM-RT-212

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE


DEALERS OFFICE SEAL

OPERATIONS

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

DOS

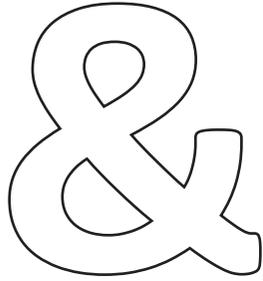

DONTs

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
9. For more query kindly contact for our Service Center/Dealer/ franchise

AGRIMATE MULTI PURPOSE EQUIPMENT ANYWHERE - ANYTIME - ANY CROP



 **ratnagiri[®]
impex**
BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETING BY,
RATNAGIRI IMPEX PVT., LTD.,
Annapurna House, #1 / 1G, 7th Cross, New
Guddadahalli Mysore Road, Bangalore - 560 026
Missed Call : 7393 938 938 Email: ask@agrimart.in