

## INTERCULTIVATOR/POWER WEEDER

AM-RTP-7P CHAMPION

TRANSMISSION DIGRAM WITH PART LIST



DISCLAIMER : DUE TO CONTANT UPGRADATION FEATURES & SPECIFICATIONS ARE SELECT TO CHANGE WITHOUT NOTICE

BEFORE OPERATING THIS MACHINE PLEASE READ THIS INSTRUCTIONS MANUAL CAREFULLY

# INTRODUCTION

Dear Sir/ Madam,

Thank you for choosing Agrimate product. You are the proud owner of high technology & durable machine. Trust that our Franchisee/Dealer installed the product & installed the product and explained you about the usage & service instructions. Please visit our autorised dealer for your future requirement of our other equipments, genuine spares, accessories and services. Service coupons are attached with this manual and you can avail free service to keep your machine fit always to use on demand.


About Ratnagiri,

We import and market of high quality of agriculture wide range of equipments which we are selling through our authorised franchisee or dealer network. We are in this field from past years service the farmer. community. For further details, Please visit our website [www.agrimart.in](http://www.agrimart.in).  
& Give a missed call to 7393 938 938.

## TECHNICAL PARAMETERS


MODEL	AM-RTP-7P CHAMPION
STARTING	RECOIL
DISPLACEMENT	212CC
FUEL TANK CAPACITY	3.6LTR
DRIVING MODEL	GEAR
GEAR	2 FORWARD + 1 REVERSE
TILLING DEPTH	≥100MM
TILLING DEPTH	850-1100MM
NW/GW	80/90 KG

# ENGINE SUPPORT - A

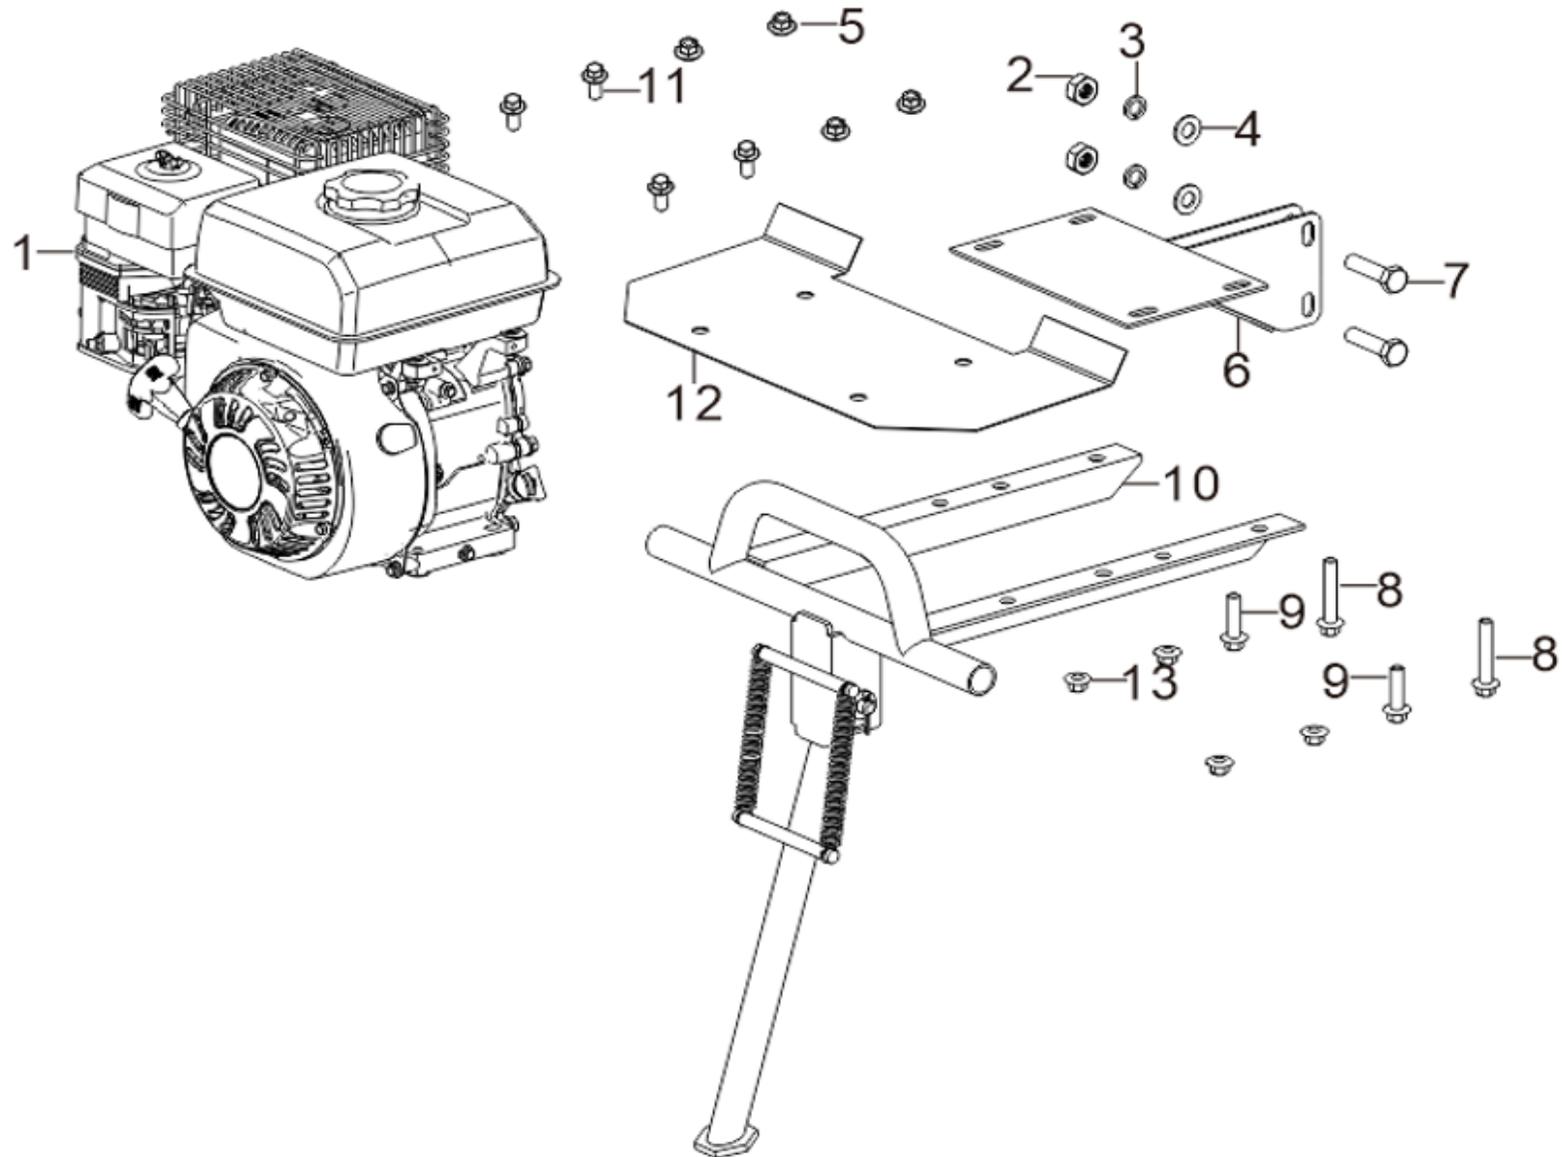

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-RTP-7PR-TA01	ENGINE			
2	AM-RTP-7PR-TA02	HEXAGON NUT			
3	AM-RTP-7PR-TA03	FLAT WASHER			
4	AM-RTP-7PR-TA04	FLAT WASHER			
5	AM-RTP-7PR-TA05	HEXAGON NUT WITH FLANGE			
6	AM-RTP-7PR-TA06	ENGINE CONNETING SEAT			
7	AM-RTP-7PR-TA07	HEXAGONAL HEAD BOLT			
8	AM-RTP-7PR-TA08	BOLT			
9	AM-RTP-7PR-TA09	BOLT			
10	AM-RTP-7PR-TA10	GUARD			
11	AM-RTP-7PR-TA11	BOLT			
12	AM-RTP-7PR-TA12	MINI-TILLER FENDER			
13	AM-RTP-7PR-TA13	HEXAGON NUT WITH FLANGE			
14					
15					
16					


# UPPER GEAR BOX - B

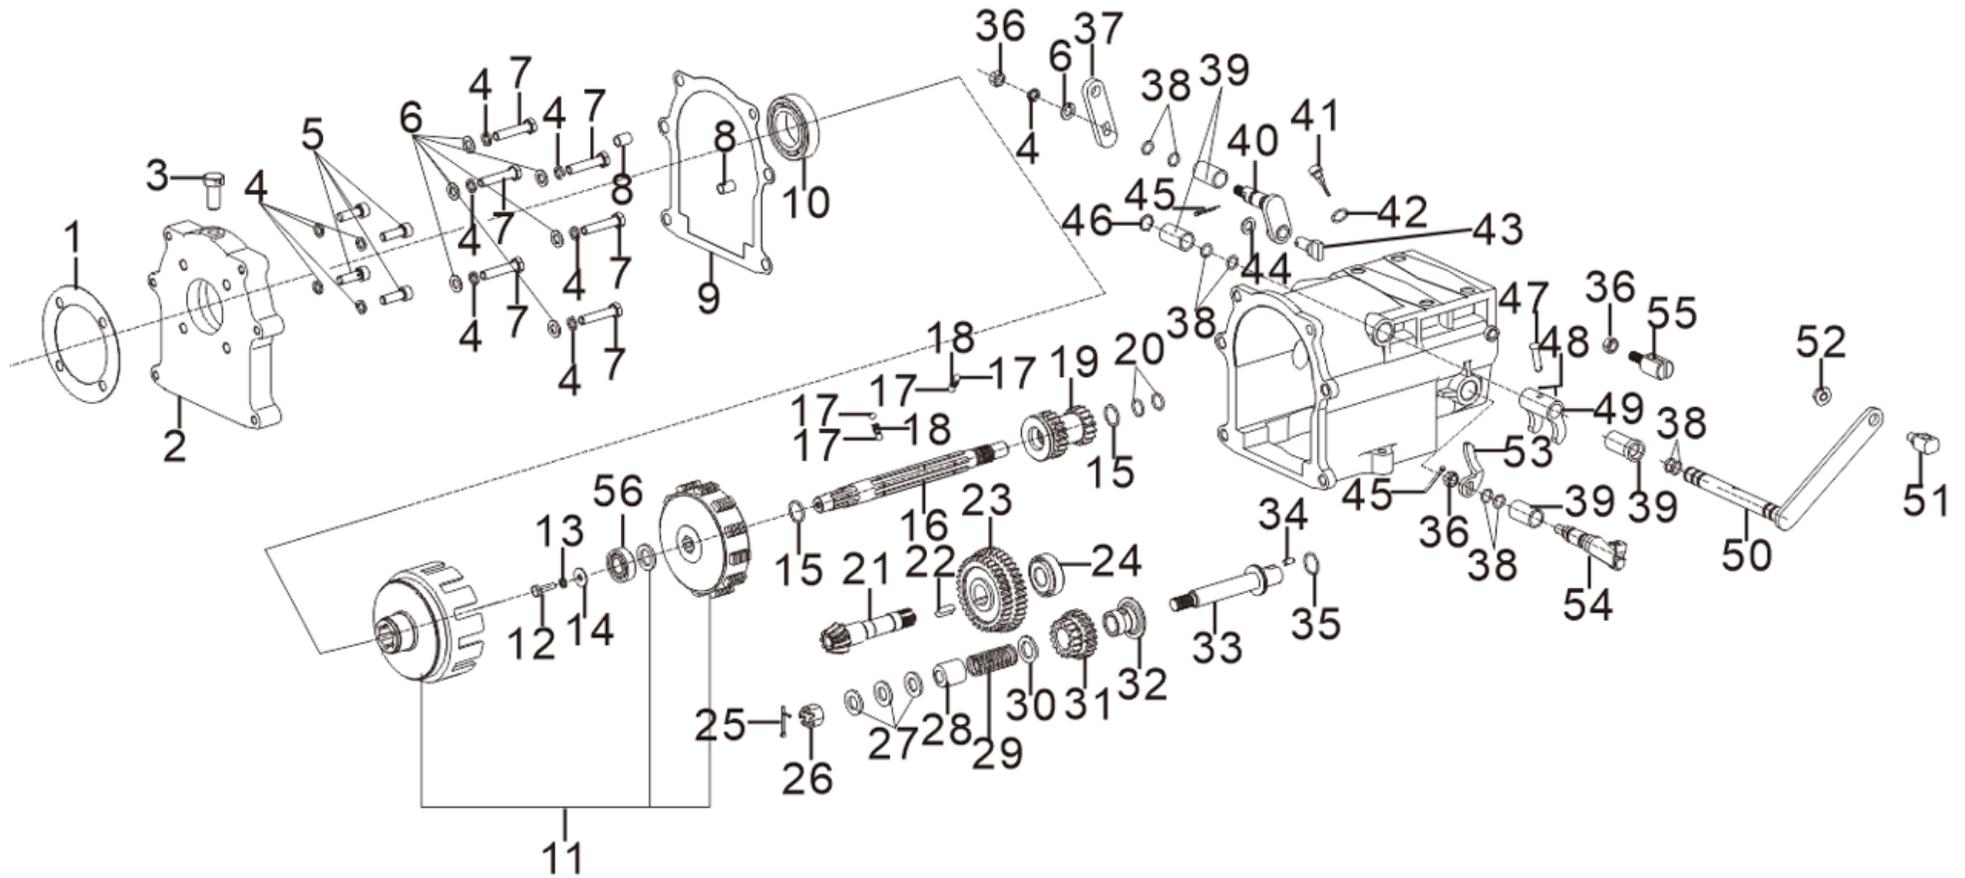

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-RTP-7PR-TB01	ENGINE SEAL GASKET	17	AM-RTP-7PR-TB17	STEEL BALL
2	AM-RTP-7PR-TB02	FLANGE	18	AM-RTP-7PR-TB18	STOPPER SPRING
3	AM-RTP-7PR-TB03	PRESSURE RELIEF BOLT	19	AM-RTP-7PR-TB19	GEAR I
4	AM-RTP-7PR-TB04	FLAT WASHER	20	AM-RTP-7PR-TB20	O-TYPE RUBBER SEAL RING
5	AM-RTP-7PR-TB05	HEXAGON SCREW	21	AM-RTP-7PR-TB21	COUNTERSHAFT
6	AM-RTP-7PR-TB06	FLAT WASHER	22	AM-RTP-7PR-TB22	Flat key
7	AM-RTP-7PR-TB07	HEXAGONAL HEAD BOLT	23	AM-RTP-7PR-TB23	GEAR- II
8	AM-RTP-7PR-TB08	POSITION PIN	24	AM-RTP-7PR-TB24	TAPERED ROLLER BEARINGS
9	AM-RTP-7PR-TB09	FLANGE SEAL GASKET	25	AM-RTP-7PR-TB25	COTTER PIN
10	AM-RTP-7PR-TB10	DEEP GROOVE BALL BEARING	26	AM-RTP-7PR-TB26	HEXAGON SLOTTED NUT
11	AM-RTP-7PR-TB11	CLUTCH ASSEMBLY	27	AM-RTP-7PR-TB27	FLAT WASHER
12	AM-RTP-7PR-TB12	HEXAGONAL HEAD BOLT	28	AM-RTP-7PR-TB28	REVERSE GEAR STOP COLLAR
13	AM-RTP-7PR-TB13	FLAT WASHER	29	AM-RTP-7PR-TB29	REVERSE GEAR SPRING
14	AM-RTP-7PR-TB14	EXTRA LARGE GASKET	30	AM-RTP-7PR-TB30	FLAT WASHER
15	AM-RTP-7PR-TB15	STILL RING	31	AM-RTP-7PR-TB31	GEAR -III
16	AM-RTP-7PR-TB16	MAIN AXLE	32	AM-RTP-7PR-TB32	REVERSE GEAR COLLAR

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
33	AM-RTP-7PR-TB33	REVERSE GEAR SHAFT	49	AM-RTP-7PR-TB49	SHIFTS FORK
34	AM-RTP-7PR-TB34	PIN	50	AM-RTP-7PR-TB50	Nut
35	AM-RTP-7PR-TB35	O-TYPE RUBBER SEAL RING	51	AM-RTP-7PR-TB51	INHAUL CABLE BASE
36	AM-RTP-7PR-TB36	HEXAGON NUT	52	AM-RTP-7PR-TB52	HEXAGON NUT
37	AM-RTP-7PR-TB37	SHIFT ARM	53	AM-RTP-7PR-TB53	SHIFTS FORK
38	AM-RTP-7PR-TB38	O-TYPE RUBBER SEAL RING	54	AM-RTP-7PR-TB54	REVERSE FORK SUBASSY
39	AM-RTP-7PR-TB39	BUSH	55	AM-RTP-7PR-TB55	INHAUL CABLE BASE
40	AM-RTP-7PR-TB40	SHIFTS FORK SUBASSEMBLY	56	AM-RTP-7PR-TB56	DEEP GROOVE BALL BEARING
41	AM-RTP-7PR-TB41	DIPSTICK, OIL			
42	AM-RTP-7PR-TB42	O-TYPE RUBBER SEAL RING			
43	AM-RTP-7PR-TB43	SHIFTS FORK			
44	AM-RTP-7PR-TB44	FLAT WASHER			
45	AM-RTP-7PR-TB45	COTTER PIN			
46	AM-RTP-7PR-TB46	CIRCLIP FOR SHAFT - TYPE A			
47	AM-RTP-7PR-TB47	PIN SHAFT			
48	AM-RTP-7PR-TB48	PIN			


# HANDLE - C

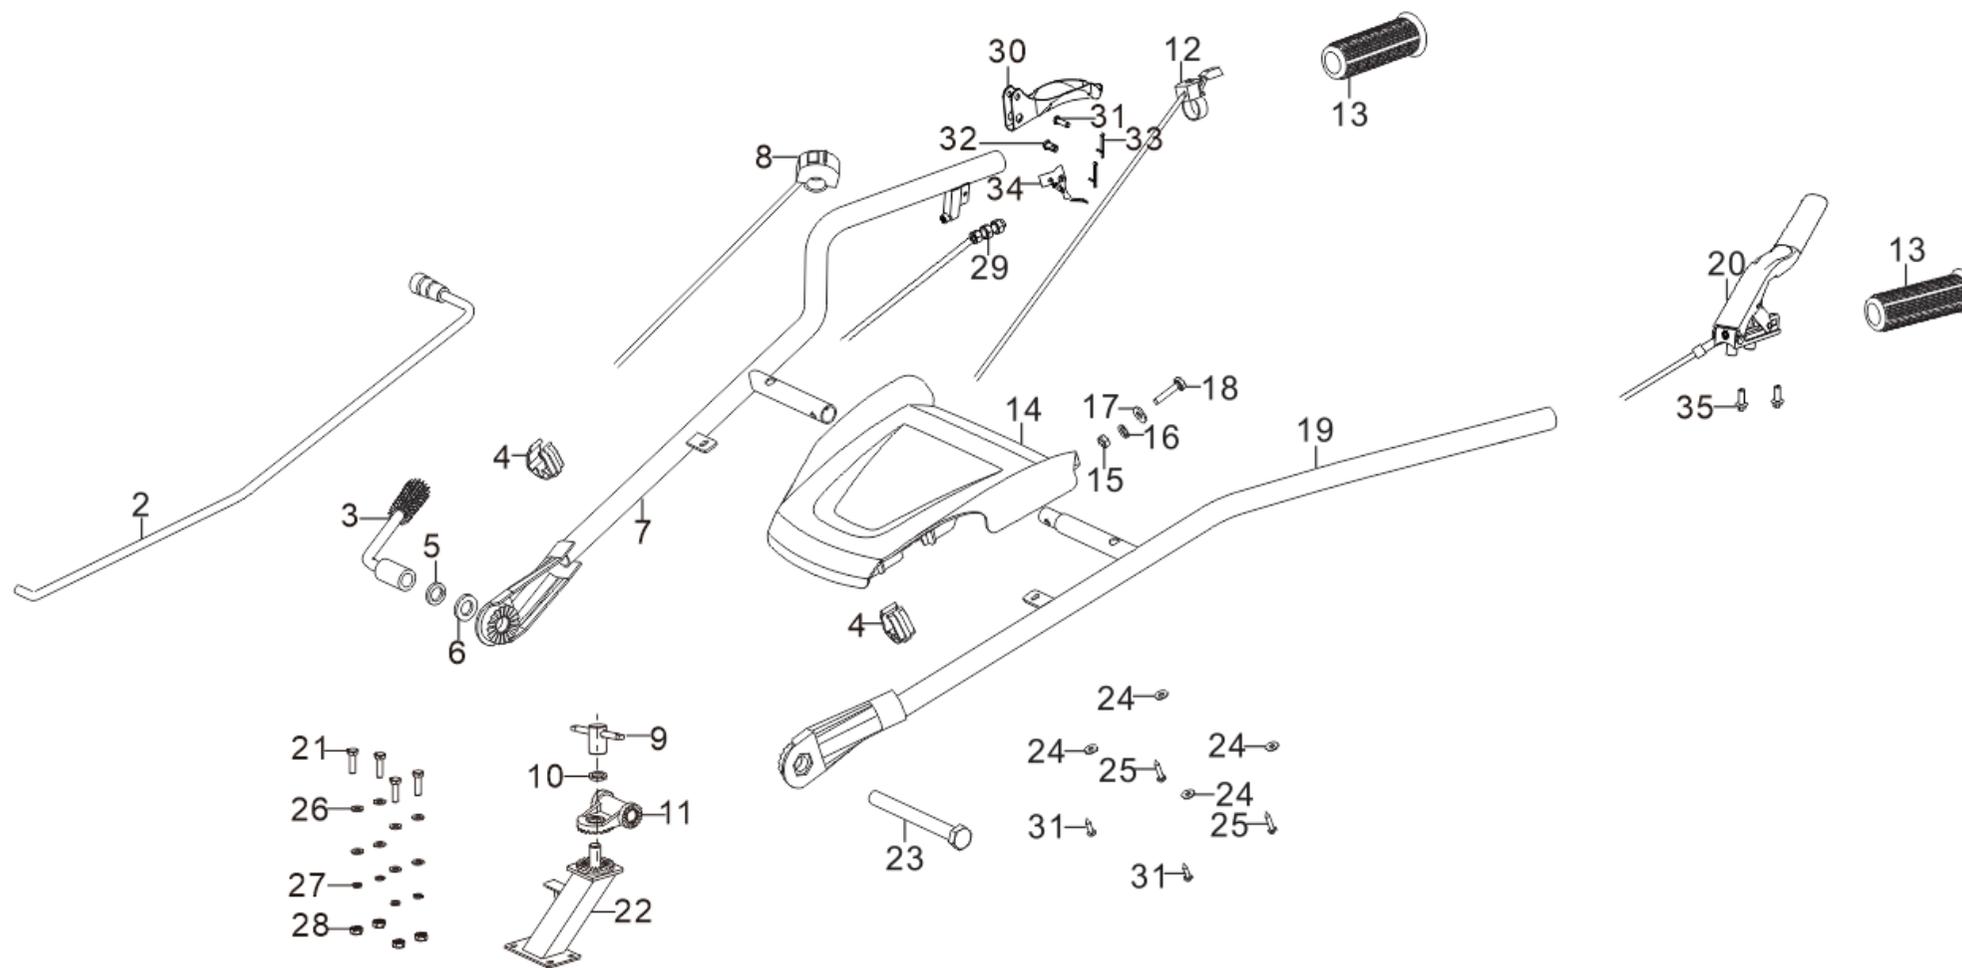

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-RTP-7PR-TC01	R PIN	17	AM-RTP-7PR-TC17	FLAT WASHER
2	AM-RTP-7PR-TC02	GEAR LEVER	18	AM-RTP-7PR-TC18	HEXAGONAL HEAD BOLT
3	AM-RTP-7PR-TC03	LOCK HANDLE	19	AM-RTP-7PR-TC19	HANDLE TUBE ASSY
4	AM-RTP-7PR-TC04	WIRE CLIP	20	AM-RTP-7PR-TC20	FORWARD CLUTCH HANDLE ASSEMBLY
5	AM-RTP-7PR-TC05	FLAT WASHER	21	AM-RTP-7PR-TC21	HEXAGONAL HEAD BOLT
6	AM-RTP-7PR-TC06	FLAT WASHER	22	AM-RTP-7PR-TC22	ARMREST ASSEMBLY
7	AM-RTP-7PR-TC07	HANDLE TUBE ASSY	23	AM-RTP-7PR-TC23	HEXAGONAL HEAD BOLT
8	AM-RTP-7PR-TC08	SWITCH SUBASSEMBLY	24	AM-RTP-7PR-TC24	FLAT WASHER
9	AM-RTP-7PR-TC09	LOCK HANDLE	25	AM-RTP-7PR-TC25	SCREW
10	AM-RTP-7PR-TC10	FLAT WASHER	26	AM-RTP-7PR-TC26	FLAT WASHER
11	AM-RTP-7PR-TC11	TOOTH DISK PLATE	27	AM-RTP-7PR-TC27	FLAT WASHER
12	AM-RTP-7PR-TC12	THROTILE COCK ASSEMBLY	28	AM-RTP-7PR-TC28	HEXAGON NUT
13	AM-RTP-7PR-TC13	HANDLE RUBBER SLEEVE	29	AM-RTP-7PR-TC29	REVERSE GEAR CABLE
14	AM-RTP-7PR-TC14	PANEL	30	AM-RTP-7PR-TC30	REVERSE CLUTCH HANDLE
15	AM-RTP-7PR-TC15	HEXAGON LOCK NUT	31	AM-RTP-7PR-TC31	PIN SHAFT
16	AM-RTP-7PR-TC16	STANDARD SPRING WASHER	32	AM-RTP-7PR-TC32	PIN SHAFT




# REAR GEAR BOX - D

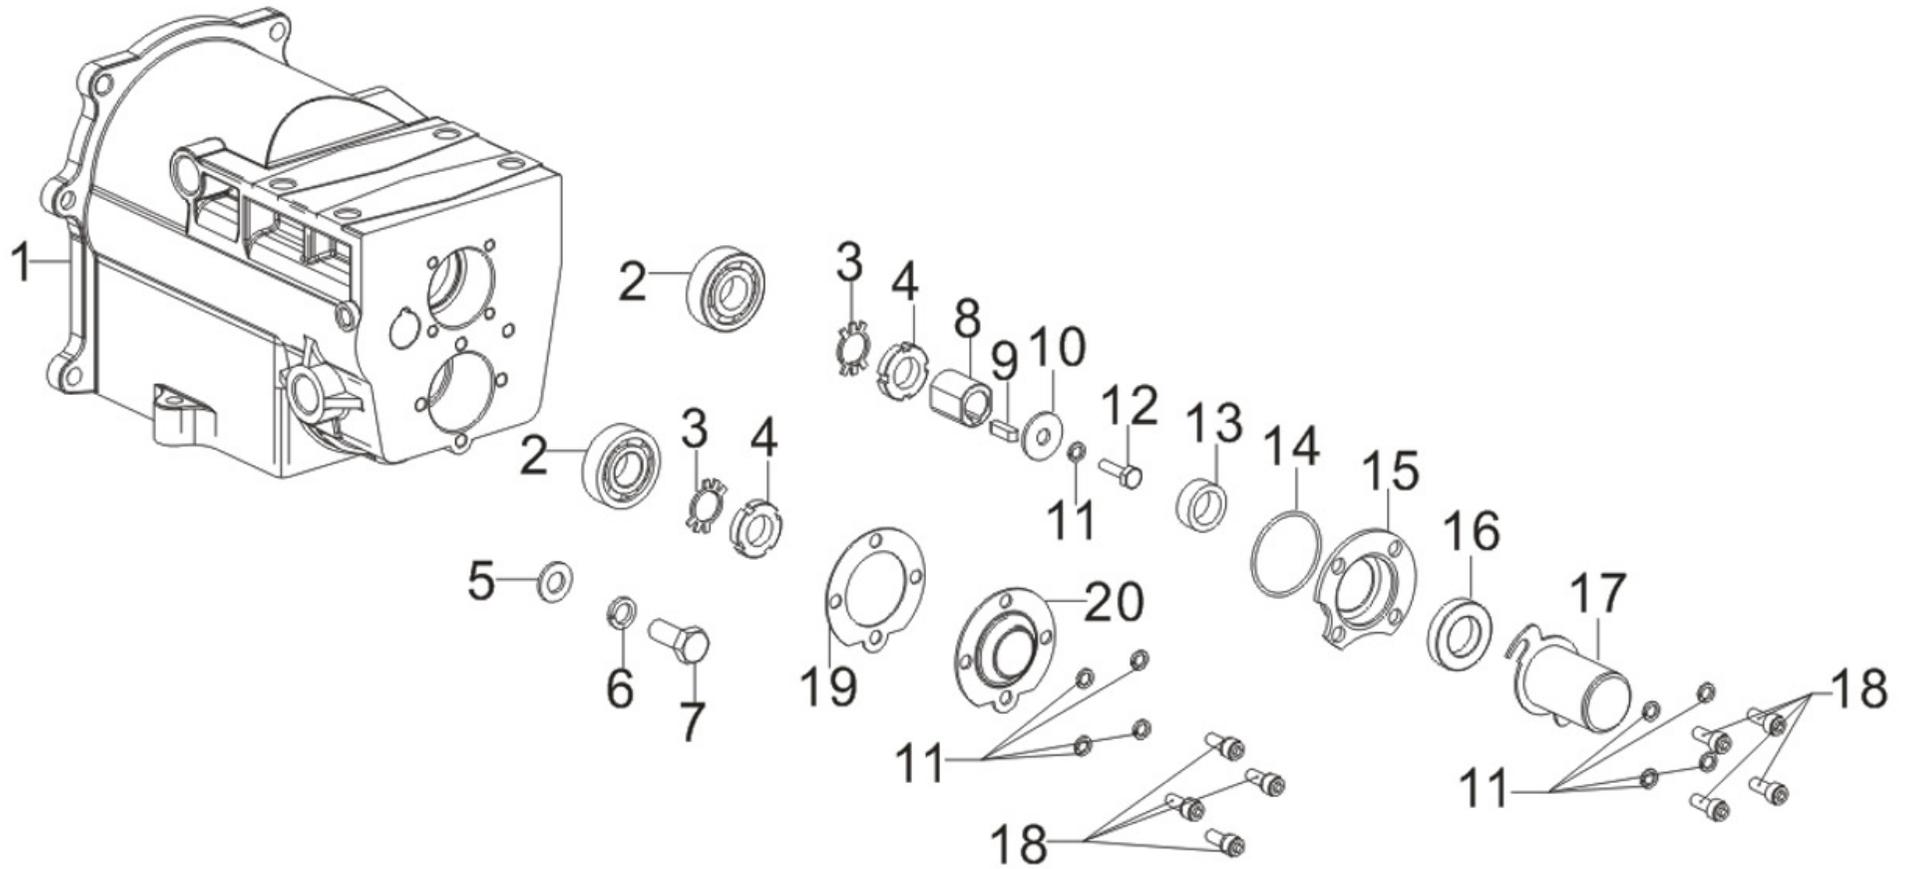


SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-RTP-7PR-TD01	GEARBOX	17	AM-RTP-7PR-TD17	MAIN SHAFT SAFETY GUARD
2	AM-RTP-7PR-TD02	DEEP GROOVE BALL BEARING	18	AM-RTP-7PR-TD18	HEXAGON SOCKET
3	AM-RTP-7PR-TD03	LOCK WASHER	19	AM-RTP-7PR-TD19	COUNTERSHAFT
4	AM-RTP-7PR-TD04	ROUND NUT	20	AM-RTP-7PR-TD20	COUNTERSHAFT
5	AM-RTP-7PR-TD05	FLAT WASHER			
6	AM-RTP-7PR-TD06	STANDARD SPRING WASHER			
7	AM-RTP-7PR-TD07	HEXAGONAL HEAD BOLT			
8	AM-RTP-7PR-TD08	FLAT KEY SET			
9	AM-RTP-7PR-TD09	Flat key			
10	AM-RTP-7PR-TD10	EXTRA LARGE GASKET			
11	AM-RTP-7PR-TD11	FLAT WASHER			
12	AM-RTP-7PR-TD12	HEXAGONAL HEAD BOLT			
13	AM-RTP-7PR-TD13	BUSH			
14	AM-RTP-7PR-TD14	O-TYPE RUBBER SEAL RING			
15	AM-RTP-7PR-TD15	MAIN SHAFT GLAND			
16	AM-RTP-7PR-TD16	OIL SEAL			

# LOWER GEAR BOX ( - E

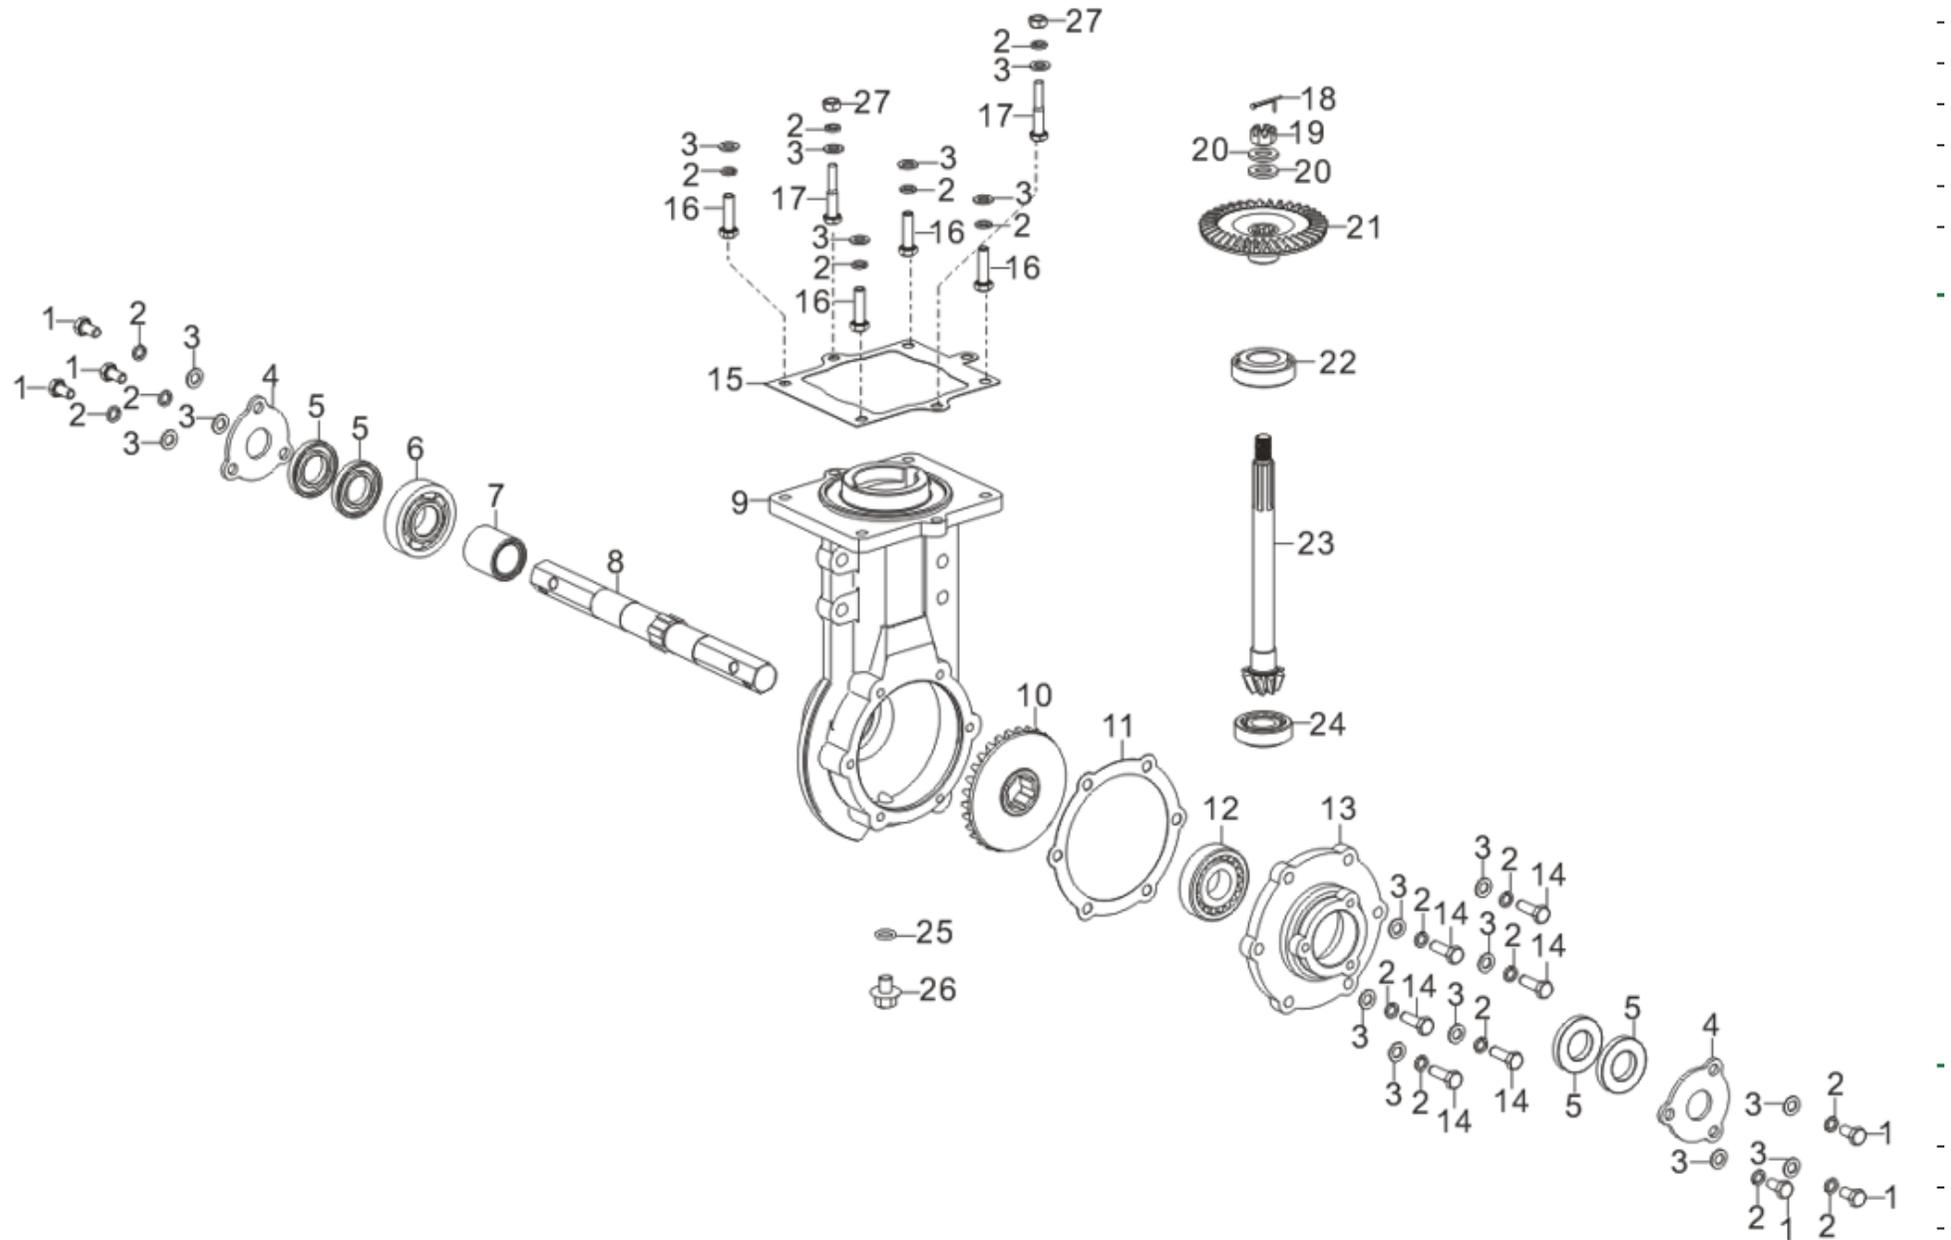

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-RTP-7PR-TE01	HEXAGONAL HEAD BOLT	17	AM-RTP-7PR-TE17	HEXAGONAL HEAD BOLT
2	AM-RTP-7PR-TE02	FLAT WASHER	18	AM-RTP-7PR-TE18	COTTER PIN
3	AM-RTP-7PR-TE03	FLAT WASHER	19	AM-RTP-7PR-TE19	HEXAGON SLOTTED NUT
4	AM-RTP-7PR-TE04	OUTPUT SHAFT DUST	20	AM-RTP-7PR-TE20	FLAT WASHER
5	AM-RTP-7PR-TE05	OIL SEAL	21	AM-RTP-7PR-TE21	DRIVEN BEVEL GEAR
6	AM-RTP-7PR-TE06	DEEP GROOVE BALL BEARING	22	AM-RTP-7PR-TE22	TAPERED ROLLER BEARINGS
7	AM-RTP-7PR-TE07	BUSH	23	AM-RTP-7PR-TE23	TRANSPORTATION BEVEL GEAR SHAFT
8	AM-RTP-7PR-TE08	OUTPUT SHAFT	24	AM-RTP-7PR-TE24	TAPERED ROLLER BEARINGS
9	AM-RTP-7PR-TE09	TRANSPORTATION BOX BODY	25	AM-RTP-7PR-TE25	O-TYPE RUBBER SEAL RING
10	AM-RTP-7PR-TE10	TRANSPORTATION BEVEL GEAR	26	AM-RTP-7PR-TE26	DRAIN PLUG BOLT
11	AM-RTP-7PR-TE11	COVER SEALING GASKET			
12	AM-RTP-7PR-TE12	TAPERED ROLLER BEARINGS			
13	AM-RTP-7PR-TE13	BOX END COVER			
14	AM-RTP-7PR-TE14	HEXAGONAL HEAD BOLT			
15	AM-RTP-7PR-TE15	MOULD ASSEMBLING SEAL GASKET			
16	AM-RTP-7PR-TE16	HEXAGONAL HEAD BOLT			


# FENDER -F

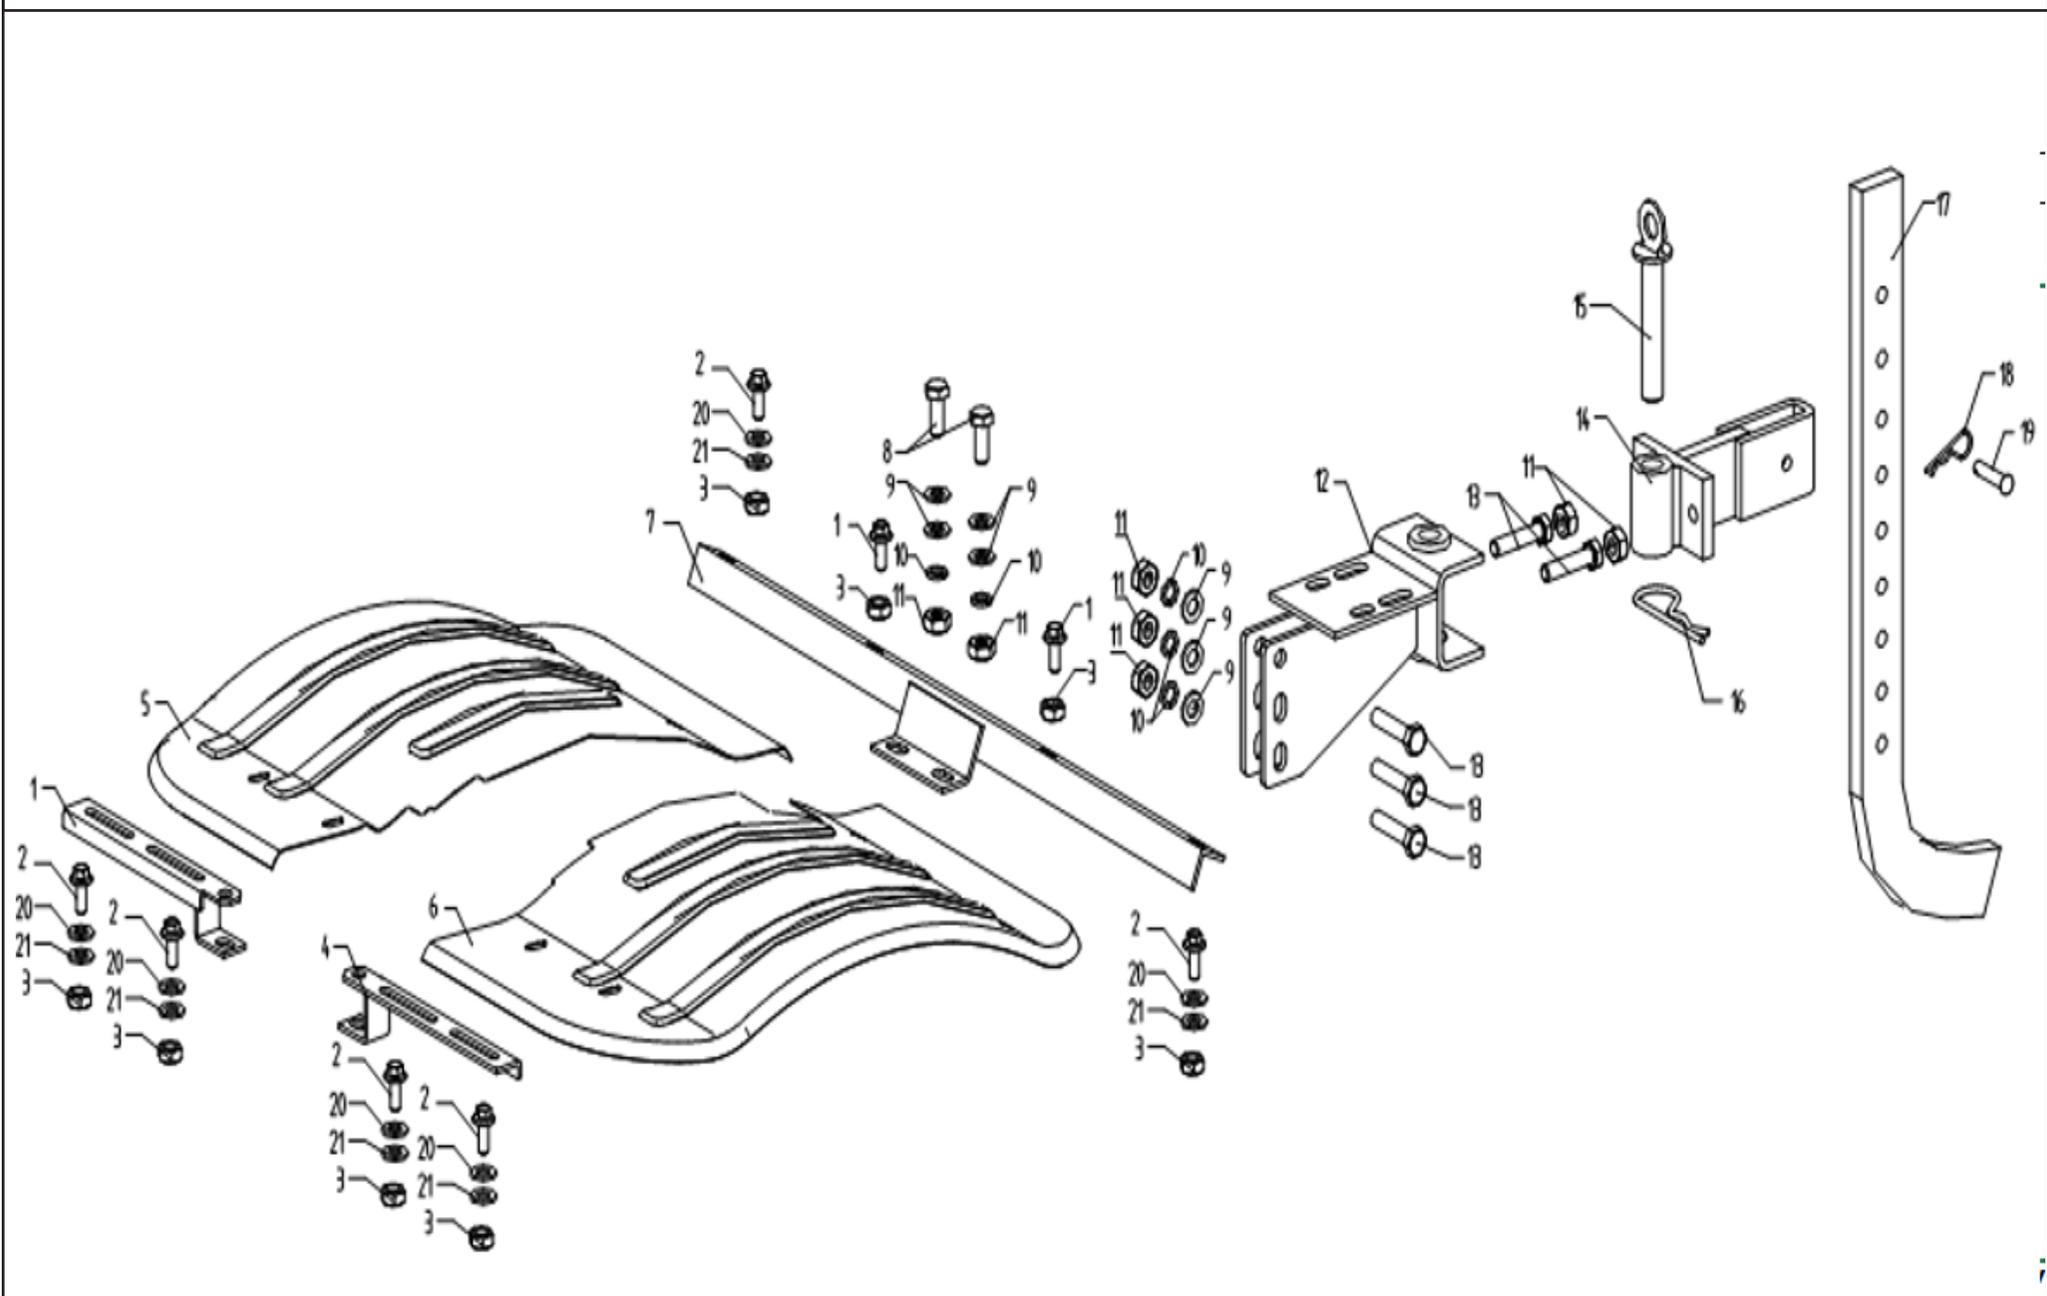


SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-RTP-7PR-TF01	FRONT FENDER SUPPORT	17	AM-RTP-7PR-TF17	DAMPING ARM
2	AM-RTP-7PR-TF02	BOLT	18	AM-RTP-7PR-TF18	R PIN
3	AM-RTP-7PR-TF03	NUT	19	AM-RTP-7PR-TF19	PIN SHAFT
4	AM-RTP-7PR-TF04	FRONT FENDER SUPPORT	20	AM-RTP-7PR-TF20	FLAT WASHER
5	AM-RTP-7PR-TF05	MINI-TILLER FENDER -RIGHT	21	AM-RTP-7PR-TF21	RUBBER GASKET
6	AM-RTP-7PR-TF06	MINI-TILLER FENDER -LEFT			
7	AM-RTP-7PR-TF07	REAR FENDER SUPPORT			
8	AM-RTP-7PR-TF08	HEXAGONAL HEAD BOLT			
9	AM-RTP-7PR-TF09	FLAT WASHER			
10	AM-RTP-7PR-TF10	FLAT WASHER			
11	AM-RTP-7PR-TF11	HEXAGON NUT			
12	AM-RTP-7PR-TF12	TRAILING BODY			
13	AM-RTP-7PR-TF13	HEXAGONAL HEAD BOLT			
14	AM-RTP-7PR-TF14	CONNECTION FRAME			
15	AM-RTP-7PR-TF15	PIN SHAFT			
16	AM-RTP-7PR-TF16	R PIN			

# BLADES - G

## LEFT BLADES

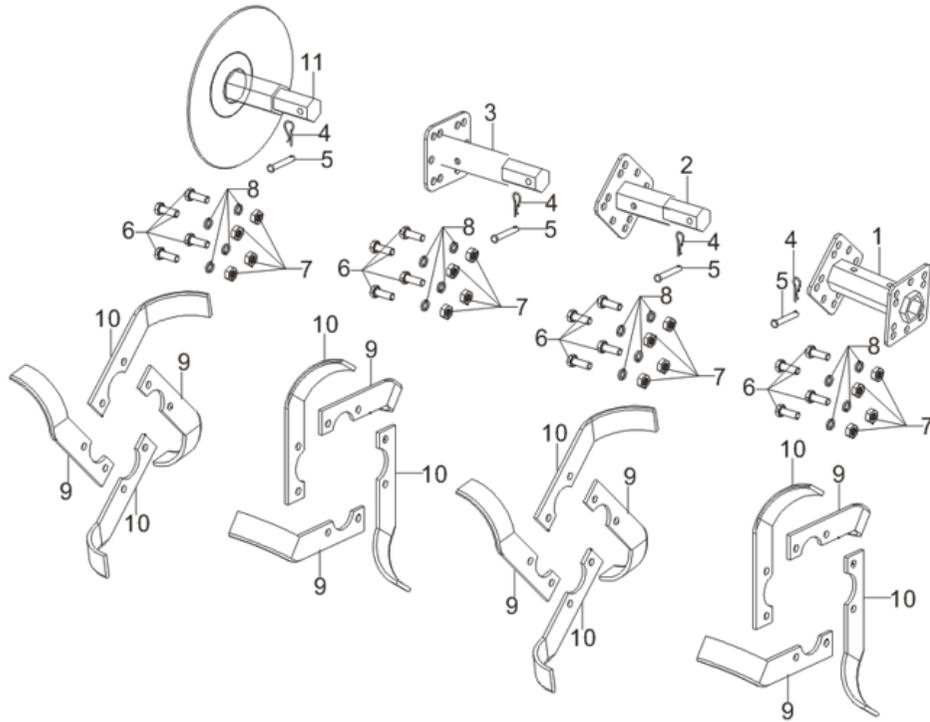


## RIGHT BLADES

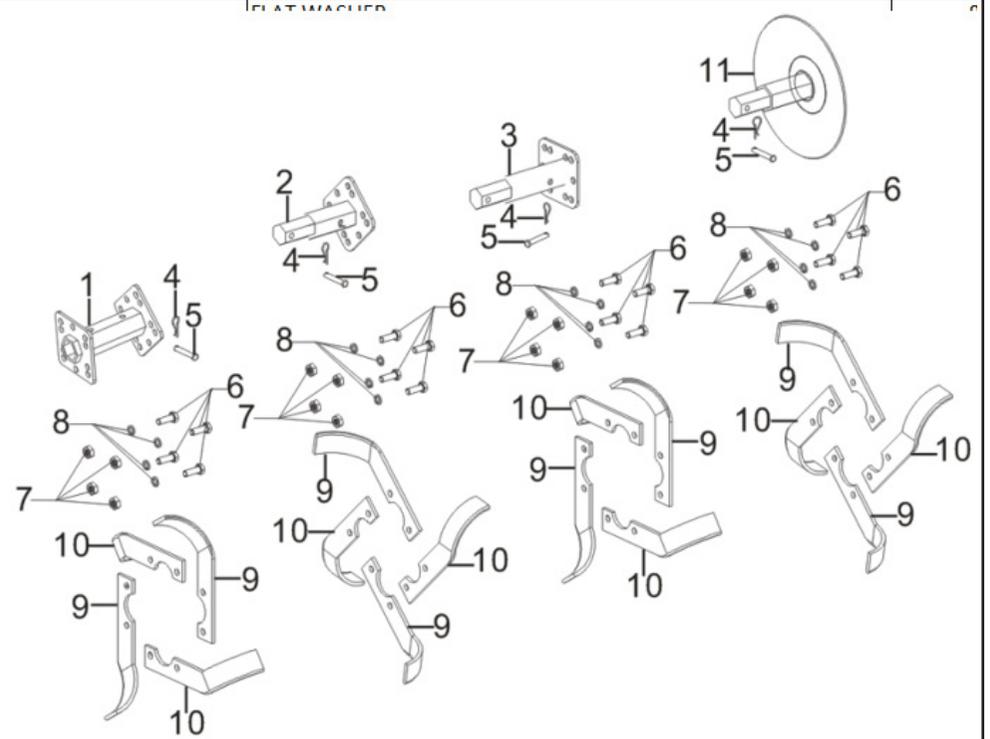




# WHEEL ASSY - H

## LEFT WHEEL ASSY

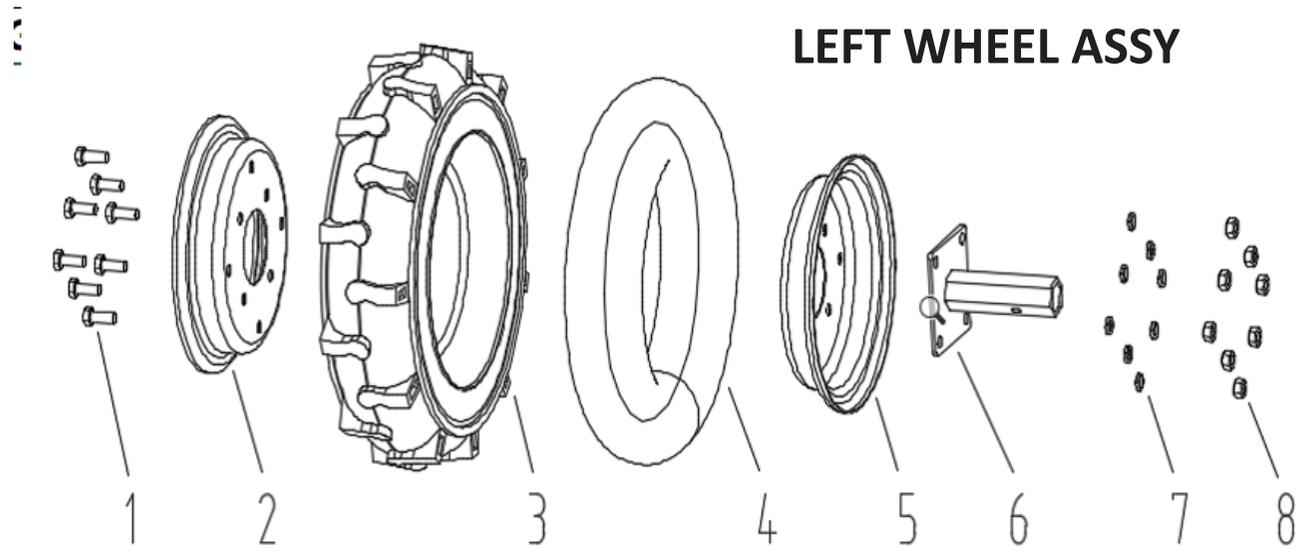

## RIGHT WHEEL ASSY

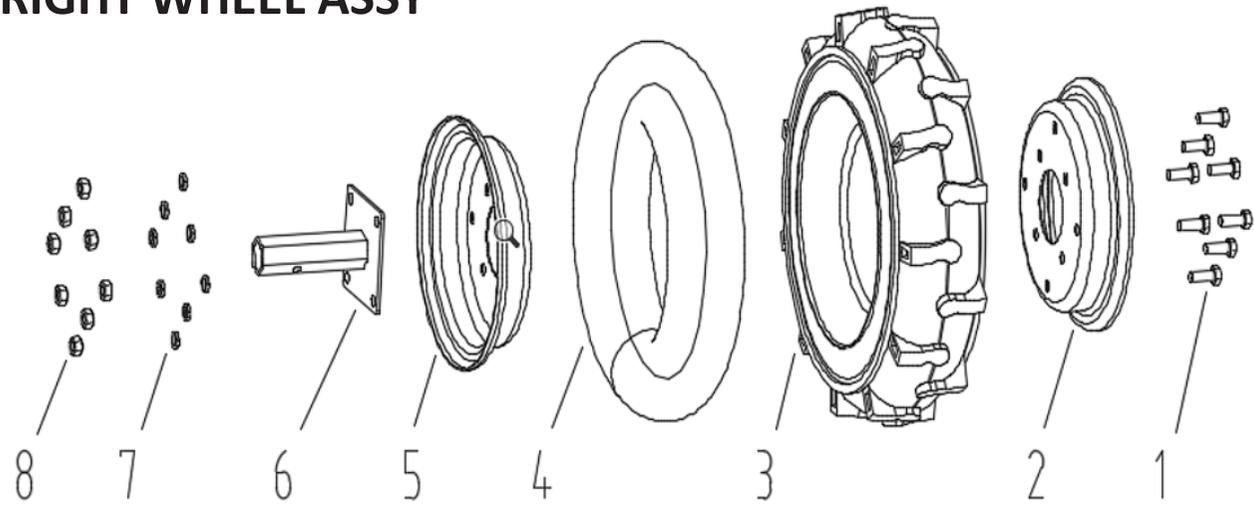

SL NO	PART NO	DESCRIPTION	SL NO	PART NO	DESCRIPTION
1	AM-RTP-7PR-TH01	HEXAGON HEAD BOLT			
2	AM-RTP-7PR-TH02	WHEEL HUB			
3	AM-RTP-7PR-TH03	OUTER TUBE			
4	AM-RTP-7PR-TH04	INNER TUBE			
5	AM-RTP-7PR-TH05	WHEEL HUB			
6	AM-RTP-7PR-TH06	REAR WHEEL SHAFT			
7	AM-RTP-7PR-TH07	FLAT WASHER			
8	AM-RTP-7PR-TH08	HEXANUT NUT			
9					
10					
11					
12					
13					
14					
15					
16					

# WARRANTY CARD

## CUSTOMER COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

## DEALERS COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

## COMPANY COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction



**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE


DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

# DOS


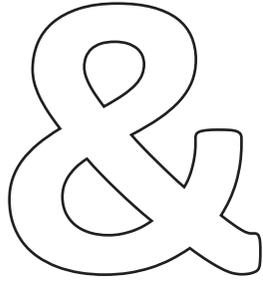


# DONTs

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
9. For more query kindly contact for our Service Center/Dealer/ franchise

# Agrimate Army For Pest Control

ANY WHERE - ANY TIME - ANY CROP

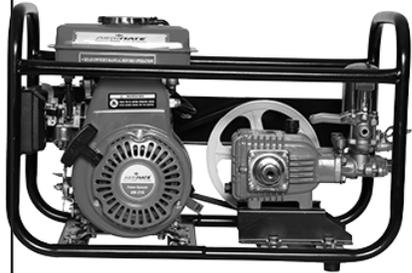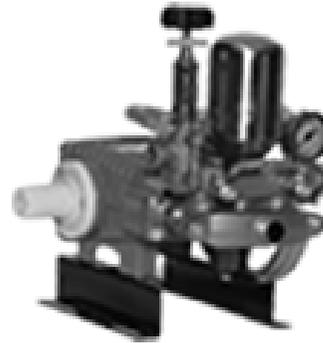

Marketed by:  
**ratnagiri  
impex**  
BRINGING YOU THE FUTURE... NOW

**RATNAGIRI IMPEX PVT., LTD.,**

Annapurna House, #1 / 1G, 7th Cross, New  
Guddadahalli

Mysore Road, Bangalore - 560 026

Missed Call : 7393 938 938

Email: [ask@agrimart.in](mailto:ask@agrimart.in)