


## AGRICULTURE AGRIMATE WATER PUMP -GASOLINE ENGINE DIAGRAM

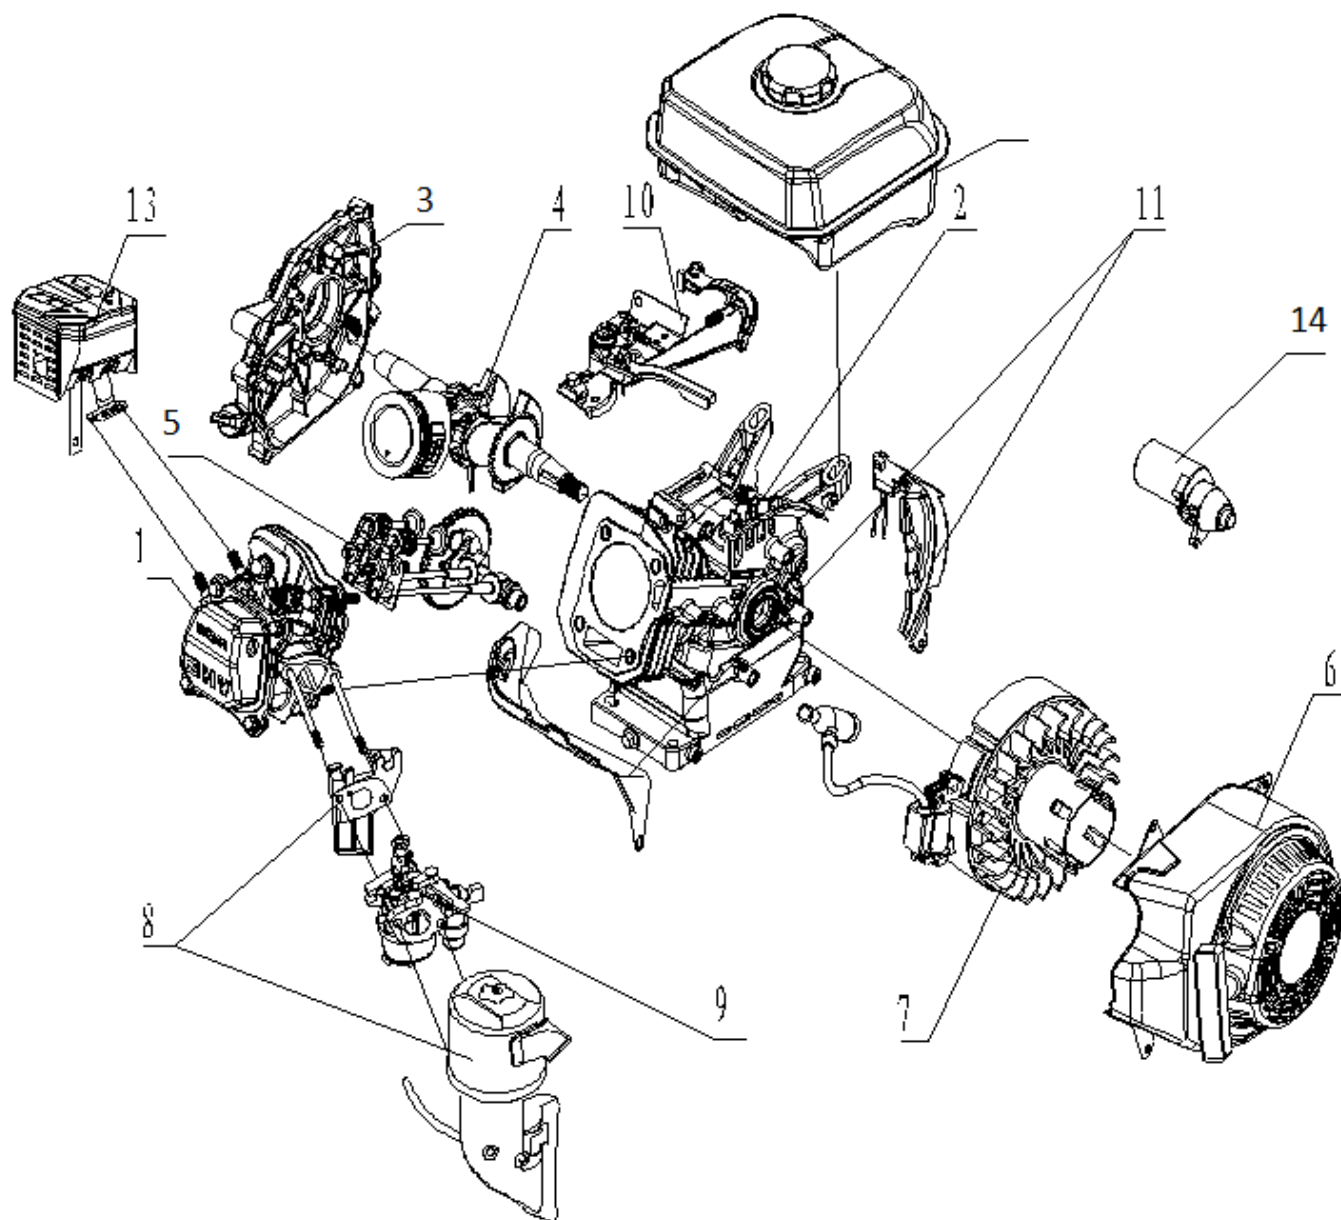


## ENGINE ASSY - A




| SL NO | PART NO       | DESCRIPTION                | SL NO | PART NO | DESCRIPTION |
|-------|---------------|----------------------------|-------|---------|-------------|
| 1     | AM-170FP-EA01 | HEAD ASSY                  |       |         |             |
| 2     | AM-170FP-EA02 | CRANKCASE ASSY             |       |         |             |
| 3     | AM-170FP-EA03 | CRANKCASE COVER ASSY       |       |         |             |
| 4     | AM-170FP-EA04 | CRANK-CONNECTING ROD ASSY  |       |         |             |
| 5     | AM-170FP-EA05 | VALVE TRAIN ASSY           |       |         |             |
| 6     | AM-170FP-EA06 | STAR ASSY                  |       |         |             |
| 7     | AM-170FP-EA07 | FLYWHEEL AND IGNITION ASSY |       |         |             |
| 8     | AM-170FP-EA08 | INLET ASSY                 |       |         |             |
| 9     | AM-170FP-EA09 | CARBURETOR CIRCUIT ASSY    |       |         |             |
| 10    | AM-170FP-EA10 | THROTTLE CONTROL ASSY      |       |         |             |
| 11    | AM-170FP-EA11 | WIND DEFLECTOR             |       |         |             |
| 12    | AM-170FP-EA12 | FULE OIL ASSY              |       |         |             |
| 13    | AM-170FP-EA13 | EXHAUST ASSY               |       |         |             |
| 14    | AM-170FP-EA14 | START MOTOR ASSY           |       |         |             |
|       |               |                            |       |         |             |
|       |               |                            |       |         |             |

## HEAD ASSAMBLEY-B

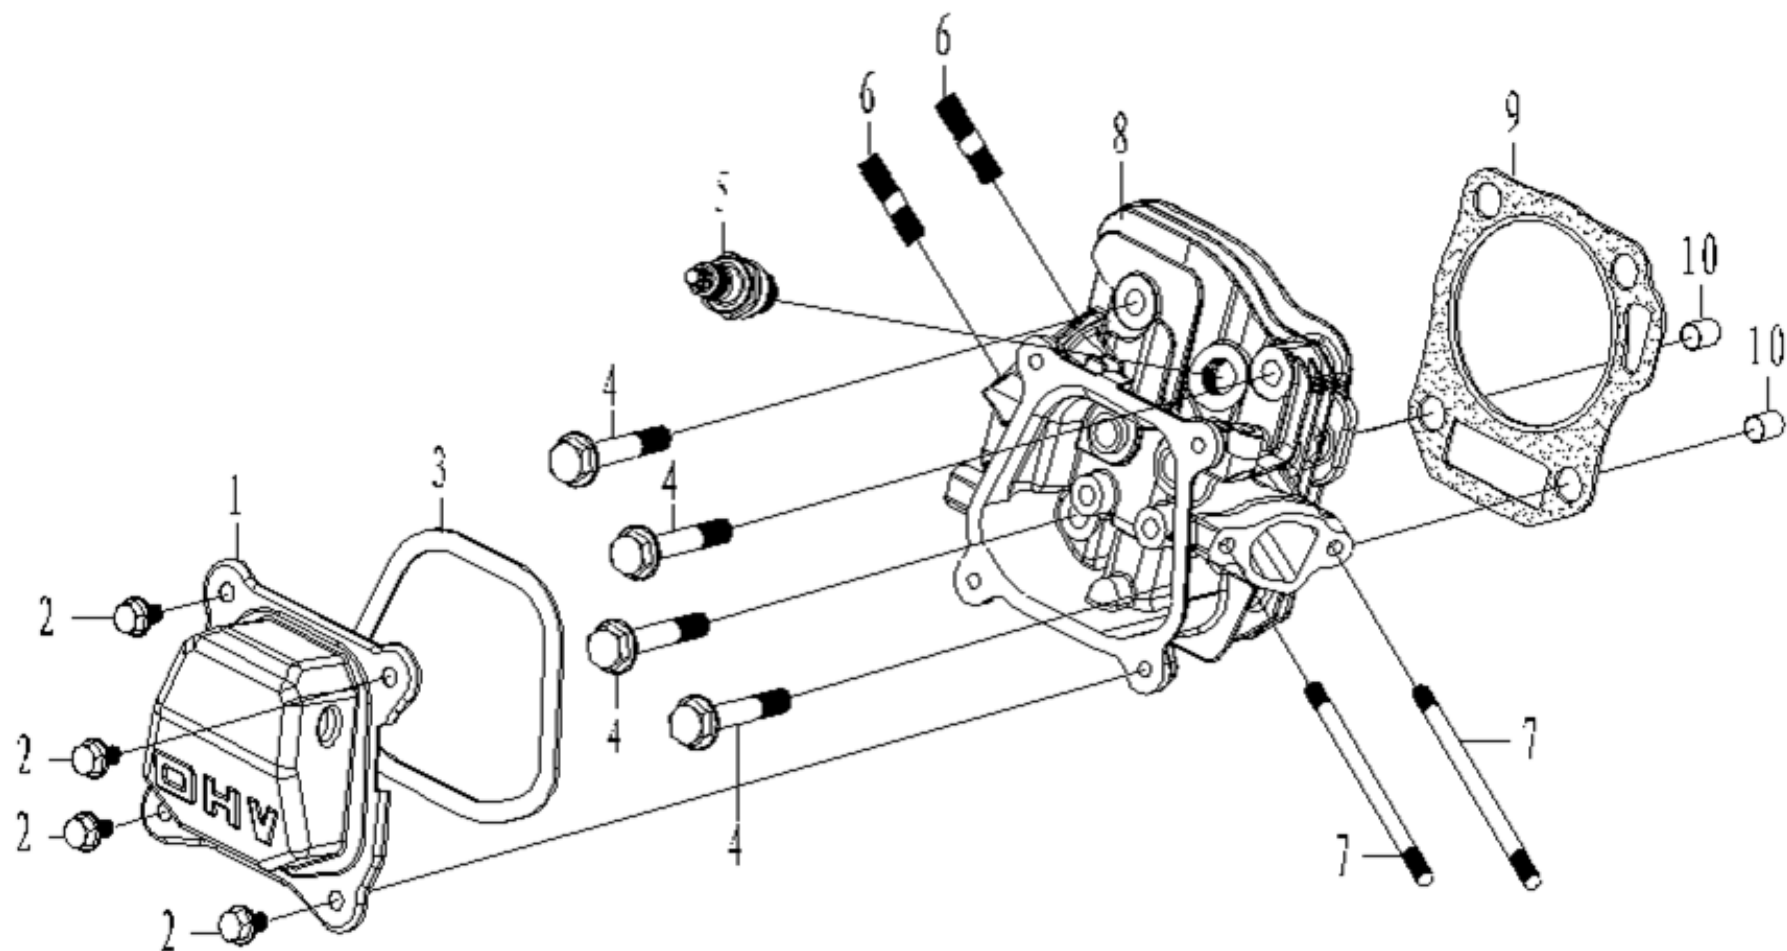




# CRANK CASE ASSY-C

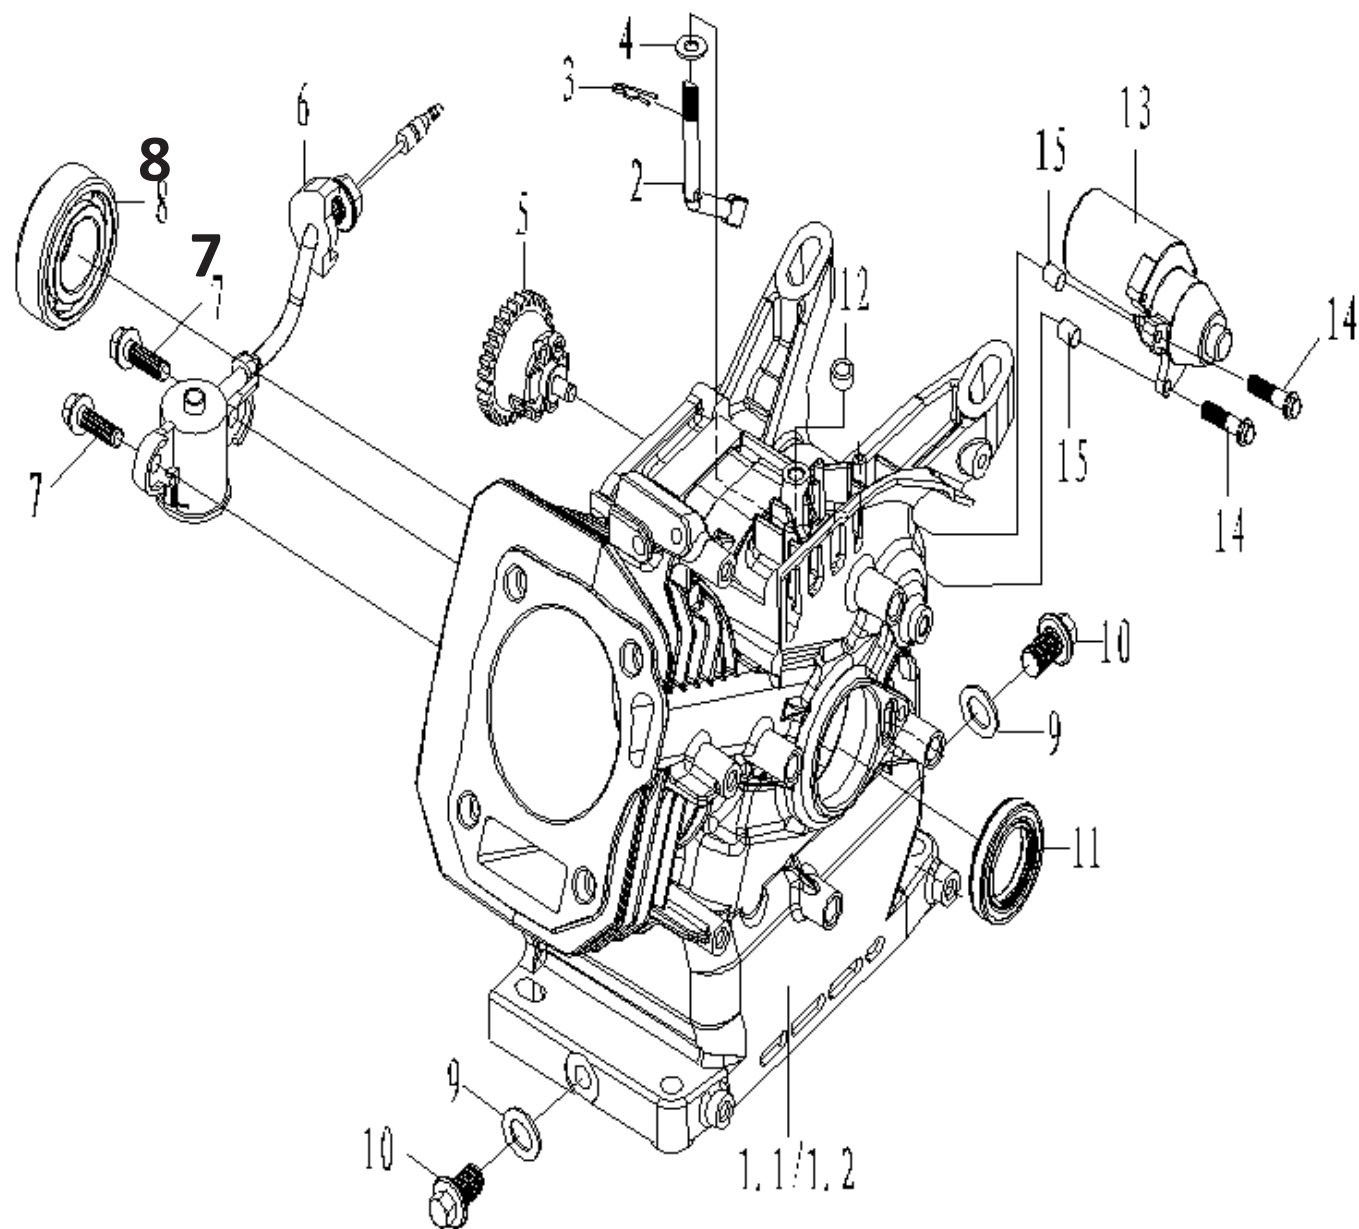


| SL NO | PART NO        | DESCRIPTION               | SL NO | PART NO | DESCRIPTION |
|-------|----------------|---------------------------|-------|---------|-------------|
| 1.1   | AM-170FP-EC1.1 | CRANKCASE COMP            |       |         |             |
| 1.1   | AM-170FP-EC1.2 | CRANKCASE COMP            |       |         |             |
| 2     | AM-170FP-EC02  | GOVERNOR ARM SHAFT        |       |         |             |
| 2     | AM-170FP-EC03  | GOVERNOR ARM SHAFT LOCKER |       |         |             |
| 2     | AM-170FP-EC04  | PLAIN WASHER              |       |         |             |
| 2     | AM-170FP-EC05  | GOVERNOR KIT              |       |         |             |
| 2     | AM-170FP-EC06  | OIL SENSOR                |       |         |             |
| 2     | AM-170FP-EC07  | BOLT                      |       |         |             |
| 2     | AM-170FP-EC08  | BEARING                   |       |         |             |
| 2     | AM-170FP-EC09  | PLAIN WASHER              |       |         |             |
| 2     | AM-170FP-EC10  | DRAIN PLUG BOLT           |       |         |             |
| 2     | AM-170FP-EC11  | OIL SEAL                  |       |         |             |
| 2     | AM-170FP-EC12  | OIL SEAL                  |       |         |             |
| 2     | AM-170FP-EC13  | START MOTOR ASSY          |       |         |             |
| 2     | AM-170FP-EC14  | BOLT                      |       |         |             |
| 2     | AM-170FP-EC15  | DOWEL PIN                 |       |         |             |

## CRANK CASE COVER ASSY-D

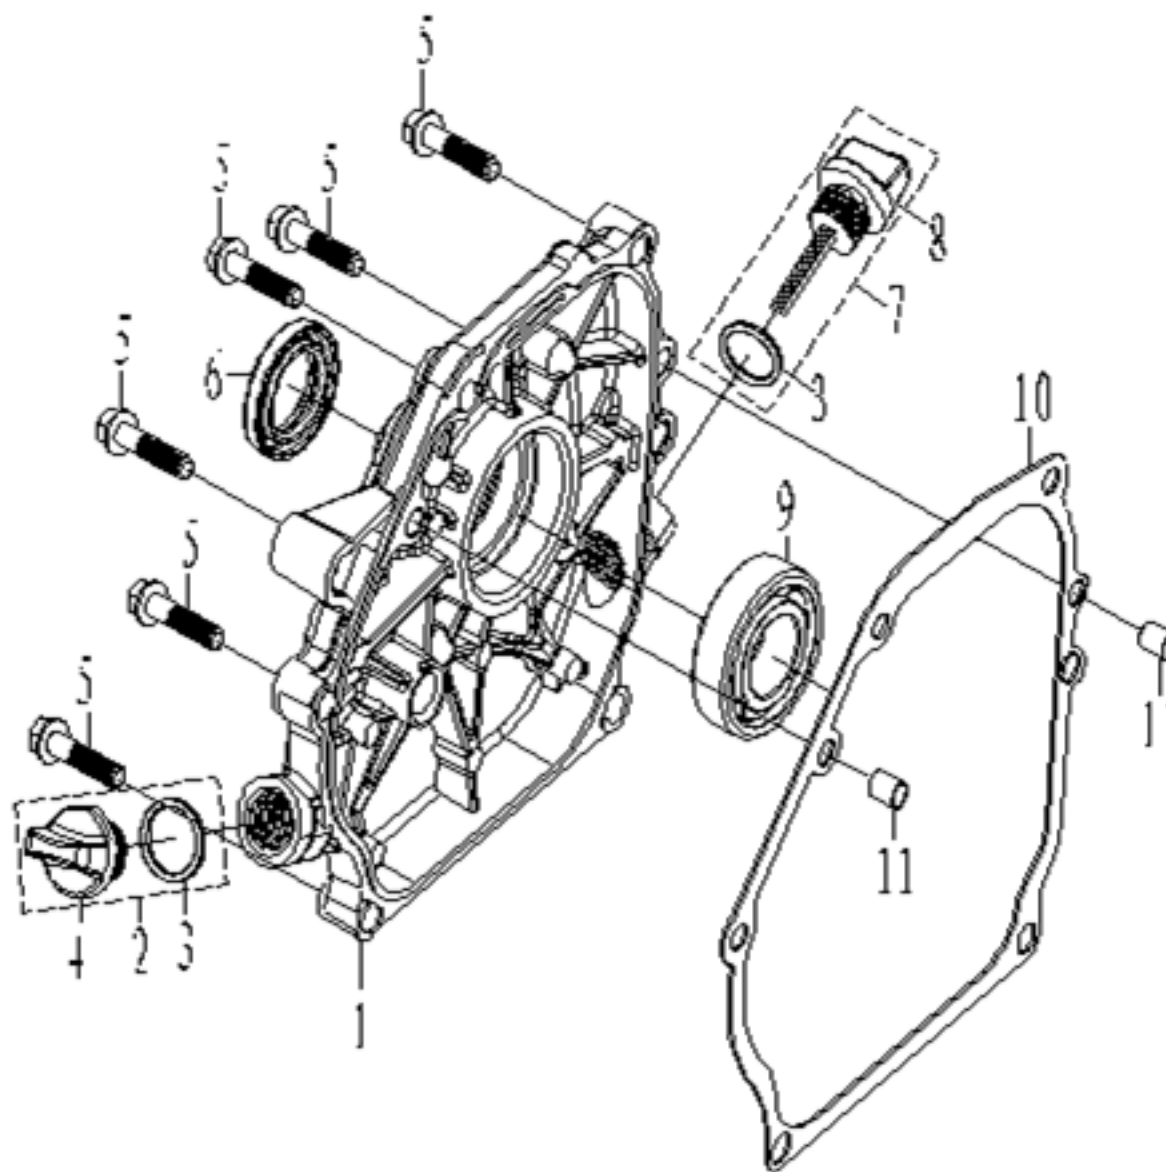

| SL NO. | PART NO.      | DESCRIPTION           | SL NO. | PART NO. | DESCRIPTION |
|--------|---------------|-----------------------|--------|----------|-------------|
| 1      | AM-170FP-ED01 | CRANKCASE COVER       |        |          |             |
| 2      | AM-170FP-ED02 | OIL FILLER PLUG ASSY  |        |          |             |
| 3      | AM-170FP-ED03 | DIPSTICK SEALING RING |        |          |             |
| 4      | AM-170FP-ED04 | OIL FILLER PLUG       |        |          |             |
| 5      | AM-170FP-ED05 | BOLT                  |        |          |             |
| 6      | AM-170FP-ED06 | OIL SEAL              |        |          |             |
| 7      | AM-170FP-ED07 | DIPSTICK ASSY         |        |          |             |
| 8      | AM-170FP-ED08 | DIPSTICK              |        |          |             |
| 9      | AM-170FP-ED09 | BEARING               |        |          |             |
| 10     | AM-170FP-ED10 | CASE COVER GASKET     |        |          |             |
| 11     | AM-170FP-ED11 | DOWEL PIN             |        |          |             |

# CRANK CONNECTING ROD ASSY - E

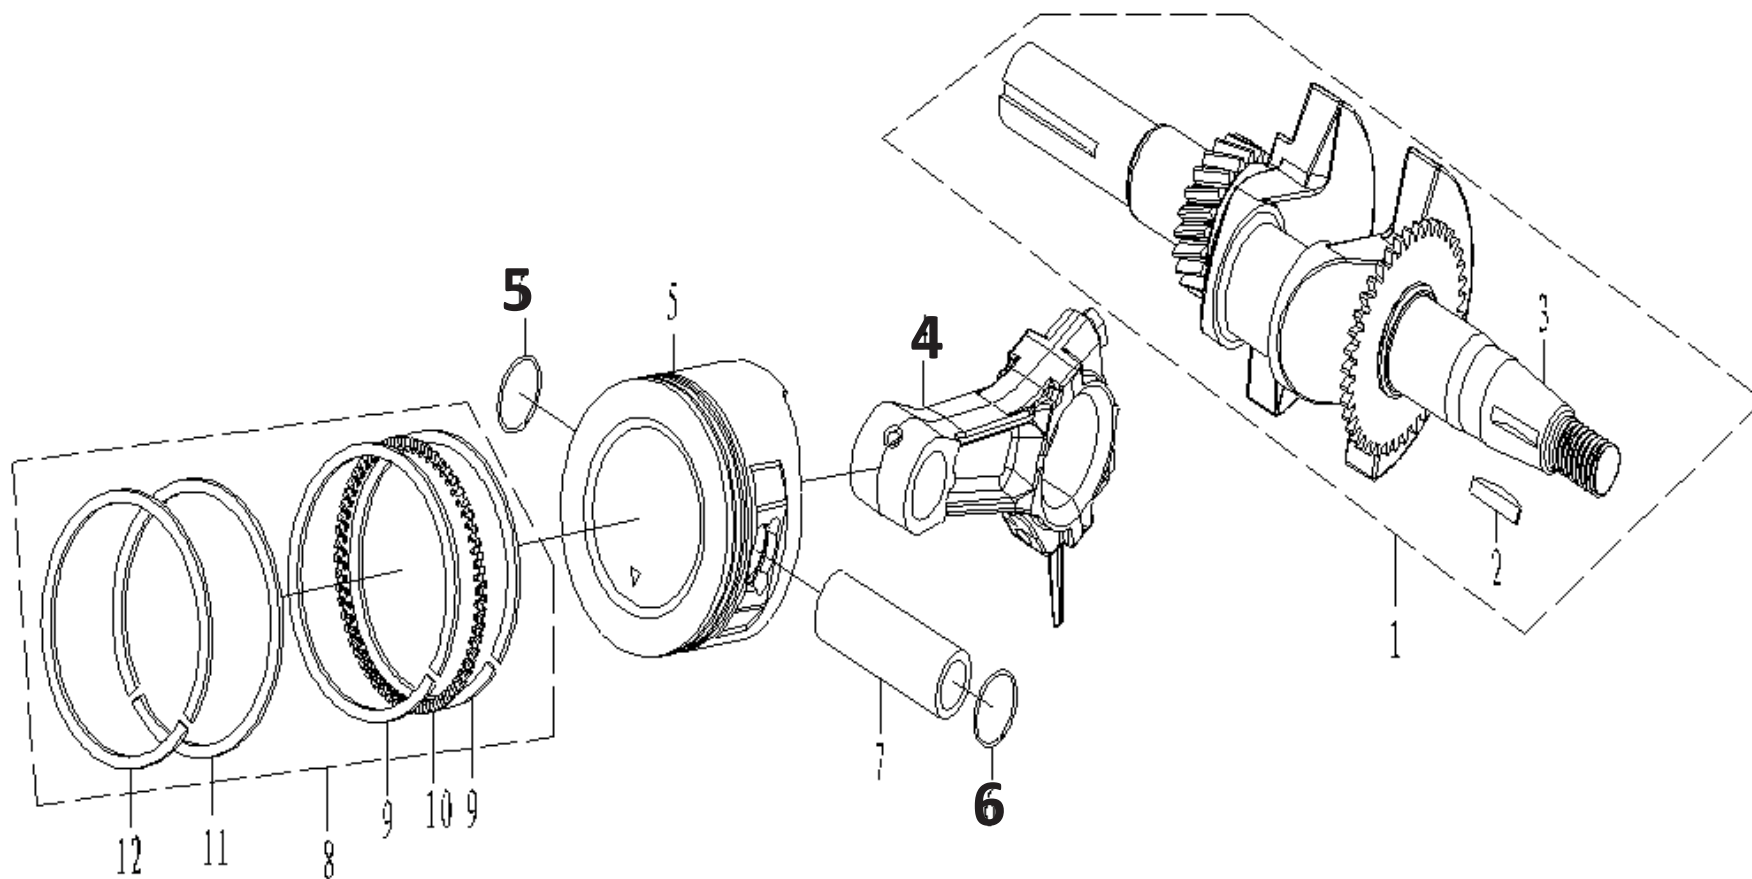


| SL NO | PART NO       | DESCRIPTION          | SL NO | PART NO | DESCRIPTION |
|-------|---------------|----------------------|-------|---------|-------------|
| 1     | AM-170FP-EE01 | CRANK SHAFT ASSY     |       |         |             |
| 2     | AM-170FP-EE02 | SPECIAL WOODRUFF KEY |       |         |             |
| 3     | AM-170FP-EE03 | CRANK SHAFT          |       |         |             |
| 4     | AM-170FP-EE04 | CONNECTING ROD ASSY  |       |         |             |
| 5     | AM-170FP-EE05 | PISTON               |       |         |             |
| 6     | AM-170FP-EE06 | CLIP PISTON PIN      |       |         |             |
| 7     | AM-170FP-EE07 | PIN PISTON           |       |         |             |
| 8     | AM-170FP-EE08 | PISTON RING ASSY     |       |         |             |
| 9     | AM-170FP-EE09 | FILM LOOP            |       |         |             |
| 10    | AM-170FP-EE10 | BUSH RING            |       |         |             |
| 11    | AM-170FP-EE11 | GAS RING TWO         |       |         |             |
| 12    | AM-170FP-EE12 | GAS RING ONE         |       |         |             |
|       |               |                      |       |         |             |
|       |               |                      |       |         |             |
|       |               |                      |       |         |             |
|       |               |                      |       |         |             |

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 16. Part 1 is a large gear or impeller. Part 2 is a shaft or pin. Part 3 is a long rod or pin. Part 4 is a bracket or plate. Part 5 is a housing or cover. Part 6 is a bolt or screw. Part 7 is a gasket or seal. Part 8 is a nut. Part 9 is a washer. Part 10 is a pulley or wheel. Part 11 is a shaft or pin. Part 12 is a pulley or wheel. Part 13 is a nut. Part 14 is a washer. Part 15 is a pulley or wheel. Part 16 is a small pin or screw. The diagram shows the assembly sequence from the gear (1) and shaft (2) through the intermediate components (3, 4, 5) to the final assembly with the pulley (10) and various fasteners (11-16).



| SL NO | PART NO       | DESCRIPTION               | SL NO | PART NO | DESCRIPTION |
|-------|---------------|---------------------------|-------|---------|-------------|
| 1     | AM-170FP-EF01 | CAMSHAFT ASSY             |       |         |             |
| 2     | AM-170FP-EF02 | VALVE LIFTER              |       |         |             |
| 3     | AM-170FP-EF03 | PUSH ROD                  |       |         |             |
| 4     | AM-170FP-EF04 | PUSH ROD GUIDE PLATE      |       |         |             |
| 5     | AM-170FP-EF05 | VALVE ROCKER ARM ASSY     |       |         |             |
| 6     | AM-170FP-EF06 | PIVOT BOLT                |       |         |             |
| 7     | AM-170FP-EF07 | VALVE ROCKER ARM          |       |         |             |
| 8     | AM-170FP-EF08 | VALVE ADJUSTING NUT       |       |         |             |
| 9     | AM-170FP-EF09 | PIVOT LOCKING NUT         |       |         |             |
| 10    | AM-170FP-EF10 | INLET VALVE               |       |         |             |
| 11    | AM-170FP-EF11 | EXHAUST VALVE             |       |         |             |
| 12    | AM-170FP-EF12 | VALVE SEAL                |       |         |             |
| 13    | AM-170FP-EF13 | VALVE SPRING              |       |         |             |
| 14    | AM-170FP-EF14 | INTAKE VALVE SPRING SEAT  |       |         |             |
| 15    | AM-170FP-EF15 | EXHAUST VALVE SPRING SEAT |       |         |             |
| 16    | AM-170FP-EF16 | EX. VALVE ADJUSTER        |       |         |             |

## STARTER ASSY - G

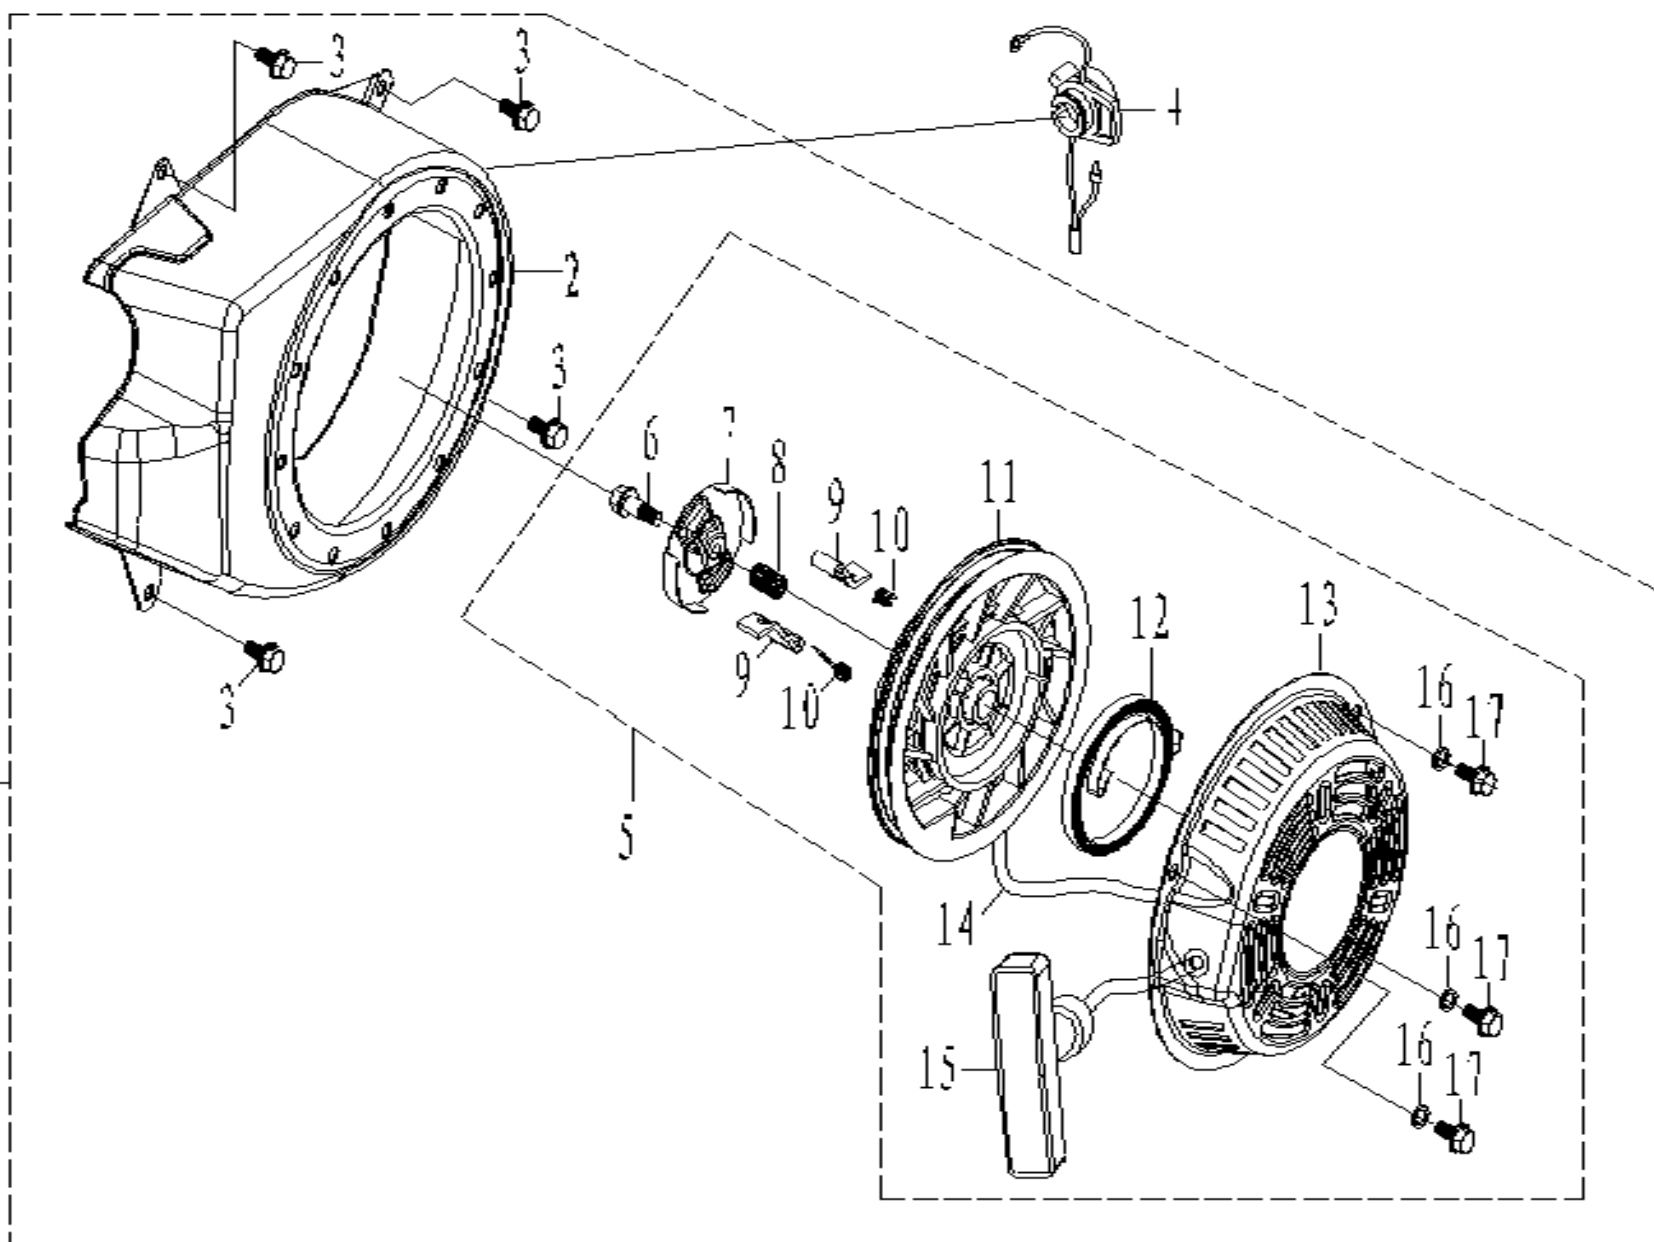

| SL NO | PART NO       | DESCRIPTION               | SL NO | PART NO | DESCRIPTION |
|-------|---------------|---------------------------|-------|---------|-------------|
| 1     | AM-170FP-EG01 | RECOIL STARTER ASSY       |       |         |             |
| 2     | AM-170FP-EG02 | WIND SCOOPER              |       |         |             |
| 3     | AM-170FP-EG03 | BOLT                      |       |         |             |
| 4     | AM-170FP-EG04 | ENGINE STOP SWITH ASSY    |       |         |             |
| 5     | AM-170FP-EG05 | RECOIL STARTER COMP       |       |         |             |
| 6     | AM-170FP-EG06 | CENTER POSITION BOLT      |       |         |             |
| 7     | AM-170FP-EG07 | GUIDE RATCHET             |       |         |             |
| 8     | AM-170FP-EG08 | CENTER POSITION SPRING    |       |         |             |
| 9     | AM-170FP-EG09 | STARTER RATCHET           |       |         |             |
| 10    | AM-170FP-EG10 | RETURN SPRING             |       |         |             |
| 11    | AM-170FP-EG11 | RECOIL STARTER REEL       |       |         |             |
| 12    | AM-170FP-EG12 | STARTER RETURN SPRING     |       |         |             |
| 13    | AM-170FP-EG13 | RECOIL STARTER COVER COMP |       |         |             |
| 14    | AM-170FP-EG14 | RECOIL STARTER ROPE       |       |         |             |
| 15    | AM-170FP-EG15 | HANDLE STARTER            |       |         |             |
| 16    | AM-170FP-EG16 | RECOIL STARTER ASSY       |       |         |             |
| 17    | AM-170FP-EG17 | BOLT                      |       |         |             |

## INLET ASSY - H

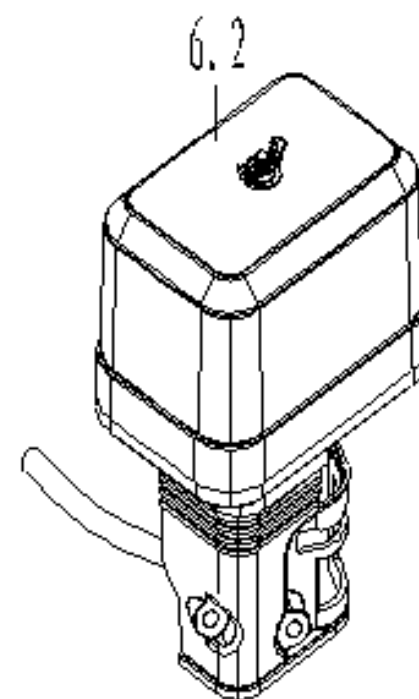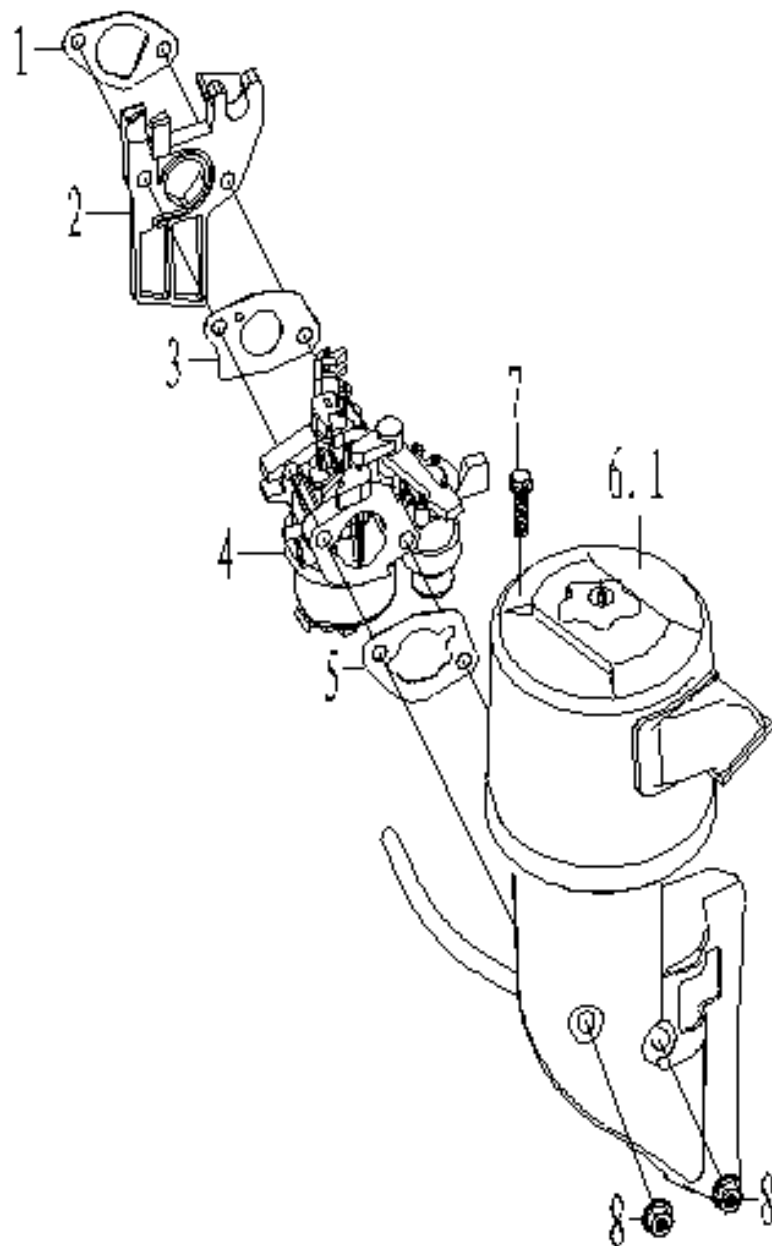


[illegible]

| SL NO | PART NO       | DESCRIPTION                     |
|-------|---------------|---------------------------------|
| 1     | AM-170FP-EJ01 | AIR CLEANER ASSY                |
| 2     | AM-170FP-EJ02 | AIR CLEANER CASE                |
| 3     | AM-170FP-EJ03 | WASTE GAS PIPE                  |
| 4     | AM-170FP-EJ04 | PACKING                         |
| 5     | AM-170FP-EJ05 | Air filter oil filter oil cup   |
| 6     | AM-170FP-EJ06 | AIR CLEANER SPENGE ELEMENT      |
| 7     | AM-170FP-EJ07 | AIR CLEANER SPENGE ELEMENT      |
| 8     | AM-170FP-EJ08 | SEAL COVER                      |
| 9     | AM-170FP-EJ09 | AIR CLEANER SPENGE ELEMENT      |
| 10    | AM-170FP-EJ10 | BUTTERFLY NUT                   |
| 11    | AM-170FP-EJ11 | AIR CLEANER COVER               |
| 12    | AM-170FP-EJ12 | Air filter cover locking handle |
|       |               |                                 |
|       |               |                                 |


| SL NO | PART NO       | DESCRIPTION                     |
|-------|---------------|---------------------------------|
| 1     | AM-170FP-EJ01 | AIR CLEANER ASSY                |
| 2     | AM-170FP-EJ02 | AIR CLEANER CASE                |
| 3     | AM-170FP-EJ03 | WASTE GAS PIPE                  |
| 4     | AM-170FP-EJ04 | PACKING                         |
| 5     | AM-170FP-EJ05 | Air filter oil filter oil cup   |
| 6     | AM-170FP-EJ06 | AIR CLEANER SPENGE ELEMENT      |
| 7     | AM-170FP-EJ07 | AIR CLEANER SPENGE ELEMENT      |
| 8     | AM-170FP-EJ08 | SEAL COVER                      |
| 9     | AM-170FP-EJ09 | AIR CLEANER SPENGE ELEMENT      |
| 10    | AM-170FP-EJ10 | BUTTERFLY NUT                   |
| 11    | AM-170FP-EJ11 | AIR CLEANER COVER               |
| 12    | AM-170FP-EJ12 | Air filter cover locking handle |
|       |               |                                 |
|       |               |                                 |

## CARBURETOR CIRCUIT ASSY - K

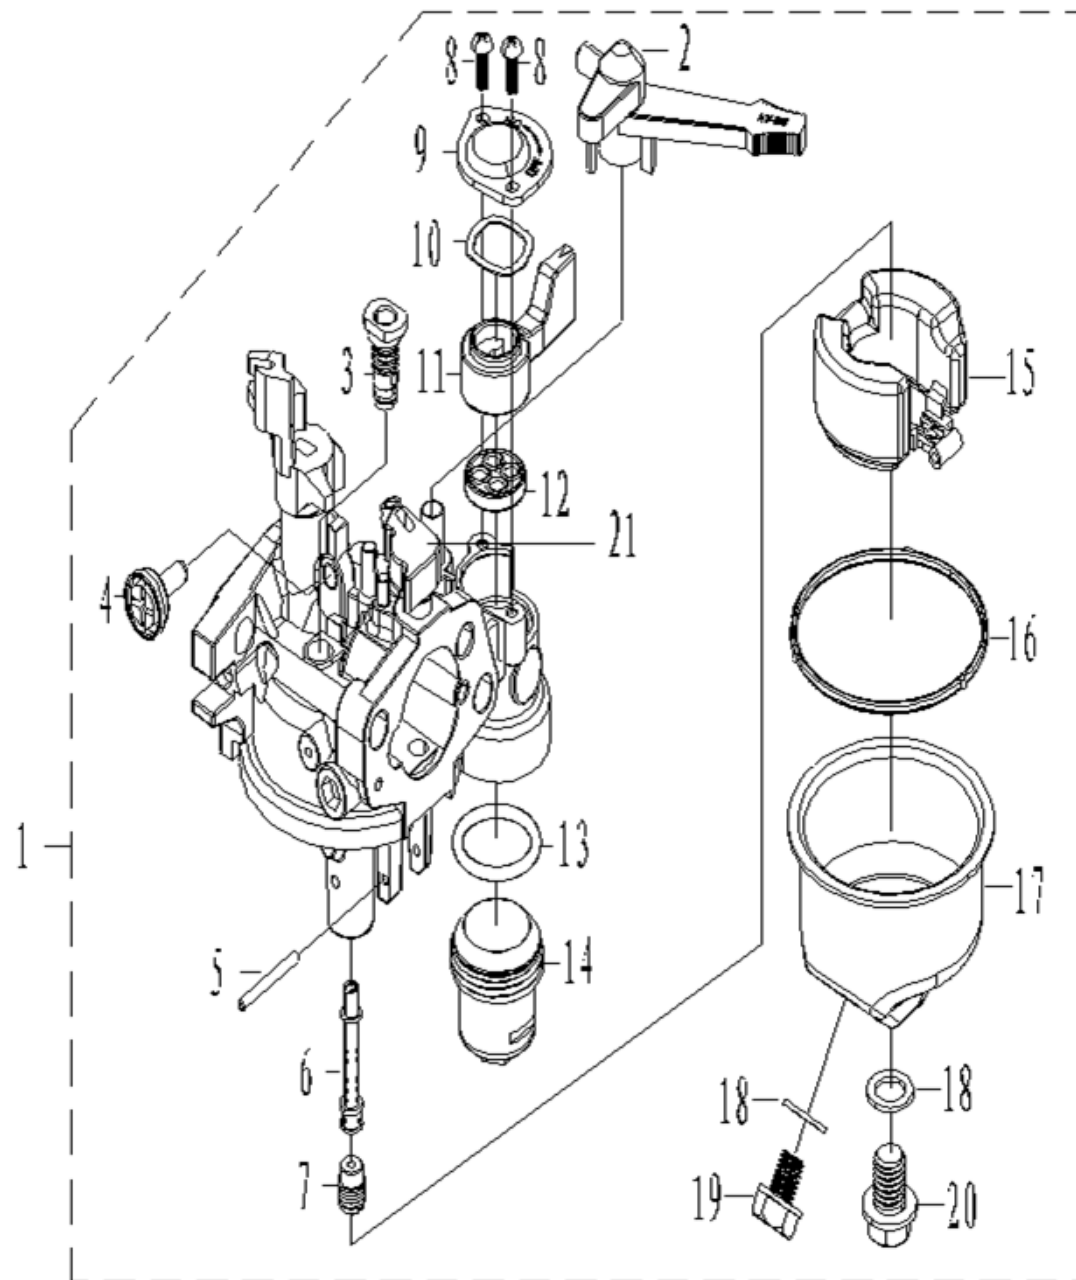


| SL NO | PART NO       | DESCRIPTION             | SL NO | PART NO       | DESCRIPTION     |
|-------|---------------|-------------------------|-------|---------------|-----------------|
| 1     | AM-170FP-EK01 | CARBURETOR              | 17    | AM-170FP-EK17 | WASHER          |
| 2     | AM-170FP-EK02 | CHOKE PLATE HANDLE      | 18    | AM-170FP-EK18 | GASKET          |
| 3     | AM-170FP-EK03 | IDLE HOLE COMPONENT     | 19    | AM-170FP-EK19 | DRAIN PLUG BOLT |
| 4     | AM-170FP-EK04 | PILOT JET SET           | 20    | AM-170FP-EK20 | BOLT            |
| 5     | AM-170FP-EK05 | PIN                     | 21    | AM-170FP-EK21 | CHOKE SHAFT     |
| 6     | AM-170FP-EK06 | MAIN NOZZLE             |       |               |                 |
| 7     | AM-170FP-EK07 | MAIN JET                |       |               |                 |
| 8     | AM-170FP-EK08 | SCREW                   |       |               |                 |
| 9     | AM-170FP-EK09 | FUEL SWITCH COVER PLATE |       |               |                 |
| 10    | AM-170FP-EK10 | WASHER                  |       |               |                 |
| 11    | AM-170FP-EK11 | FUEL SWITCH HANDLE      |       |               |                 |
| 12    | AM-170FP-EK12 | FUEL SWITCH SEAL        |       |               |                 |
| 13    | AM-170FP-EK13 | SEDIMENT BOWL SEAL      |       |               |                 |
| 14    | AM-170FP-EK14 | SEDIMENT BOWL           |       |               |                 |
| 15    | AM-170FP-EK15 | FLOAT SET               |       |               |                 |
| 16    | AM-170FP-EK16 | FLOAT CHAMBER SET       |       |               |                 |

# THROTTLE CONTROL ASSY - L

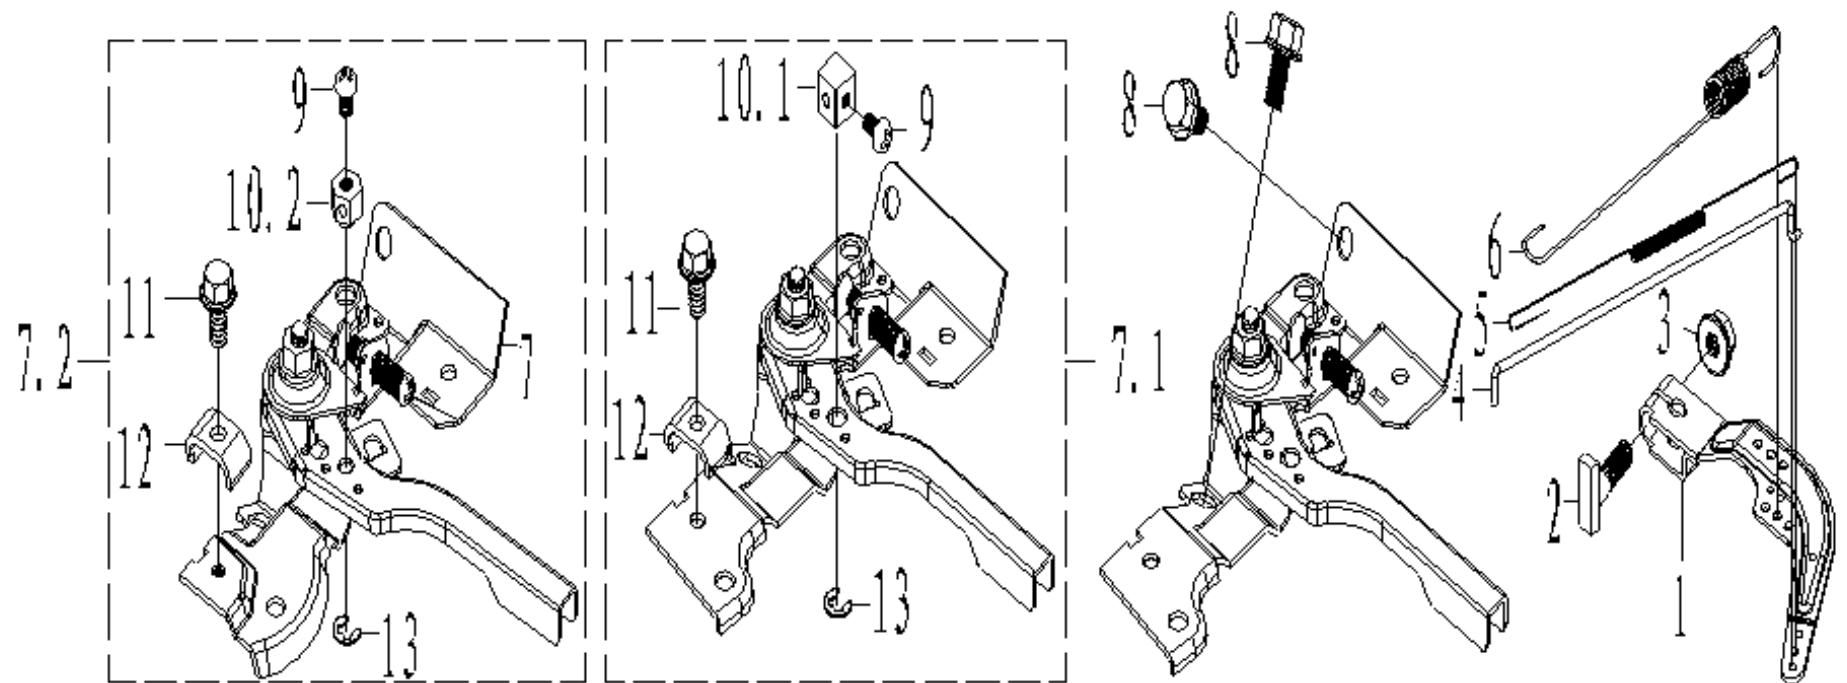


| SL NO | PART NO         | DESCRIPTION            | SL NO | PART NO | DESCRIPTION |
|-------|-----------------|------------------------|-------|---------|-------------|
| 1     | AM-170FP-EL01   | GOVERNOR ARM           |       |         |             |
| 2     | AM-170FP-EL02   | T-SHAPE BOLT           |       |         |             |
| 3     | AM-170FP-EL03   | NUT                    |       |         |             |
| 4     | AM-170FP-EL04   | TIE ROD                |       |         |             |
| 5     | AM-170FP-EL05   | FINE ADJUSTMENT SPRING |       |         |             |
| 6     | AM-170FP-EL06   | GOVERNING SPRING       |       |         |             |
| 7.1   | AM-170FP-EL07   | CONTROL ASSY           |       |         |             |
| 7.2   | AM-170FP-EL08   | CONTROL ASSY           |       |         |             |
| 8     | AM-170FP-EL09   | BOLT                   |       |         |             |
| 9     | AM-170FP-EL10   | SCREW                  |       |         |             |
| 10.1  | AM-170FP-EL10.1 | WIRE TERMINAL          |       |         |             |
| 10.2  | AM-170FP-EL10.2 | WIRE TERMINAL          |       |         |             |
| 11    | AM-170FP-EL11   | BOLT                   |       |         |             |
| 12    | AM-170FP-EL12   | PRESS LINE BOARD       |       |         |             |
| 13    | AM-170FP-EL13   | SPLIT WASHER           |       |         |             |
|       |                 |                        |       |         |             |

## FLYWHEEL AND IGNITION ASSY -M

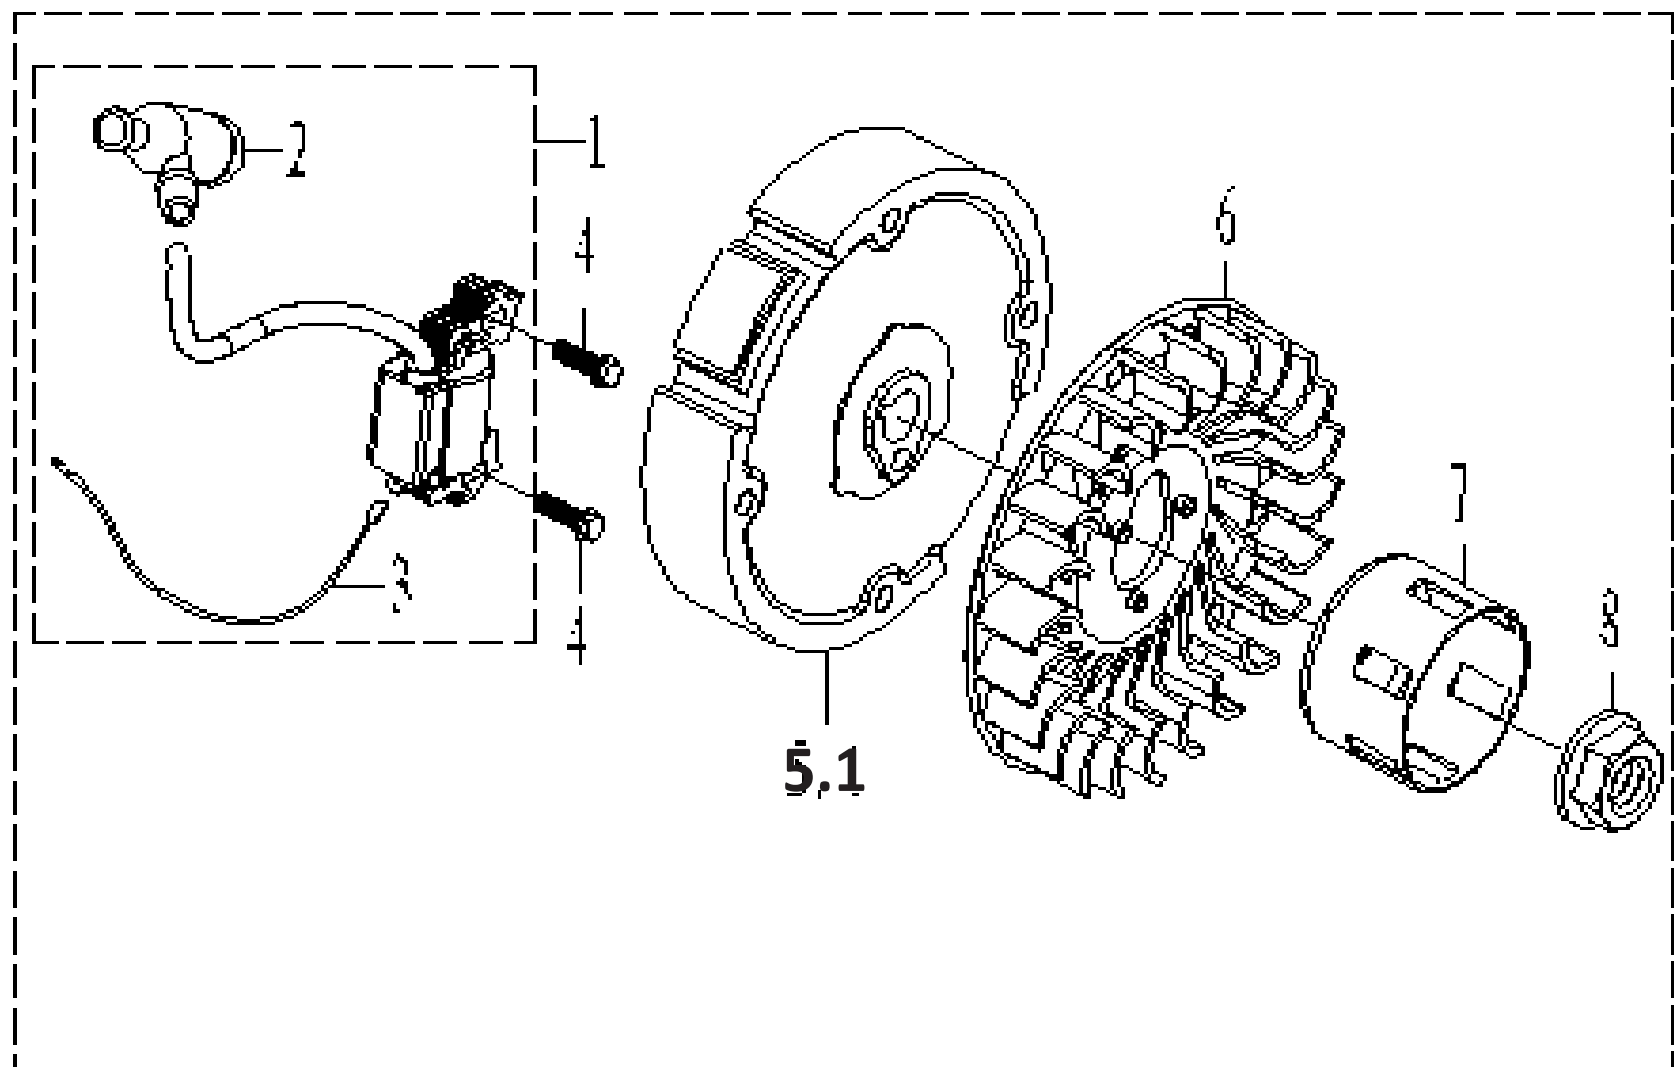


## FLYWHEEL AND IGNITION ASSY -M

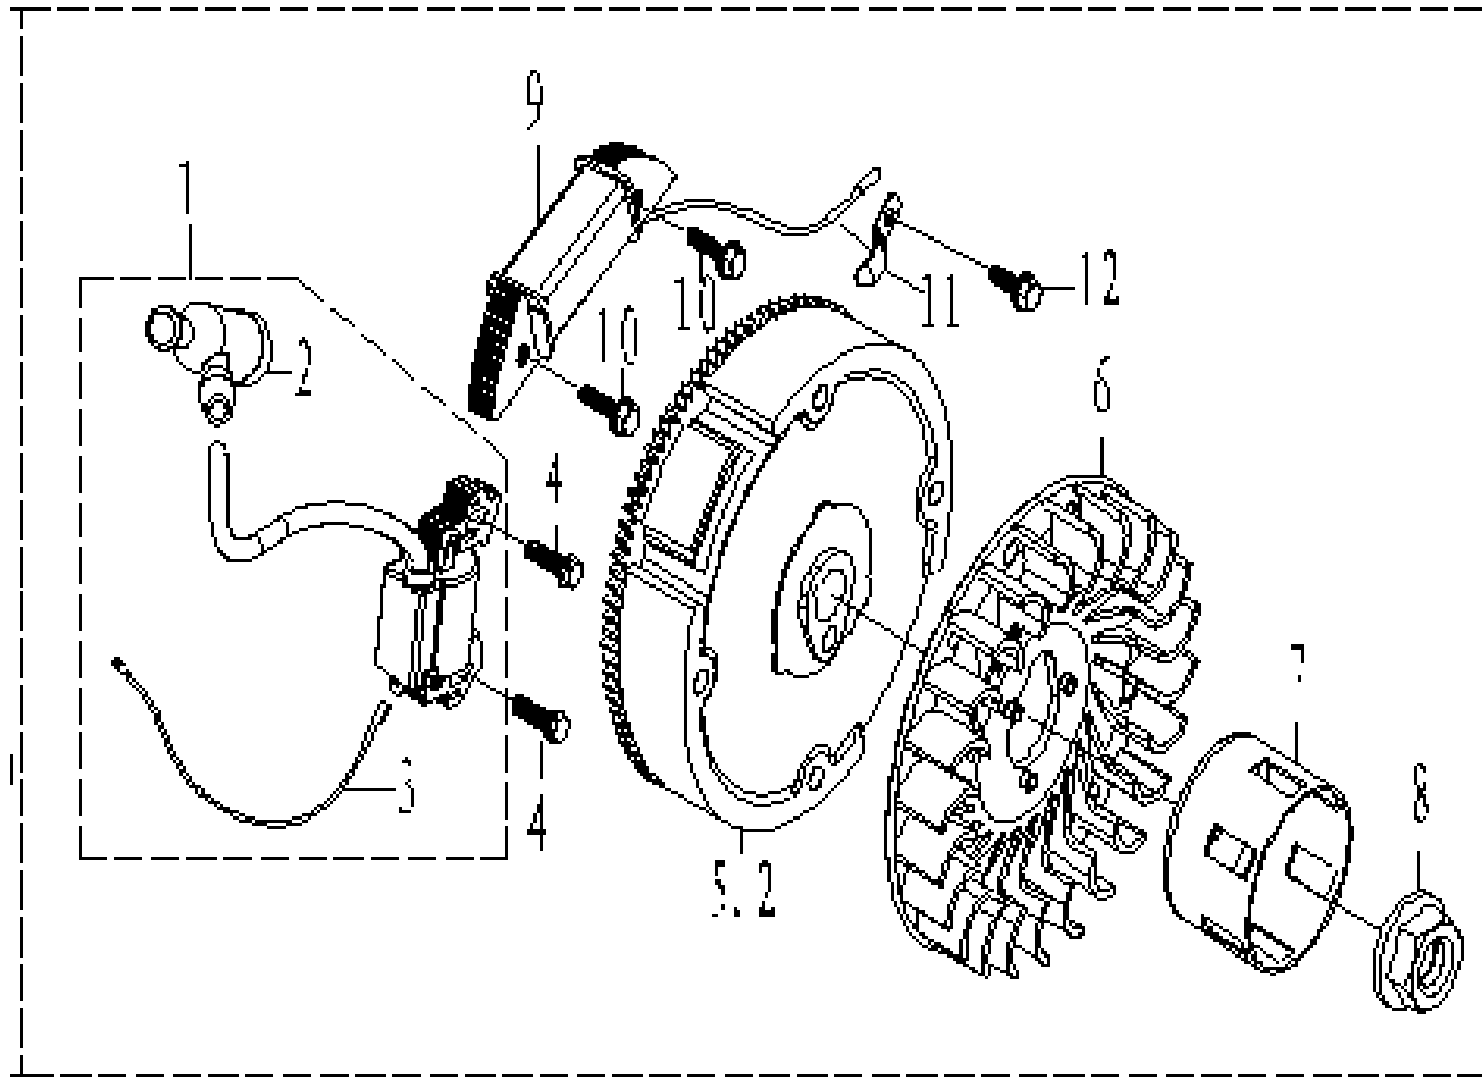


| SL NO | PART NO        | DESCRIPTION      | SL NO | PART NO | DESCRIPTION |
|-------|----------------|------------------|-------|---------|-------------|
| 1     | AM-170FP-EM01  | IGNITION         |       |         |             |
| 2     | AM-170FP-EM02  | IGNITION CAP     |       |         |             |
| 3     | AM-170FP-EM03  | CORD STOP SWITCH |       |         |             |
| 4     | AM-170FP-EM04  | BOLT             |       |         |             |
| 5.1   | AM-170FP-EM5.1 | FLYWEEL          |       |         |             |
| 5.2   | AM-170FP-EM5.2 | FLYWEEL          |       |         |             |
| 6     | AM-170FP-EM06  | COOLING FAN      |       |         |             |
| 7     | AM-170FP-EM07  | STARTER PULLEY   |       |         |             |
| 8     | AM-170FP-EM08  | NUT              |       |         |             |
| 9     | AM-170FP-EM09  | CHARGE COIL ASSY |       |         |             |
| 10    | AM-170FP-EM10  | NUT              |       |         |             |
| 11    | AM-170FP-EM11  | CLAMPING PLATE   |       |         |             |
| 12    | AM-170FP-EM12  | NUT              |       |         |             |
|       |                |                  |       |         |             |
|       |                |                  |       |         |             |
|       |                |                  |       |         |             |

## EXHAUST ASSY - N

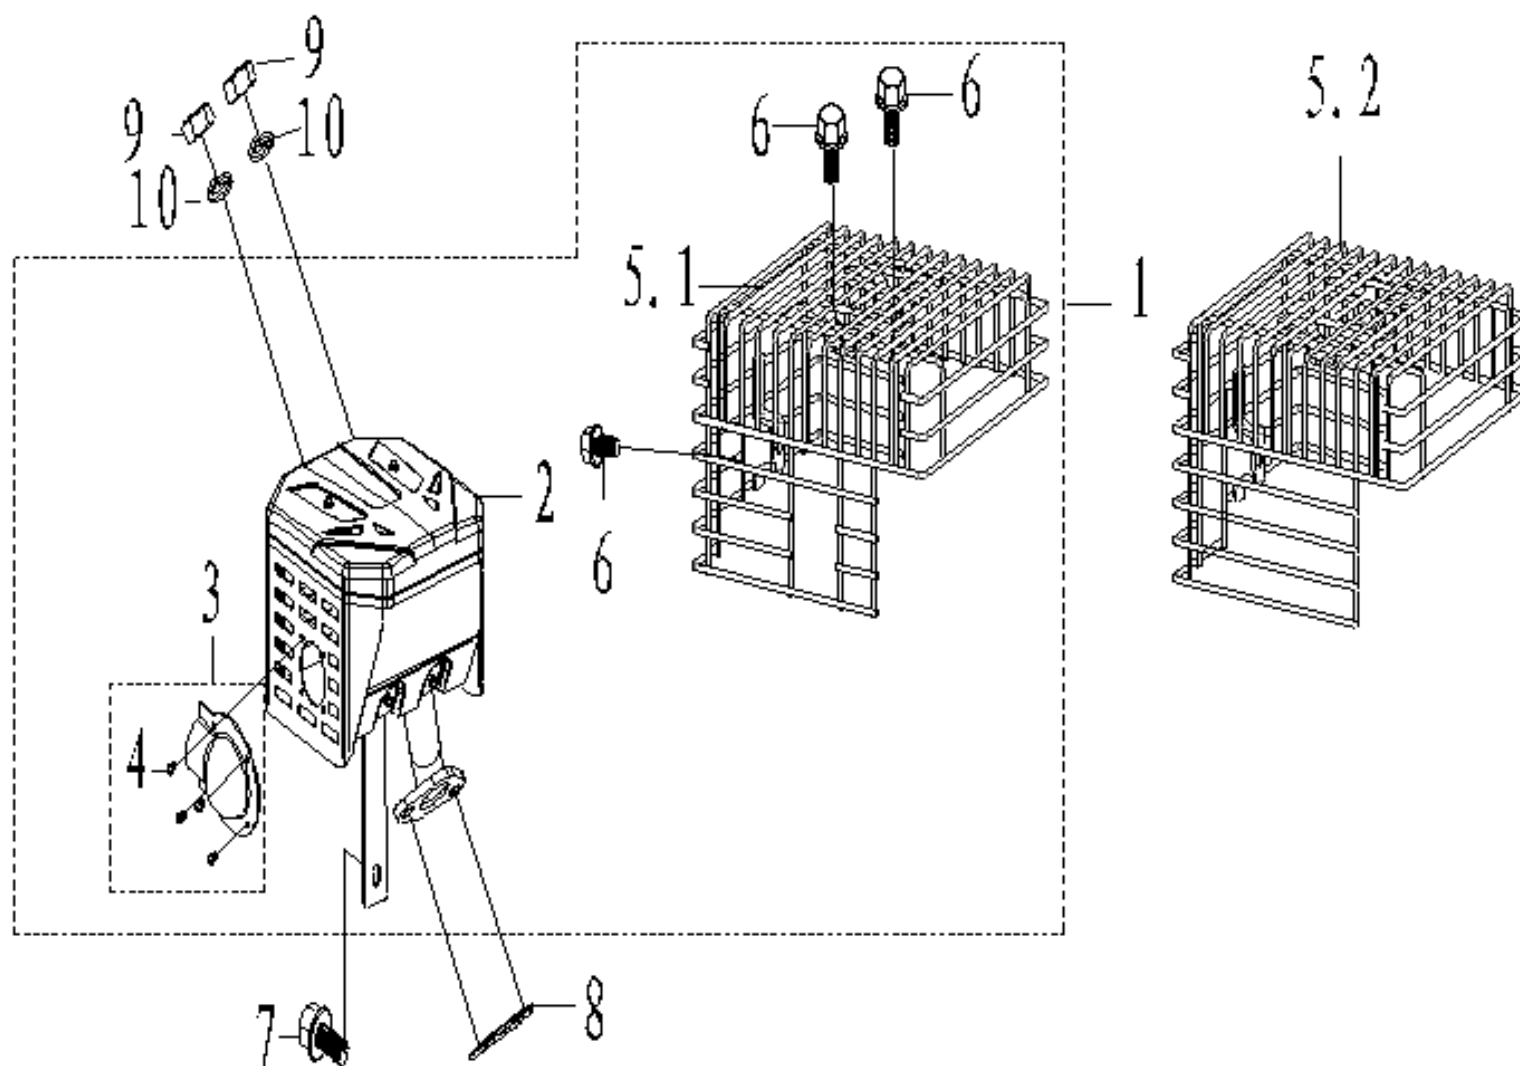


[illegible]

# FULE OIL ASSY-P

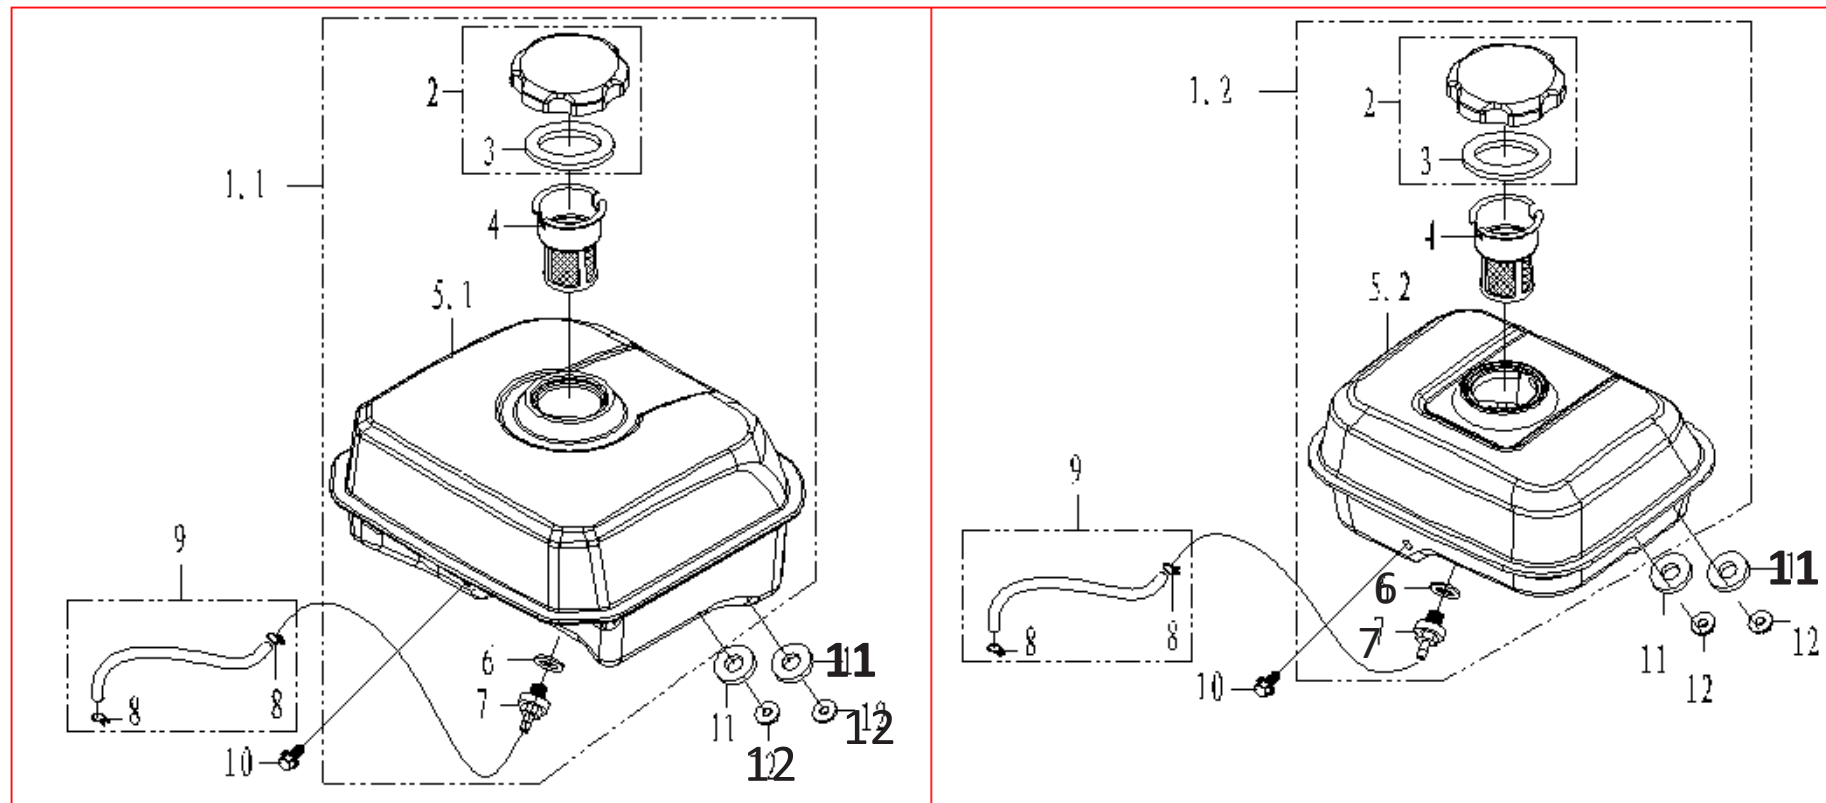


| SL NO | PART NO        | DESCRIPTION          | SL NO | PART NO | DESCRIPTION |
|-------|----------------|----------------------|-------|---------|-------------|
| 1.1   | AM-170FP-EP1.1 | TANK FUEL COMP       |       |         |             |
| 1.2   | AM-170FP-EP1.2 | TANK FUEL COMP       |       |         |             |
| 2     | AM-170FP-EP02  | FUEL FILLER CAP COMP |       |         |             |
| 3     | AM-170FP-EP03  | FUEL FILLER PACKING  |       |         |             |
| 4     | AM-170FP-EP04  | FILTER FUEL          |       |         |             |
| 5.1   | AM-170FP-EP5.1 | FUEL TANK            |       |         |             |
| 5.2   | AM-170FP-EP5.2 | FUEL TANK            |       |         |             |
| 6     | AM-170FP-EP06  | PACKING              |       |         |             |
| 7     | AM-170FP-EP07  | FUEL TANK JOINT      |       |         |             |
| 8     | AM-170FP-EP08  | TUBE CLIP            |       |         |             |
| 9     | AM-170FP-EP09  | FUEL TUBE            |       |         |             |
| 10    | AM-170FP-EP10  | BOLT                 |       |         |             |
|       |                |                      |       |         |             |
|       |                |                      |       |         |             |
|       |                |                      |       |         |             |
|       |                |                      |       |         |             |

## WIND DEFECLECTOR - Q

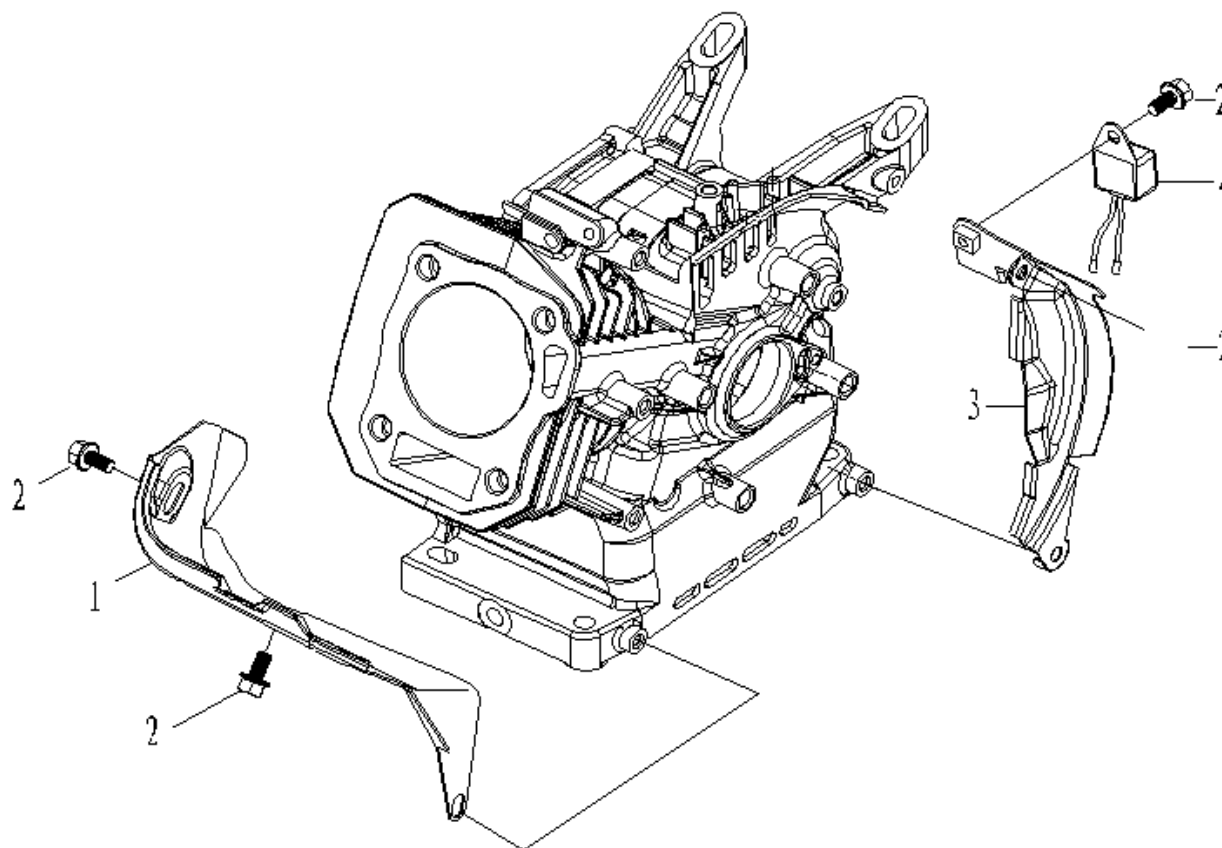

| SL NO | PART NO       | DESCRIPTION        | SL NO | PART NO | DESCRIPTION |
|-------|---------------|--------------------|-------|---------|-------------|
| 1     | AM-170FP-EQ01 | WINDSHIELD         |       |         |             |
| 2     | AM-170FP-EQ02 | BOLT               |       |         |             |
| 3     | AM-170FP-EQ03 | SHROUD COMP        |       |         |             |
| 4     | AM-170FP-EQ04 | PROTECTIVE BREAKER |       |         |             |

## REDUCTION ASSY - R

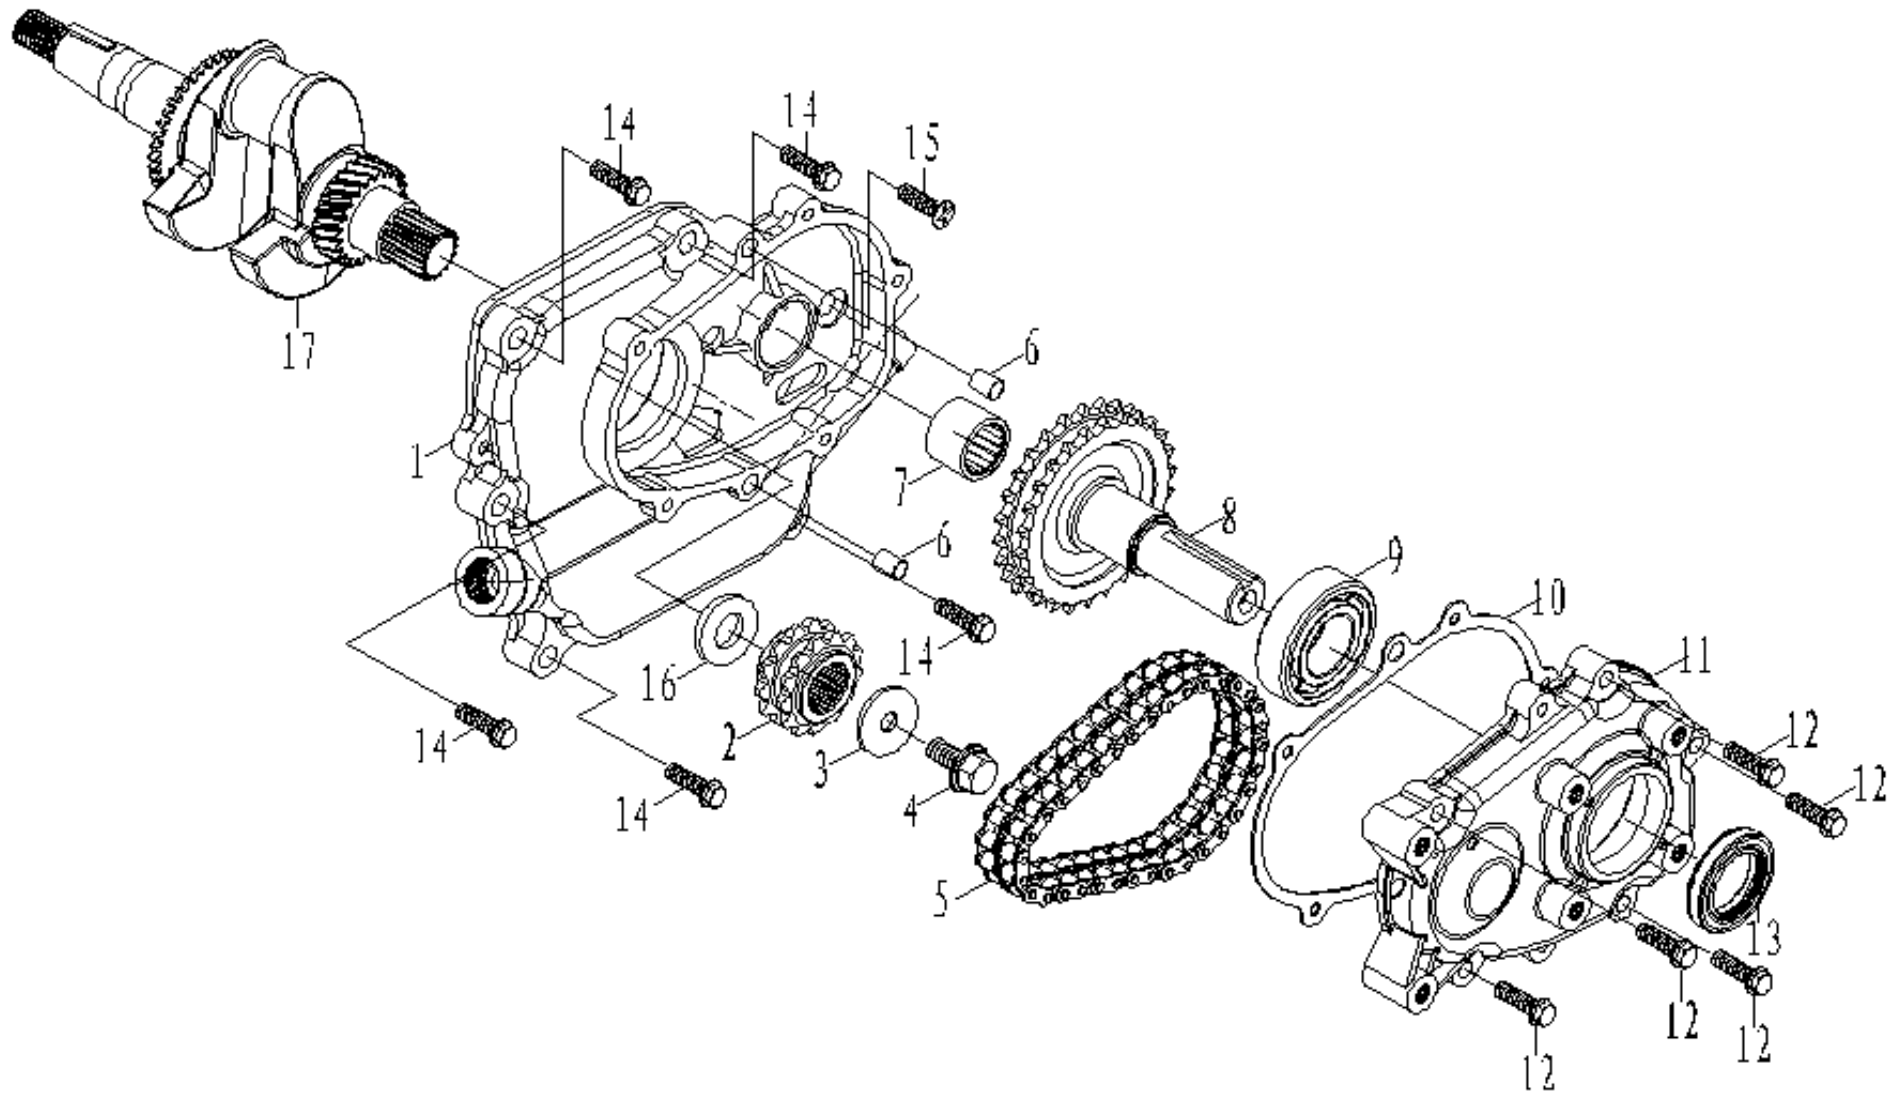

| SL NO | PART NO       | DESCRIPTION             | SL NO | PART NO       | DESCRIPTION      |
|-------|---------------|-------------------------|-------|---------------|------------------|
| 1     | AM-170FP-ER01 | CRANKCASE COVER ASSY    | 12    | AM-170FP-ER12 | BOLT             |
| 2     | AM-170FP-ER02 | DRIVE SPROCKET WHEEL    | 13    | AM-170FP-ER13 | OIL SEAL         |
| 3     | AM-170FP-ER03 | WASHER                  | 14    | AM-170FP-ER14 | BOLT             |
| 4     | AM-170FP-ER04 | BOLT                    | 15    | AM-170FP-ER15 | SCREW            |
| 5     | AM-170FP-ER05 | CHAIN COMP              | 16    | AM-170FP-ER16 | WASHER           |
| 6     | AM-170FP-ER06 | DOWEL PIN               | 17    | AM-170FP-ER17 | CRANK SHAFT ASSY |
| 7     | AM-170FP-ER07 | BEARING                 |       |               |                  |
| 8     | AM-170FP-ER08 | DRIVEN SPROCKET WHEEL   |       |               |                  |
| 9     | AM-170FP-ER09 | BEARING                 |       |               |                  |
| 10    | AM-170FP-ER10 | PACKING                 |       |               |                  |
| 11    | AM-170FP-ER11 | REDUCTION GEARBOX COVER |       |               |                  |
|       |               |                         |       |               |                  |
|       |               |                         |       |               |                  |
|       |               |                         |       |               |                  |

## INSPECTION & MAINTAINANCE

For safety use, make sure the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzle and ensure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.

Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

# WARRANTY CARD

## CUSTOMER COPY

|                                                                            |                          |                             |                    |
|----------------------------------------------------------------------------|--------------------------|-----------------------------|--------------------|
| DATE _____                                                                 | DATE OF DELIVERY _____   | DEALERS OFFICIAL SEAL _____ | DEALERS SIGN _____ |
| PURCHASERS NAME & ADDRESS _____<br>_____<br>_____                          | <div>CUSTOMER SIGN</div> | <div></div>                 |                    |
| PRODUCT NAME                                                               | PRODUCT SERIAL NO.       | INVOICE/DN NO.              |                    |
| <div></div>                                                                | <div></div>              | <div></div>                 |                    |
| I/Will accept the terms and conditions of warranty as in the warranty card |                          |                             |                    |

## DEALERS COPY

|                                                                            |                          |                             |                    |
|----------------------------------------------------------------------------|--------------------------|-----------------------------|--------------------|
| DATE _____                                                                 | DATE OF DELIVERY _____   | DEALERS OFFICIAL SEAL _____ | DEALERS SIGN _____ |
| PURCHASERS NAME & ADDRESS _____<br>_____<br>_____                          | <div>CUSTOMER SIGN</div> | <div></div>                 |                    |
| PRODUCT NAME                                                               | PRODUCT SERIAL NO.       | INVOICE/DN NO.              |                    |
| <div></div>                                                                | <div></div>              | <div></div>                 |                    |
| I/Will accept the terms and conditions of warranty as in the warranty card |                          |                             |                    |

## COMPANY COPY

|                                                                            |                          |                             |                    |
|----------------------------------------------------------------------------|--------------------------|-----------------------------|--------------------|
| DATE _____                                                                 | DATE OF DELIVERY _____   | DEALERS OFFICIAL SEAL _____ | DEALERS SIGN _____ |
| PURCHASERS NAME & ADDRESS _____<br>_____<br>_____                          | <div>CUSTOMER SIGN</div> | <div></div>                 |                    |
| PRODUCT NAME                                                               | PRODUCT SERIAL NO.       | INVOICE/DN NO.              |                    |
| <div></div>                                                                | <div></div>              | <div></div>                 |                    |
| I/Will accept the terms and conditions of warranty as in the warranty card |                          |                             |                    |

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if  
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.  
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.  
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.  
6. Loss of any nature due to operation or non-operation is not covered under warranty.  
7. All free service are at Dealer's service point only.  
8. Warranty ceases if service is not done periodically.  
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.  
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.  
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.  
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.  
WARRANTY null & void if  
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.  
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.  
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.  
6. Loss of any nature due to operation or non-operation is not covered under warranty.  
7. All free service are at Dealer's service point only.  
8. Warranty ceases if service is not done periodically.  
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.  
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.  
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.  
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.  
WARRANTY null & void if  
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.  
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.  
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.  
6. Loss of any nature due to operation or non-operation is not covered under warranty.  
7. All free service are at Dealer's service point only.  
8. Warranty ceases if service is not done periodically.  
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.  
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.  
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.  
12. All disputes are subject to Bangalore Courts Jurisdiction

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |  |                   |      |  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-------------------|------|--|
| MODEL               |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |  | SERIAL NUMBER     |      |  |
| PDI DATE            | SERVICE NO.                                                                                                                                                                                                                                                                                                                                                                                                                                      |  | PURCHASE BILL NO. | DATE |  |
|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |  |                   |      |  |
| DEALERS OFFICE SEAL | OPERATIONS                                                                                                                                                                                                                                                                                                                                                                                                                                       |  |                   |      |  |
|                     | <ol style="list-style-type: none"> <li>1. Check and test the fuel mixture</li> <li>2. check and clean the air filter</li> <li>3. Check , clean and adjust the spark plug</li> <li>4. Check and adjust the carburetor tuning</li> <li>5. Check and sparken the cutting tools</li> <li>6. Product familiarisation on usage</li> <li>7. Start and check the noise, vibration, loosen etc..</li> <li>8. Routine maintenance and shortage.</li> </ol> |  |                   |      |  |

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |  |                   |      |  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-------------------|------|--|
| MODEL               |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |  | SERIAL NUMBER     |      |  |
| PDI DATE            | SERVICE NO.                                                                                                                                                                                                                                                                                                                                                                                                                                      |  | PURCHASE BILL NO. | DATE |  |
|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |  |                   |      |  |
| DEALERS OFFICE SEAL | OPERATIONS                                                                                                                                                                                                                                                                                                                                                                                                                                       |  |                   |      |  |
|                     | <ol style="list-style-type: none"> <li>1. Check and test the fuel mixture</li> <li>2. check and clean the air filter</li> <li>3. Check , clean and adjust the spark plug</li> <li>4. Check and adjust the carburetor tuning</li> <li>5. Check and sparken the cutting tools</li> <li>6. Product familiarisation on usage</li> <li>7. Start and check the noise, vibration, loosen etc..</li> <li>8. Routine maintenance and shortage.</li> </ol> |  |                   |      |  |


**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |  |                   |      |  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-------------------|------|--|
| MODEL               |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |  | SERIAL NUMBER     |      |  |
| PDI DATE            | SERVICE NO.                                                                                                                                                                                                                                                                                                                                                                                                                                      |  | PURCHASE BILL NO. | DATE |  |
|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |  |                   |      |  |
| DEALERS OFFICE SEAL | OPERATIONS                                                                                                                                                                                                                                                                                                                                                                                                                                       |  |                   |      |  |
|                     | <ol style="list-style-type: none"> <li>1. Check and test the fuel mixture</li> <li>2. check and clean the air filter</li> <li>3. Check , clean and adjust the spark plug</li> <li>4. Check and adjust the carburetor tuning</li> <li>5. Check and sparken the cutting tools</li> <li>6. Product familiarisation on usage</li> <li>7. Start and check the noise, vibration, loosen etc..</li> <li>8. Routine maintenance and shortage.</li> </ol> |  |                   |      |  |

# DOS & DONTs

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
9. For more query kindly contact for our Service Center/Dealer/ franchise

## AGRIMATE MULTI PURPOSE EQUIPMENT ANYWHERE - ANYTIME - ANY CROP

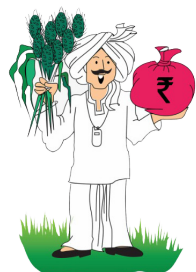

**ratnagiri<sup>®</sup>  
impex**

BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETING BY,

**RATNAGIRI IMPEX PVT., LTD.,**

**Annapurna House, #1 / 1G, 7th Cross, New**

**Guddadahalli Mysore Road, Bangalore - 560 026**

**Missed Call : 7393 938 938 Email: [ask@agrimart.in](mailto:ask@agrimart.in)**