

# AM-16PP-Pro **Knapsack Sprayer**



DISCLAIMER: DUE TO CONSTANT UPGRADATION, FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE



BEFORE OPERATING THIS MACHINE,
PLEASE READ THESE INSTRUCTIONS CAREFULLY

#### **CHECK YOUR SPRAYER**

- When barrel does not move, Gently hammer on the barrel cap or press it once inside by hand
- When no pressure is built in 10-12 strokes. Check weather liquid is finished or remove handle check pressure chamber from piston SK9/11 & SK9/12 & brass ball(valve) in are free movement if necessary replace them.
- When pressure is built up but spray is not proper open nozzle from top & clean it. If it is NTM nozzle adjust the spray as per your requirement
- If there is leakage from Trigger, nozzle, joints of fitting is found loose. Tight all nuts if found loose clean or replace rubber washer if necessary.
- Spare Parts guidance: locate the spare parts from the catalogue required in the pump or take to your nearest dealer.

#### **HOW TO OPERATE**

- Assembly of the sprayer as shown in figure printed on the Box
- Ensure that all the joints and threads are tight and in working order
- Connect the discharge line with the sprayer by means of screw type coupling.
- Fill the tank with liquid agro chemicals and replace the cap tightly
- Mount the sprayer on the back either from its front or back side with the help of adjustable straps depending upon right or left handed operation
- Use the sprayer by operating the handle with one hand hold the lance in the other hand and start spraying
- $\bullet$  The split design of components and directions of use is printed on the  $\ensuremath{\mathsf{Box}}$

## **CALIBRATION**

Calibration of sprayer as per IS: 1429:1985

## **SAFETY PRECAUTIONS**

- Keep the sprayer away from heat.
- Do not use if tank is found leakage
- In the extent of chocking the nozzle or any other part of equipment, proper tools should be used, it is dangerous to suck or blow air with mouth or correct it.


### **TECHNICAL SPECIFICATIONS**

Model	Knapsack Sprayer
Model No.	AM-16PP-Pro
Type of Sprayer	Piston Type
Tank Capacity	16Ltrs.
Filling Hole Dia	95mm
Working pressure	1kg/Sq.cm
Discharge/Min	500ml/min (minimum)
Volumetric Efficiency	85% min (minimum)
Cut off Device	Trigger Type (With Lock) 'A' Type
Delivery Hose Length	1.1Mtr
Spray Lance Length	560mm (minimum) 'B' Type
Hydraulic Spray Nozzle	Hollow cone type
Speed of Pump	16 cycles/Min. (Approximately)
Choice of Operation	Both hand operated

### **NOZZLE DISCHARGE SUPPLIED AS PER BUYER'S CHOICE**

- Strainer in clutch is a optional item therefore is not provided
- Lance nozzle cut off devices are sold along with sprayer "BIS" marked therefore not separately marked
- Back Rest cushion and strap cushion are optional items supplied in buyer's choice
- Standard parts & material used as per clause 4.1 of (IS: 3906: 1995)

DIAGRAM OF AM-16PP-PRO

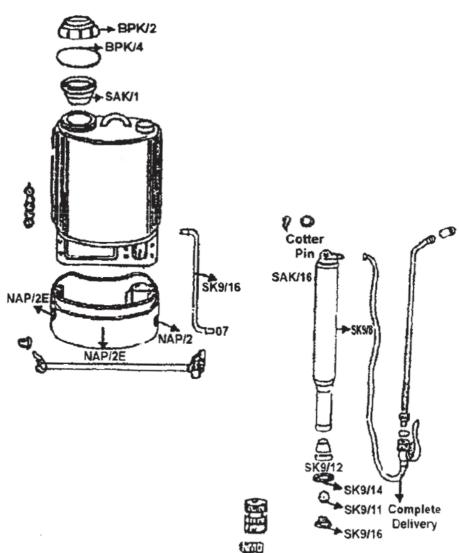

Maximum

AGRIMATE

A CONOMY

4 THE SUPER ECONOMY

A Language Power - Super Economy

BATE Super Economy

AGRIMATE AGRIFIATE AGRIFIATE AGRIFIATE AGRIFIATE **AM-16PP-PRO PART LIST** BPK/2 Tank Cap Big SAK/1 Filter Net NAP/T Tank NAP/2 Skirt NAP2/E Skirt Bush SK9/16 'Z' Rod SK9/8 Pressure Chamber SK9/12 Shikar Washer SK9/14 Piston Plate SK9/11 S.S Ball SK9/10 Pressure Chamber Brass AGRIMATE 5 THATE

### **INSPECTION & MAINTENANCE**

For safety use, make sure the machine is cleaned every three-months. Before working, make sure to inspect the filter and the nozzle, and ensure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase in order to repair or get the substitute.

Before Packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.



Meaning of crossed - out wheeled dustbin:

Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

Warranty Card	CUSTOMER COPY
Date	Date of Delivery
Purchaser's Name & Address	Date of Delivery
	Dealer's Office Seal
Product Name	
AM-16PP-Pro Knapsack Sprayer	
Product Serial No.	Dealer Sign
	Customer Sign.
Invoice / DN No.	I/We accept the terms and conditions of Warrant as in the Warranty Card.
Warranty Card	DEALER'S COPY
Date	
Purchaser's Name & Address	Date of Delivery
	2 1 / 0(5 - 0 )
	Dealer's Office Seal
	<del>2</del> \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
Product Name  AM-16PP-Pro Knapsack Sprayer	
Product Serial No.	Dealer Sign
Todact Condition	Customer Sign.
Invoice / DN No.	I/We accept the terms and conditions of Warrant
	as in the Warranty Card.
Warranty Card	COMPANY COPY
Date	
Purchaser's Name & Address	Date of Delivery
	Dealer's Office Seal
	564167 5 571105 5041
Product Name	
AM-16PP-Pro Knapsack Sprayer	
Product Serial No.	Dealer Sign
	Customer Sign.
Invoice / DN No.	I/We accept the terms and conditions of Warrant as in the Warranty Card.

1. LIMITED WARRANTY PERIOD: For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION: Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS: a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document.: b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

#### WARRANTY null & void if

- (ii) Lack of maintenance, (iii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (viii) Repair done by unauthorized service people, (viiii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc., (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction
- 1. LIMITED WARRANTY PERIOD: For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION: Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS: a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document.: b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.


#### WARRANTY null & void if

- (ii) Lack of maintenance, (iii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction
- 1. LIMITED WARRANTY PERIOD: For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION: Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS: a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document.: b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

#### WARRANTY null & void if

- (ii) Lack of maintenance, (iii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / colear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

M	1st Fr	ee Service Coupon	ISO 9001-2008 CERTIFIED COMPANY	Maxim
		30 Days / 20 hrs (Which ever is earl		Maxim
	Model AM-16PP-Pro Knapsack Sprayer	Serial Number	No.	
	PDI Date Service No.	Purchase bill no.	Date	A
	Service No.	Turchase bill no.		Maxim
	Dealer's Office Seal		Date  Date  Trk plug  Turing  Turing  Date  AND PREE SERVICE COUPO  Turing  Tu	
		Operations:  • Check and Test the Fuel Mixture.	S	Maxim
		<ul> <li>Check and Clean the Air Filter</li> <li>Check, Clean and Adjust the Spai</li> </ul>	rk plug	
		<ul> <li>Check and Adjust the Carburetor</li> <li>Check and Sharpen the cutting To</li> </ul>	Tuning	7
	Dealer Signature	Start and Check the Noise, Vibration     Product familiarization on Usage	tion, Loosen / Fasteners etc.	Maxim
		Routine maintenance and Storage	e NA	
	Customer Signature		ARF	
	Conditions: Operations listed have been performed to n	ny entire satisfaction without any labour charges. Or	nly consumables were charged.	Maxim
	AGRIFFATE agriculture   hor	ticulture   sericulture   plantations   forestry   garde	en I health care	
	Mar.			·
	and Fr	ee Service Coupon	ISO 9001-2008	Maxin
	MINISTERYOUTHEFUTURE, NOW	N 00 D (400 L (101) : 1	CERTIFIED COMPANY	
	Model	N 60 Days/100 hrs (Which ever is e Serial Number	arlier)	- A
	AM-16PP-Pro Knapsack Sprayer	GOTAL TAURISET	No	Maxin
	PDI Date Service No.	Purchase bill no.	Date	
			S S	A
	Dealer's Office Seal	Operations:	R	Maxir
		Check and Test the Fuel Mixture.     Check and Clean the Air Filter	Date  Date  Trk plug  Tuning	
		<ul> <li>Check, Clean and Adjust the Spain</li> </ul>	rk plug	A
		Check and Adjust the Carburetor     Check and Sharpen the cutting To	pols 9	Maxin
	Dealer Signature	Start and Check the Noise, Vibration     Product familiarization on Usage	tion, Loosen / Fasteners etc.	
	0 1 0 1	Routine maintenance and Storage	e RAN	A
	Customer Signature		VAR	Maxic
	Conditions: Operations listed have been performed to n	ticulture I sericulture I plantations I forestry I garde	,	
	AGRIFFATE agriculture I hor	illulule i senculture i piantations i forestry i garde	si i nealth care	Ą
	3rd Fr	ee Service Coupon		8
	ratnagiri impex	00 00.1.00 00apo	ISO 9001-2008 CERTIFIED COMPANY	
		N 90 Days/200 hrs (Which ever is e	arlier)	Maxir
	Model AM-16PP-Pro Knapsack Sprayer	Serial Number		
	PDI Date Service No.	Purchase bill no.	Date	
	Jervice No.	dichase bili no.		Maxir
	Dealer's Office Seal		rk plug Tuning	
		Operations: • Check and Test the Fuel Mixture.	ä	
		<ul> <li>Check and Clean the Air Filter</li> <li>Check, Clean and Adjust the Spai</li> </ul>	rk plug	Maxin
		Check and Adjust the Carburetor     Check and Sharpen the cutting To	Tuning and a second sec	
	Dealer Circums	Start and Check the Noise, Vibration     Product familiarization on Usage	tion, Loosen / Fasteners etc.	
	Dealer Signature	Routine maintenance and Storage	e	Maxim
	Customer Signature		88	
	Conditions: Operations listed have been performed to n	ny entire satisfaction without any labour charges. Ul	nly consumables were charged.	

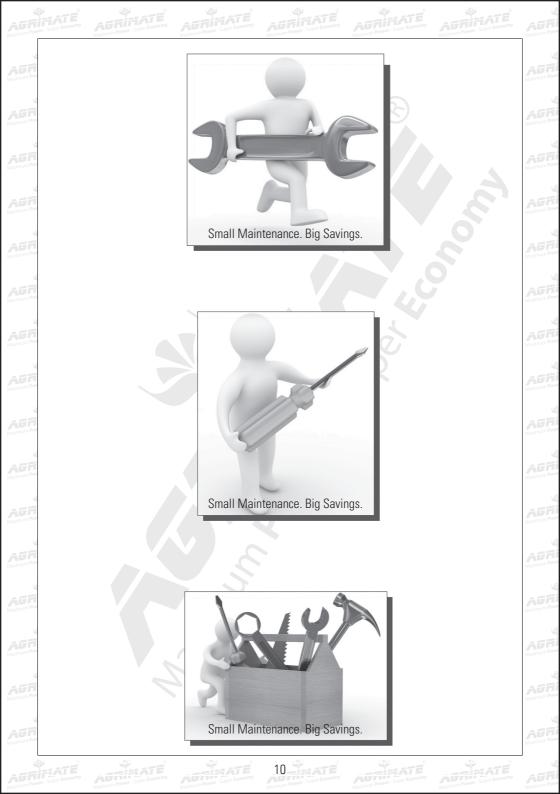

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these
  equipments.
- Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
- Always keep the equipments in good working condition to minimise loss of output as well as to reduce the pollution and save the environment.
- Do not use the machine within range of persons unless they wear protective clothing.
- Do not operate the machine when fatigued or under the influence of alcohol or drugs.
- When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
- For more query kindly contact for our Service Center/Dealer/ franchise

11 THAT

AGRIFIATE POWER - Super Economy

AGRIFIATE POWER - Super Economy

# **Agrimate Army For Pest Control**

ANY WHERE - ANY TIME - ANY CROP



RATNAGIRI IMPEX PVT LTD

Annapurna House, #1/1G, 7th Cross, New Guddadahalli

Mysore Road, Bangalore-560 026 Customer Care: 1800-425-7475

email: customercare@ratnagiriimpex.com



