

# AM16-PRO-SS KNAPSACK MANUAL SPRAYER





BEFORE OPERATING THIS MACHINE, PLEASE READ THESE INSTRUCTIONS CAREFULLY





### Dear Sir/Madam,

AGRIMATE

Thank you for choosing Agrimate product. You are the proud owner of high technology and durable machine. Trust that our franchisee/dealer installed the product and explained you about the usage and service instructions. Please visit our authorised dealer for your future requirement of our other equipments, genuine spares, accessories and service. Service coupons are attached with this manual and you can avail free service.

### About Ratnagiri

We import and market of high quality of agriculture wide range of equipment's Which we are selling through our authorized franchisee or dealer network. We are in this field from past 20 years serving the former community. For further details, you may please visit our website www.agrimart.in.



Agriculture | Horticulture | Sericulture | Plantations | Forestry | Garden | Health care

2 THATE

AGRIFIATE SUPER ECONOMY

AUTHITATE

### **Salient Features:**

LANCE

AGRIMATE

- Tank body inspired from the shape of Human Backbone & ribcage.
- · Very Strong & Durable Sprayer.

## **SPECIFICATIONS**

**CAPACITY** : 16L

TANK MATERIAL : PP

WORKING PRESSURE : Upto 0.20-0.45MPA : SS TELESOPIC LANCE WITH 4NOZZLES

**PUMP** : STEEL PRESSURE PUMP

# SAFETY PRECAUTIONS FOR MANAULLY OPERATED SPRAYER

- 1. Read all the instructions given in operating manual strictly before use 2. Do not clean clogged nozzle by mouth
- 3. Do not allow the children near sprayer and pesticide container.
- 4. Do not contact pesticide with bare hand
- 5. Always spray in the wind direction
- 6. Always use safety hand gloves and goggles.
- 7. Put gasket in joints to avoid leakage. Repair the leaking part.
- 8. Mount the sprayer correctly on the back of the operator to avoid accident in the knapsack sprayer.
- 9. Do not spill chemical solutions to avoid contact of pesticide with human being
- 10. Do not clean the sprayer in river or pond.
- 11. Keep the Sprayer / pesticide container in dry & cool place and away from food
- 12. Do not walk in the treated area.

AGR

AUF

INTRODUCTION Agrimate - 16 Knapsack Sprayer is a continuous type of sprayer. The tank has blow moulded with a carrying handle as integral part of the tank. A pump has been provided in the tank, which pumps out the liquid from the tank and discharges it through the outlet on the top of the pump cylinder. A big hole with a plastic cap and strainer is situated on the top of the tank. You can fill the chemical in the tank without spilling it. Because of the large filler hole. The agitator is attached to the pressure chamber, which agitates the liquid with every stroke of the pump. The sprayer is equipped with fan shape nozzle assembly, sealing washer cup ring & instruction manual. START UP 1. Join the hose to the lance and the chamber with the wedge which is served in the filter. Hold the belt in the base housing. 2. Release cover and pour in liquid to be sprayed without removing filter. 3. Fit the device to your back, adjusting the straps. 4. Work the lever 8 - 10 times to pressurize. Work the handle and adjust the nozzle until the required spray is obtained. Bear in mind that 6-8 strokes per minute will give a flow rate of 0.4-0.6L/Min 5. Operation handle can be used with left hand or right hand by only changing position of the strap. **MAINTENANCE** The mechanism is so simple that it does not need special skill to service it. You will observe a pump-bearing ring within the bearing collar on the top of the tank for pump cylinder. Please keep it well lubricated for better results. It is advisable to flush out the sprayer with clean water through the nozzle after each days working. It is also absolutely necessary to rinse out the tank from within with clean water. The piston might need replacement when it becomes worn out.

# AM16-PRO-SS KNAPSACK MANUAL SPRAYER

AGRIFIATE

AGRITATE

AGRIFIATE

AURITATE

AGF

AUTIMATE

AGRIMATE

AGF

AUF

AGR

AUF

AGF

AGF

AGF

AGF

AUF

AGR

AGF

AGF

AGF

AGR

AGF


AGR

AGRIFIATE

AUTIMATE CONOM

AGRIFIATE

AGRITATE

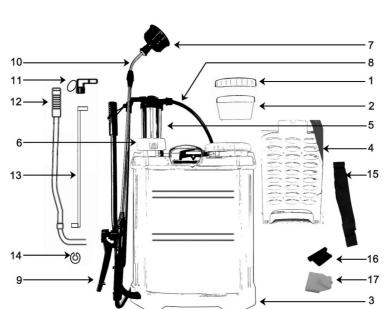

PARTS NO	DESCRIPTION	PARTS NO	DESCRIPTION
AM16-PRO-SS-01	Tank cap	AM16-PRO-SS-08	Hose
AM16-PRO-SS-02	Strainer	AM16-PRO-SS-09	Trigger
AM16-PRO-SS-03	Tank	AM16-PRO-SS-10	Indian lance
AM16-PRO-SS-04	Backrest	AM16-PRO-SS-11	Link rod clip and Handle ring
AM16-PRO-SS-05	Pressure pump with steel	AM16-PRO-SS-12	Handle
AM16-PRO-SS-06	Pump ring cap	AM16-PRO-SS-13	Link rod
AM16-PRO-SS-07.1	Indian 5 holes nozzle	AM16-PRO-SS-14	Handle C rock
AM16-PRO-SS-07.2	Indian fan nozzle	AM16-PRO-SS-15	Belt
AM16-PRO-SS-07.3	Indian 4 holes nozzle	AM16-PRO-SS-16	Belt clip
AM16-PRO-SS-07.4	Indian double nozzle	AM16-PRO-SS-17	Belt hook

RIFIATE

AGRIFIATE

### AM16-PRO-SS KNAPSACK MANUAL SPRAYER

AGRIPATE AGRIPATE AGRIPATE

AGR

AGR

AGR

AGR

AGR

AGF

AGR

AGR

AGR

AGR

AGR

AGR

ASTITIATE Super Economy

AM16-PRO-SS PARTS LIST		
РНОТО	PARTS NO	DESCRIPTION
•	AM16-PRO-SS-01	Tank cap
	AM16-PRO-SS-02	Strainer
	AM16-PRO-SS-03	Tank
	AM16-PRO-SS-04	Backrest
	AM16-PRO-SS-05	Pressure pump with steel
	AM16-PRO-SS-06	Pump ring cap
	AM16-PRO-SS-07.1	Indian 5 holes nozzle
	AM16-PRO-SS-07.2	Indian fan nozzle
	AM16-PRO-SS-07.3	Indian 4 holes nozzle
To	AM16-PRO-SS-07.4	Indian double nozzle

AGRIFIATE Super Economy

AGR

AGR

AGR

AGR

AGR

AGR

AGR

AGR

AGH

AGR

AGR

AGR

AGR

AGR

AGR

AGRIFIATE Super Economy

### AM16-PRO-SS KNAPSACK MANUAL SPRAYER

AGRIFIATE

AGRIFIATE

AGF

MATE

AGRIFIATE

AGRIMATE

AGR

AGR Maximum Pour

AGR

AGR

AGR Maximum Davi

AGR

MATE

4

AGRIFIATE

AGRIMATE

AM16-PRO-SS PARTS LIST			
РНОТО	PARTS NO	DESCRIPTION	
<b>O</b>	AM16-PRO-SS-08	Hose	
	AM16-PRO-SS-09	Trigger	
	AM16-PRO-SS-10	Indian lance	
	AM16-PRO-SS-11	Link rod clip and Handle ring	
	AM16-PRO-SS-12	Handle	
	AM16-PRO-SS-13	Link rod	
	AM16-PRO-SS-14	Handle C rock	
	AM16-PRO-SS-15	Belt	
4	AM16-PRO-SS-16	Belt clip	
	AM16-PRO-SS-17	Belt hook	

MATE

7

MATE

MATE

AGRIFIATE  AGRIFIATE	AGRIFICATE	Maximum Pov	ĀŪ
AGRIFIATE AGRIFIATE AGRIFIATE	AGRIFIATE AGRIFIATE AGRIFIATE AGRIFIATE AGRIFIATE	Maximum Pov	Maximus
Warranty Card  Purchaser's Name & Address	Date of Delivery	ASST Maximum Pov	Maximum
Product Name	Dealer's Office Seal	Maximum Pov	Maximum
AM-405E-2IN1 MANUAL CUM BATTERY OPERATED SPRA Product Serial No.	YER	AG PA Maximum Pov	Maximum
AG FI	Dealer Sign	Maximum Pov	Maximus
Invoice / DN No.	Customer Sign.  I/We accept the terms and conditions of Warranty as in the Warranty Card.	Maximum Pov	Maximum
Warranty Card	DEALER'S COPY	Maximum Pov	Maximur
Purchaser's Name & Address	Date of Delivery	AG Maximum Pov	Maximur
Product Name  AM-405E-2IN1 MANUAL CUM BATTERY OPERATED SPRA	Dealer's Office Seal	AGT Maximum Pov	Maximus
Product Serial No.		AG FR Maximum Pov	Maximur
Invoice / DN No.	Dealer Sign  Customer Sign  I/We accept the terms and conditions of Warranty	AGF Maximum Pov	Maximus
AGF	as in the Warranty Card.	AGR	AG
Warranty Card  Purchaser's Name & Address	Date of Delivery	AUT Maximum Pov	Maximum
Product Name	Dealer's Office Seal	AG FI Maximum Pov	Maximur
AM-405E-2IN1 MANUAL CUM BATTERY OPERATED SPRAMPHONE Product Serial No.	YER	Maximum Pov	Maximum
AGR Mademan Por	Dealer Sign	Maximum Pov	AG Maximum
Invoice / DN No.	Customer Sign	AGT Maximum Pov	Maximur
AGRIFIATE AGRIFIATE AGRIFIATE	ASPIRATE ASSISTANT POWER SUPER LEADING LANDING POWER SUPER LEADING LANDING POWER SUPER LEADING LANDING POWER SUPER LEADING POWER POWER SUPER LEADING POWER SUPER LEADING POWER SUPER LEADING POWER POWER SUPER LEADING POWER POWER SUPER LEADING POWER SUPER LEADING POWER SUPER LEADING POWER	A G T Maximum Pov	Maximum

LIMITED WARRANTY PERIOD: For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED
WARRANTY OBLIGATION: Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective
material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS: a. Claims under
warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase
document: b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, [iv] Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
  - 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
  - 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
  - 12. All disputes are subject to Bangalore Courts Jurisdiction
- 1. LIMITED WARRANTY PERIOD: For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION: Replacement of defective partls; by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursents. 3. TERMS & CONDITIONS: a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document.: b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

#### WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction
- 1. LIMITED WARRANTY PERIOD: For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION: Replacement of defective partls) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS: a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. :b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be bome by the purchaser.

#### WARRANTY null & void i

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (iv) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- All free service are at Dealer's service point only.
- Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction







AGRIFIATE NAME OF THE PROPERTY	AGRIFIATE Maximum Power - Super Economy Maximum Power - Super Economy	AGRIFIATE  AGRIFIATE  AGRIFIATE  AGRIFIATE  AGRIFIATE  AGRIFIATE  AGRIFIATE  AGRIFIATE
AGTI January Pov	AND THE PUT ME. ADDRESS OF THE PUT ME.	Free Service Coupon  ISO 9001-2015 CERTIFIED COMPANY
ASSULTED		DN (30 Days / 30 hrs (Which ever is earlier)
Val	Model	Serial Number
AGR	AM-405E-2IN1 MANUAL CUM BATTERY OPERATED	Operations:  - Check and Test the Fuel Mixture Check and Clean the Air Filter - Check, Clean and Adjust the Spark plug - Check and Algust the Carburetor Tuning - Check and Algust the Carburetor Tuning - Check and Algust the Carburetor Tuning - Check and Algust the Spark plug - Creat and Check the Noise, Vibration, Loosen / Fasteners etc Product familiarization on Usage - Routine maintenance and Storage  Customer Signature
Maximum Pov	PDI Date	Purchase bill no. Date
		S E C
4	Service No.	A A I I
AGR		Operations:
Maximum Pov		Check and Test the Fuel Mixture.     Check and Clean the Air Filter
		Check, Clean and Adjust the Spark plug
4	Dealer's Office Seal	Check and Adjust the Carburetor Tuning     Charles and Shapers the carbina Traff.
AGIT		Check and Sharpen the cutting Tools     Start and Check the Noise, Vibration, Loosen / Fasteners etc.
Maximum Pov		Product familiarization on Usage
		Routine maintenance and Storage
G	Dealer Signature	Customer Signature
AGT	-	ed to my entire satisfaction without any labour charges. Only consumables were
Maximum Pov	ناف	
	AGRIPATE agricultur	n:horticultur:sericultur:plantation:forestry garder health care
AUT	### 2mJ	L Franc Coming Course
Maximum Po-	ratnagiri ZNO	Free Service Coupon
	annoing you the future now	CERTIFIED COMPANY
	FREE SERVICE COUPO	DN (60Days / 60hrs (Which ever is earlier)
AUT	Model	Serial Number
Aaximum Pov	AM-405E-2IN1 MANUAL CUM BATTERY OPERATED	Operations:  Check and Test the Fuel Mixture. Check and Clean the Air Filter Check Clean and Adjust the Spark plug Check and Adjust the Carburetor Tuning Check and Sharpen the cutting Tools Start and Check the Noise, Vibration, Loosen / Fasteners etc. Product familiarization on Usage Routine maintenance and Storage  Customer Signature
	DDI Data	Australia Barriera
3	PDI Date	Purchase bill no. Date
AUTT		- H
Maximum Pov	Service No.	
		Operations:  • Check and Test the Fuel Mixture.
G		Check and Clean the Air Filter
AGIT		• Check, Clean and Adjust the Spark plug
Maximum Pov	Dealer's Office Seal	Check and Adjust the Carburetor Tuning     Check and Sharpen the cutting Tools
		Start and Check the Noise, Vibration, Loosen / Fasteners etc.
G		Product familiarization on Usage  Partition and Comment  Comm
AGR		Routine maintenance and Storage
Maximum Pov	Dealer Signature	Customer Signature
	- ^ /	d to my entire satisfaction without any labour charges. Only consumables were Charged
G	نيف	
AUT	AGRIPATE agricultur	n-horticulturi-sericulturi-plantation forestry garder health care
Name - P ou		
	3rd	Free Service Coupon
6	ratnagiri	150 9001-2015
AUT	BEINGING YOU THE PUTURE NOW	CERTIFIED COMPANY
Maximum Pov		ON (90Days / 120hrs (Which ever is earlier)
	Model	Serial Number
G	AM-405E-2IN1 MANUAL CUM BATTERY OPERATED	SPRAYER
ÁGR	PDI Date	Purchase bill no. Date
Maximum Pow		E C
	Service No.	
G	SELVICE IVO.	Operations:
ÁGT		Check and Test the Fuel Mixture.
Maximum Pov		Check and Clean the Air Filter Check, Clean and Adjust the Spark plug
		Check, Clean and Adjust the Spark plug     Check and Adjust the Carburetor Tuning
G.	Dealer's Office Seal	Check and Sharpen the cutting Tools
AUT		Start and Check the Noise, Vibration, Loosen / Fasteners etc.     Product familiarization on Usage
Maximum Pov		• Routine maintenance and Storage
		BA
G	Dealer Signature	
AGR	Conditions: Operations listed have been performe	ed to my entire satisfaction without any labour charges. Only consumables were Charged
Maximum Pov	AGRIMATE agricultur	n horticultur sericulturi plantation forestry garder health care
	Maximum Power - Super Economy	
4	- THATE - THATE	E 10 PHATE - PHATE
AGRIFIATE Super Economy	AGRIFIA E AGRIFIA E	AUTITATE AUT
Maximum Power - 307	Maximum Power - Sup-	Maximum Power - Maximum Power

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these
  equipments.
- Always keep the equipments in good working condition to minimise loss of output as well as

Always use genuine spares and accessories in repairs and usage to derive maximum life of

- to reduce the pollution and save the environment.
  Do not use the machine within range of persons unless they wear protective clothina.
- Do not operate the machine when fatigued or under the influence of alcohol or drugs.
- Do not operate the meaning than tangened to the immediate of disease of disease.
- To reduce the risk of injury, close supervision is necessary when a machine is used near children. Equipment shall not be used by children or untrained person.
- Disconnect from the battery power supply before carrying out user maintenance.

AGF

e omy

11 THATE

AGRII

ASTITION Navimum Power - Super Ed

## **MULTIPLY PROFITS** WITH OUR MULTI CROP, MULTI PURPOSE EQUIPMENTS





SPRAYER

MANUAL



PORTARI F **POWER** SPRAYER



KNAPSACK **POWER** SPRAYER



ROTARY

TILLER

CHAFF



CUTTER PRUNER



**FOGGER** 



POWER WEEDER

ROTARY

TILLER



LAWN MOWER PRESSURE WASHER

HIGH



EARTH AUGER



RIDE ON MOWER



**RANGE OF** PRODUCTS





**BRUSH CUTTER** - PUSH TYPE



BRUSH CUTTER -**BACK PACK** 



BRUSH CUTTER -MUITI TOOL



POLE PRUNER



**BLOWER BACK PACK** 





BRUSH CUTTER



BACK PACK RC.







FOGGER



EARTH AUGER



**RANGE OF PRODUCTS** 

#### OUR RETAIL FORMATS







IMPORTERS & MARKETED BY

Ratnagiri Impex Pvt. Ltd. Annapurna House, # 1/1G,

7th Cross New Guddadahalli, Mysore Road Bangalore - 560 026, India Ph: 080-26985100/1/2 Email: info@ratnagiriimpex.com



**TOLL FREE:** 1800-425-3036





An ISO 9001:2015 Certified Company