




**Green Panther**  
Naturally Powerful

## **GP-4019BC BRUSH CUTTER**

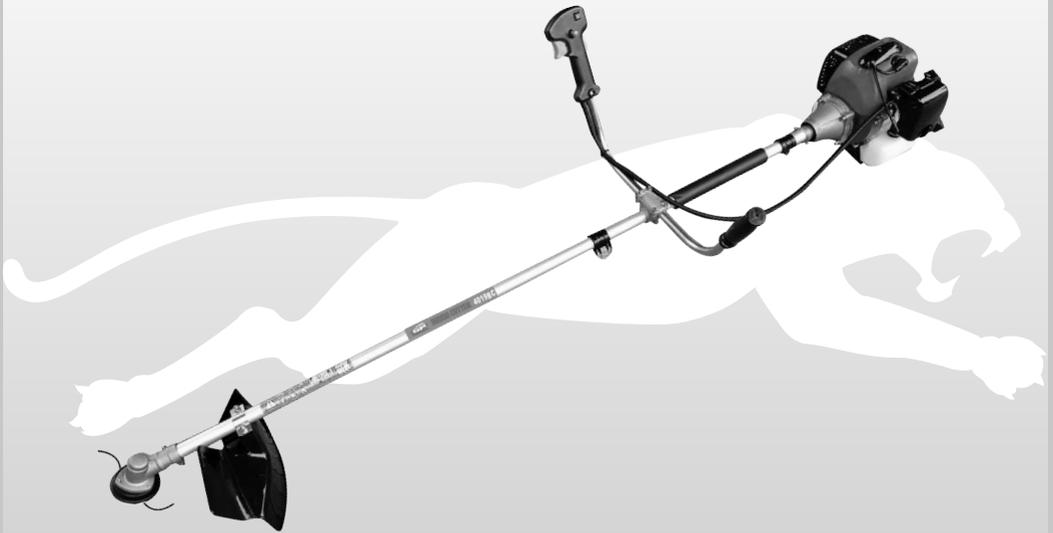

# USER MANUAL

Note: Please read the following instructions before use. This book contains important information on SAFETY, ASSEMBLY, OPERATION & DISCLAIMER: DUE TO CONSTANT UPGRADATION, FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

## **▲ SAFETY FIRST**

Instructions contained in warnings within this manual marked with a “▲” symbol concern critical points which must be taken into consideration to prevent possible serious bodily injury and for this reason you are requested to read all such instructions carefully and follow them without fail.

## **■ NOTES ON TYPES OF WARNINGS IN THE MANUAL**

### **▲ WARNING**

This mark indicates instructions, which must be followed in order to prevent accidents, which could lead to serious bodily injury or death

### **IMPACTANCE**

This mark indicates instructions, which must be followed, or it leads to mechanical failure, breakdown, or damage.

### **NOTE**

This mark indicates hints or directions useful in the use of the product.

## **CONTENTS**

1. SYMBOLS ON THE MACHINE
2. PARTS LOCATION
3. ASSEMBLY
4. SAFETY PRECAUTIONS
5. FUEL
6. OPERATION
7. MAINTENANCE



## SYMBOLS ON THE MACHINE

FOR SAFE OPERATION AND MAINTENANCE SYMBOLS ARE CARVED IN RELIEF ON THE MACHINE.

According to these indications, please be careful not to make a mistake.


- (A) THE PORT TO REFUEL THE "MIX GASOLINE"  
POSITION: AIR CLEANER COVER




- (B) THE DIRECTION TO CLOSE THE CHOKE  
POSITION: FULE TANK CAP



- (C) THE DIRECTION TO OPEN THE CHOKE  
POSITION: AIRCLEANER COVER

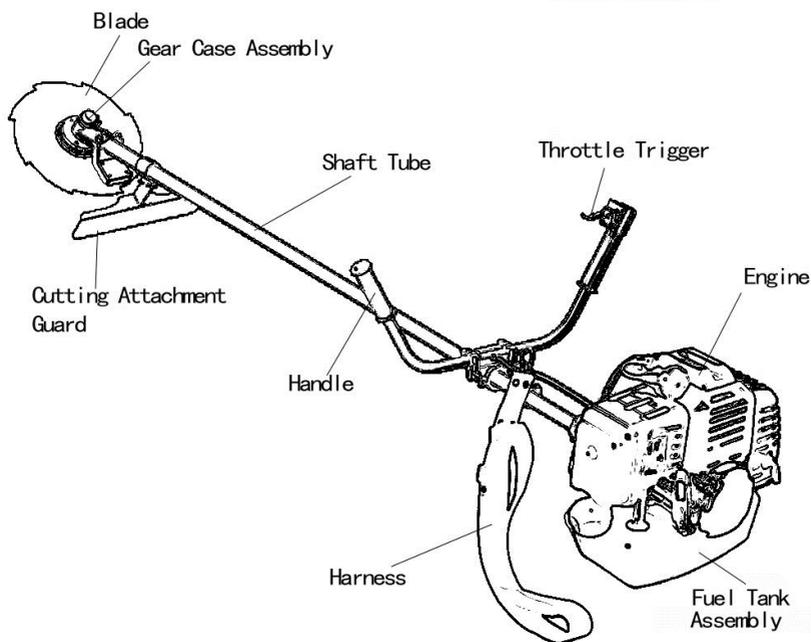

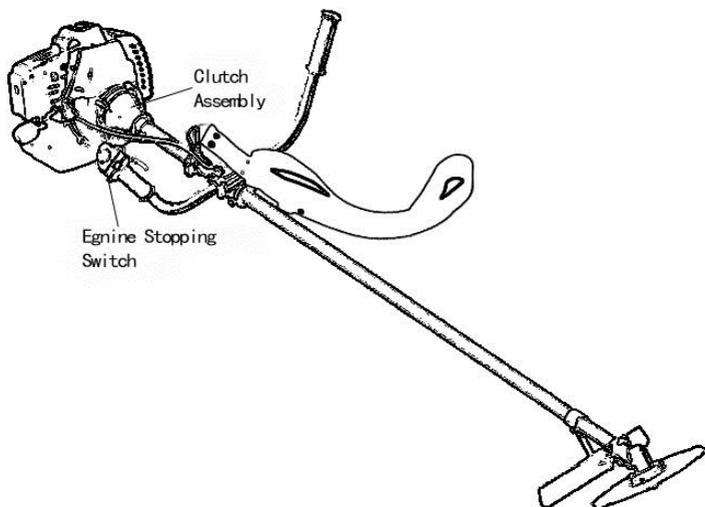


## ASSEMBLY

### 1 Specifications

Model		GP4019BC
Handle model		duble-hand
Weight		<7.5kg
Size	Length	1800mm
	Width	300mm
	Height	260mm
Blade		Nylon cutting head , 3teeth, 4teeth, 8teeth, 40 teeth blade
Transmission method		Automatic centrifugal clutch
Rate for slowing down		1.25
Edge rolling direction		counterclockwise
engine	Model	1E40F
	Displacement	43CC
	Fuel	Mixture of gas and 2-stroke oil 35:1
	oil	Special 2-stroke oil
	Cubage for fuel box	1.25L
	Way of startup or ignition	Hand pulling/MTI
	Carburetor	Diaphragm




(2) Connect the body with engine, keep oil tank and four screws in the same direction.

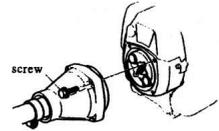


(3) Setting for two handles

As drawing, first loosen the four screws, fix two handles from two direction, and then screw them down again.

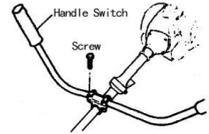


(4) Installment of cutting attachment guard

Please look at the picture, fix the cutting attachment guard on the tail of gear case, and then screw down the round screw. You must not use the machine without installing the cutting attachment guard.

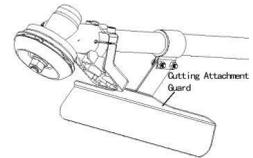

(5) As picture, fix blade shelve, use wrench L to fix the lower blade shelve, and then fix the blade, upper blade shelve and upper dirt-proof boot in turn. Finally, screw the hexagon nut counterclockwise.

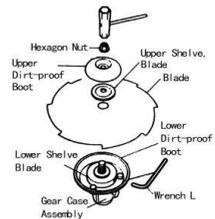

## BEFORE USE THE MACHINE

- Read this owner's manual carefully to understand how to operate this unit properly.
- This product has been designed for use in cutting weed, brush, small trees and similar vegetation. It should never be used for any other purpose since doing so could result in unforeseen accidents and injuries occurring.
- You should never use this brush cutter when under the influence of alcohol, when suffering from drowsiness as a result of having taken cold medicine, or at any other time when a possibility exists that your judgment might be impaired or that you might not be able to operate the brush cutter properly and in a safe manner.




- d. Avoid running the engine indoors. The exhaust gases contain harmful carbon monoxide.
- e. Never use your brush cutter under circumstances like those described below:
  1. When the ground is slippery or when other conditions exist which might make it not possible to maintain a steady posture while using the brush cutter.
  2. At night, at times of heavy fog or at any other times when your field of vision might be limited and it would be difficult to gain a clear view of area.
  3. During rain storms, during lightning storms. At times of strong or gale –force winds, or at any other times when weather conditions might make it unsafe to use this product.
- f. When using this product for the first time. Before beginning actual work. Then handling the brush cutter from skilled worker.
- g. Lack of sleep, tiredness or physical exhaustion results in lower attention spans, and this in turn leads to accidents and injury. Limit the amount of time over which the brush cutter is to be used continuously to somewhere around 30-40 minutes per session, and take 10-20 minutes of rest between work sessions. Also try to keep the total amount of work performed in a single day under 2 hours or less.
- h. Be sure to keep this manual handy so that you may refer to it later whenever any questions arise.
- i. Always be sure to include this manual when selling, lending or otherwise transferring the ownership of this product.
- j. Never allow children or anyone unable to fully understand the directions given in this manual to use this brush cutter.



### WORKING GEAR AND CLOTHING

- a. When using your brush cutter, you should wear proper clothing and protective equipment as follows.
  - (1) Helmet
  - (2) Protection goggles or face protector
  - (3) Thick work gloves

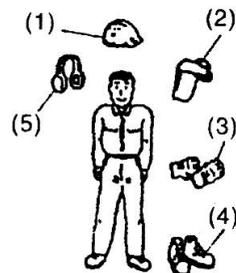

- (4) Non-slip-sole work boots
- (5) Ear protectors (esp. for long-time operation)



- b. And you should carry with you things as follows.
  - 1. Attached tools and files
  - 2. Properly reserved fuel
  - 3. Spare blade
  - 4. Things to notify your working area (Rope, warning signs)
  - 5. Whistle (for collaboration or emergency)
  - 6. Hatchet or saw (for removal of obstacles)
- c. Never use your brush cutter when wearing pants with loose cuffs, when wearing sandals or when barefoot.

#### THINGS TO CHECK BEFORE USING YOUR BRUSH CUTTER

- a. Before beginning work, look around carefully to get a feel for the shape of the land, or grass to be trimmed, and whether or not there are any obstacles which might get in the way while working, and remove any obstacle which can be cleared away.
- b. The area within a perimeter of 15m of the person using the brush cutter should be considered a hazardous areas into which no one should enter while the machine is in use, and when necessary yellow warning rope, warning signs should be placed around the work area. When work is to be performed simultaneously by two or more persons, always check the presence and locations of others so as to maintain a distance each person sufficient to ensure safety.
- c. Make sure that there are no loose screws or bolts, fuel leakage, ruptures, dents, or any other problems which might interfere with safe operation. Be especially careful to check that there is nothing wrong with the blades or with joints by which the blades are attached to the brush cutter.
- d. Never use blades that bent , warped , cracked, broken or damaged in any way.
- e. Check the bolt to fasten the blade and be sure the blade turns smoothly without abnormal noise.



## NOTES ON STARTING THE ENGINE

1. Take a careful look around to make sure that no obstacles exist within a perimeter of 15m or less around brush cutter.
2. Place the body of the brush cutter onto the ground in a flat clear area and hold it firmly in place so as to ensure that neither the blades nor the throttle come into contact with any obstacles when the engine starts up.
3. Place the throttle into the idling position when starting the engine.
4. After starting up the engine, if the blades continue to rotate even after the throttle has been moved fully back, turn off the engine and check the throttle wire and other parts.



## KICKBACK SAFETY PRECAUTIONS

A dangerous reaction may occur when the spinning blade contacts a solid object in the critical area. It is called Kick back. As a result, the operator may lose control of the unit which can cause serious or fatal injury.

Avoid kickback, observe the safety precautions below strictly.

1. Keep the cutting blades clear of fences, , posts wires, and rocks to prevent kickback and damage to the blades.
2. When using your brush cutter, do not grip other parts except the handles.
3. When using your brush cutter, never take your eyes off. If you need to, place the throttle into the idling position.

## NOTES ON TRANSPORT

- a. Make sure the appropriate blade cover is in place.
- b. When transporting by car, fix the unit firmly using a rope. Do not transport by bicycle or motorbike because it is dangerous.
- c. Never transport the brush cutter over rough roads over long distances without first removing all fuel from the fuel tank, as doing so might cause fuel to leak from the tank.



## OPERATION SAFETY PRECAUTIONS

- a. Grip the handles of the brush cutter firmly with both hands. If you suspend the work, place the throttle into the idling position.
- b. Always be sure to maintain a steady, even posture while working.
- c. Maintain the speed of the engine at the level required to perform cutting work, and never raise the speed of the engine above the level necessary..
- d. If the grass gets caught in the blade during operation, or if you need to check the unit or refuel the tank , always be sure to turn off the engine.
- e. If the blade touches a hard object like a stone , immediately stop the engine and check if something is wrong with the blade. If so , replace the blade by new one.
- f. If someone calls out while working ,always be sure to turn off the engine before turning around.
- g. Never touch the spark plug or plug cord while the engine is in operation. Doing so may result in being subjected to an electrical shock.
- h. Never touch the muffler, spark plug or other metallic parts of the engine while the engine is in operation or immediately after shutting down the engine. Doing so may result in serous burns.
- i. When you finish cutting in one location and wish to continue work in another spot, turn off the engine and turn the unit as the blade face away from your body.



## MAITENACE SAFETY PRECAUTION

- a. Perform the maintenance and checking operations described in this manual at regular interval. If any parts must be replaced or any maintenance of repair work not described in this manual must be performed, please contact a representative from the store nearest MEI YUAN authorized servicing dealer for assistance.
- b. Under no circumstances should you ever take apart the brush cutter or after it in any way. Doing so might result in the unit becoming unable to operate properly.
- c. Always be sure to turn off the engine before performing any maintenance or checking procedure.
- d. When sharpening , removing, or reattaching the blade, be sure to wear thick , sturdy gloves and use only proper tools and equipment to prevent injury.



## WARNING CONSIDERING HANDLING OF FUEL

- b. The engine of this product is designed to run on a mixed fuel, which contains highly flammable gasoline. You should never store cans of fuel or refill the fuel tank in any place where there is a boiler, stove, wood fire, electrical sparks, welding sparks, or any other source of heat or fire which might ignite the fuel.
- c. Smoking while operating the brush cutter or refilling its fuel tank is extremely dangerous. Always be sure to keep lit cigarettes away from the brush cutter at all times.
- d. When refilling the tank always turn off the engine first and take a careful look around to make sure that there are no sparks or open flames anywhere nearby before refueling.
- e. If any fuel spillage occurs during refueling, use a dry rag to wipe up spills before turning the engine back on again.
- f. After refueling, screw the fuel cap back tightly onto the fuel tank and then carry the brush cutter to a spot 3m or more away from where it was refueled before turning on the engine.



## IMPORTANCE

- Never use oil for 4 cycle engine or use water cooled 2-cycle engine.

It can cause spark plug fouling, exhaust port blocking or piston ring sticking.

- Mixed fuels which have been left unused for a period of one month or more may clog the carburetor or result in the engine failing to operate properly. Put remaining fuel into an air-tight container and keep it in the dark and cool room.

Mix a regular grade gasoline (leaded or unleaded, alcohol-free) and a quality-proven motor oil for air cooled 2-cycle engines.



## RECOMMENDED MIXING RATIO

GASOLINE OIL 25: 1




# OPERATION

## STARTING THE ENGINE


### WARNING

Keep the blade clear of everything around it as it will start moving upon the engine starts.

- (1) Press carburetor cap several times with finger until oil pipe full of fuel.

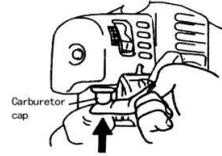

- (2) Please pull the air shutter switch to the closed position. If the engine stay in the place that just stopped, pull the switch to open position.

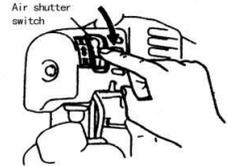


- (3) The setting of throttle wire and stop lead.  
As drawing, connect the throttle wire of handle with one of engine



### NOTE


Be sure that the stop lead is fixed. When the gun switch is in the original place, please gently pull the line (movable distance is 0.5-1.0mm), otherwise rearrange the tight degree of gun line.

- (4) Place the unit on a flat, firm place. Keep the cutting head clear of everything around it.
- (5) While holding the unit firmly, pull out the starter rope quickly.
- (6) After the engine has started, allow the engine to warm up. Pull the throttle trigger.

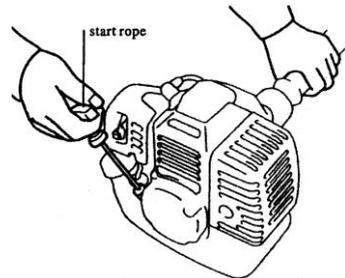

## STOPPING THE ENGINE

- (1) As drawing, release the Throttle trigger and return it to the original condition.

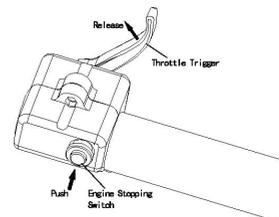

- (2) Push the engine stopping switch.

## NOTE

If the engine doesn't stop after stopping the switch, close the choke so that engine will stop after a while.

## CUTTING WORK

### WARNING

- Weather conditions and altitude may affect carburetor.
- Do not allow anyone to stay close the brush cutter while working or adjusting the carburetor.

## HOW TO USE

- (1) Shoulder hang

As picture, hang it from left shoulder to right waist, then start the engine, make sure that the gun switch is at idle speed, connect harness interface with one of the machine, keep the blade parallel with ground, and arrange the length of harness to a suitable condition.



- (2) Working methods:


- A. Sway brush cutter (from right to left)
  - B. For generic grass, one time cutting quantity is half of the blade diameter; for strong ruderal, one time cutting quantity is one third of the blade diameter.
  - C. The place of gun switch is decided by the grass.
1. Use only as much throttle as it is needed to do the job. Excessive engine speed is unnecessary.
  2. Avoid cutting branches which is too thick for the unit, as this will damage the life of drive systems.



## MAINTAINENCE

### WARNING

Before cleaning , inspecting, or repairing the unit, make sure that the engine has stopped and cooled down.

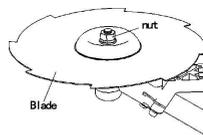

### BLADE


- Check the blade and the fasteners for looseness, cracking, or bending

### IMPORTANCE

When mounting the blade, make sure to fasten the spacer, washer and nut.


### AIR CLEANER

Release the air cleaner cover and remove dusts,. In case the element is dirty, carefully wash it with warm water containing neutral detergent, and completely dry before refitting the element. If the element is deformed or damaged, replace it with a new one.

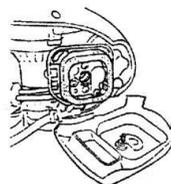

### IMPORTANTCE

Clogged air cleaner spoils engine performance. Also, operation with no element or with deformed element causes irregular wear outs of the engine mechanism.

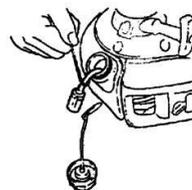


### FUEL FILTER

When the engine runs short of fuel supply, check the fuel strainer for blockage.

### WAY OF COOLING AIR

This engine is air-cooled. Dust clogging between the inlet port of the cooling air and cylinder fins will cause overheating of the engine. Periodically check and clean the cylinder fins after removing the air cleaner and the cylinder cover.

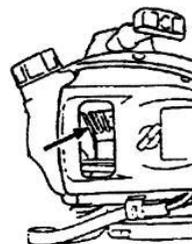

## SPARK PLUG



Starting failure and mis-firing are often caused by a fouled spark plug. Periodically clean the spark plug, and replace with a new one required.

### IMPORTANCE

When dismantling the plug cap, be careful not to take off the seal from the seal from the plug cap. Operating the engine without seal may cause overheat of the engine.

### IMPORTANCE

When setting up the spark plug, screw it by your fingers at first, then tightening by using special plug wrench . Over tightening will damage the cylinder and piston,

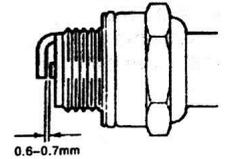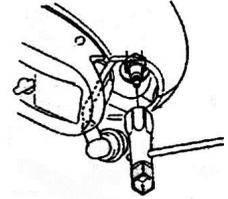

### Tightening Torque

15.3-22.4N.m(150~220kgf-cm)


### Type of plug Spark Gap

TORCH L7RTC 0.6~0.7mm

## GEARCASE

Supply butter at every 25 hours' use

As drawing, first take out the lubrication fitting, take down the lower blade shelf, then pour in butter from the hole until the old butter comes out. After that, close the hole with the lubrication fitting and install the lower blade shelf.

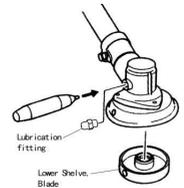

## ADJUDTING CARBURETTOR

The carburetor has been adjusted at the factory. Should your unit need readjustment due to the changes in altitude or operating conditions, please let your skilled dealer make the adjustment. A wrong adjustment may cause damage to your unit

### 1. Idle speed fuel adjusting screw

Screw it down in veer then release it just one circuit which is the standard

Right adjustment: quantity decrease

Left adjustment: quantity increase

### 2. High-speed fuel adjusting screw


Right adjustment: quantity decrease

Left adjustment: quantity increase

### 3. Idle speed adjusting screw

Right adjustment: speed increase

Left adjustment: speed decrease

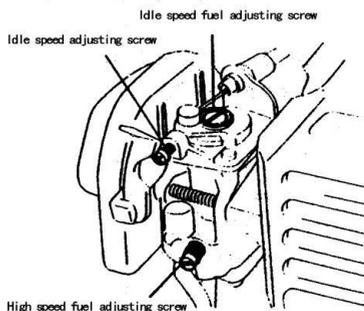

## MUFFLER

### AFTER 100 HOURS' USE


1. Remove the muffler, insert a screw driver into the vent, and wipe away any carbon buildup. Wipe away any carbon buildup on the muffler exhaust vent at the same time.

(1) screw driver

(2) muffler

2. Tighten all screws, bolts and fittings.

3. Check to see if any oil or grease has worked its way between the clutch lining and drum. If so, please wipe it away using oil-free and lead-free gasoline

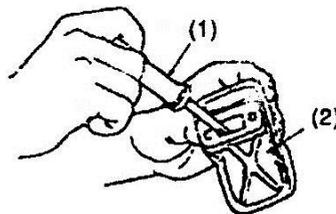

## Check-up before or after working

	Checking items	Manage ways
1	Blades	A. if the screw loosen
		A. screw down
		B. if the blades are bad or abrasion
		B. replace them
		C. if the blades are attrited
		C. rub the blades or change them
2	Safety cover	A. if the screw loosen
		A. screw down
		B. if it is bad
		B. replace them
3	Handle	A. if the screw loosen
		C. screw down
		B. if it is bad
		D. replace them
4	Gun switch	Not slip
		Amend it or change it
5	Gun line	A. the movable distance is not exact
		A. arrange
		B. not slip
		B. amend or change
6	Engine connector	If it is loose
		Screw or change
7	Fuel box	B. connector is loosen
		A. screw them down
		C. oil pipe is broken
		B. replace
		D. sealed ring of oil box cover is broken
		C. replace
8	Exhaust pipe	If it is loosen
		C. screw them down




## MAINTENANCE BEFORE STORAGE

### IMPORTANCE

Use a dry rag to wipe any fuel which has been spilled onto the unit.

Meanwhile, tighten the cover of the container.

1. Extract fuel from the tank and run the engine until it stops naturally.
2. Remove the spark plug and put in 1-2cc of 2-cycle oil in the engine . Pull the starter rope 2-3 times, set the plug back and stop it at the contraction position.
3. Apply anti-rust oil to metal parts such as the throttle wire, etc. Put the cover on the blade and keep it indoor avoiding dampness.

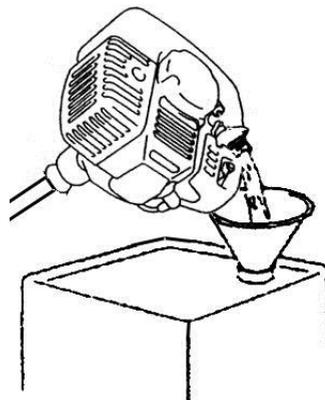


## TECHNICAL PARAMETEERS

Model		GP-4019BC
Type		Brush Cutter
Clutch rotate speed (r/min)		3200-3400
Drive transfer style		automatic centrifugation
Rotating direct of blade		anticlockwise
Transmission ratio		1.25
noise dB(A)	idling dB(A)	≤80
	high speed racing dB(A)	≤102
Engine	Model	1E40F-5A
	Type	1-cylinder, 2-stroke ,air- cooled
	Displacement (ml)	42.7
	Rated power (kw)	1.25
	Rated speed (r/min)	8500
	Start system	recoil
	Ignition system type	non-contact transistorized
	Fuel	93# gasoline and two stroke special machine oil mixture 25:1
	Machine oil	two stroke special machine oil
	Fuel tank capacity(L)	1.25
	Fuel oil consumption ratio (g/kw.h)	≤690
Blades	nylon cutting rope head , 2 teeth ,3 teeth, 4teeth,8teeth, 40teeth,60 teeth, 80teeth	
Max. cutter width(mm)	40	
G.W.(kg)	9.5	
MEAS (cm)		31.5*24*35
		160*15*15



# SPARE PARTS DIAGRAM OF GP-4019BC BRUSH CUTTER

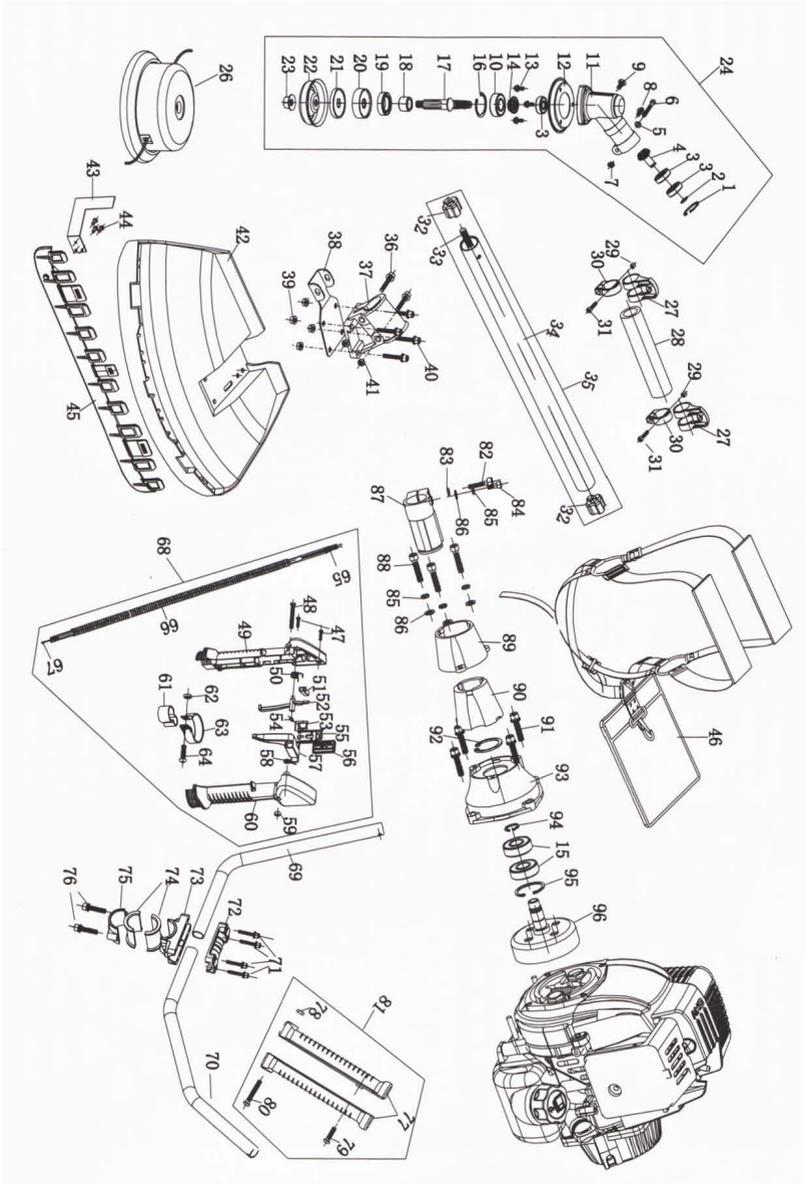

## SPARE PARTS LIST GP-4019BC BRUSH CUTTER

Part No.	Description
GP-4019BC-T01	stop ring $\Phi$ 26
GP-4019BC-T02	stop ring $\Phi$ 26
GP-4019BC-T03	bearing 600
GP-4019BC-T04	pinion
GP-4019BC-T05	steel plate cap
GP-4019BC-T06	screw M6x20
GP-4019BC-T07	washer 6
GP-4019BC-T08	screw M5x12
GP-4019BC-T09	bolt M6x12
GP-4019BC-T10	bearing 6201
GP-4019BC-T11	gear case
GP-4019BC-T12	blade cover
GP-4019BC-T13	screw M5x12
GP-4019BC-T14	gear
GP-4019BC-T15	bearing 6202
GP-4019BC-T16	stop ring $\Phi$ 32
GP-4019BC-T17	gear shaft
GP-4019BC-T18	busher
GP-4019BC-T19	oil sealing
GP-4019BC-T20	washer
GP-4019BC-T21	holder
GP-4019BC-T22	blade cover - down
GP-4019BC-T23	left nut
GP-4019BC-T24	gear case assembly
GP-4019BC-T25	

Part No.	Description
GP-4019BC-T26	trimmer head
GP-4019BC-T27	harness clamp
GP-4019BC-T28	anti-vibration rubber
GP-4019BC-T29	NUTM5
GP-4019BC-T30	clamp
GP-4019BC-T31	screw M5X20
GP-4019BC-T32	oil bearing
GP-4019BC-T33	drive shaft
GP-4019BC-T34	pipe
GP-4019BC-T35	pipe comp.
GP-4019BC-T36	screw M5X12
GP-4019BC-T37	guard bracket
GP-4019BC-T38	
GP-4019BC-T39	M5 nut
GP-4019BC-T40	screw M5X12
GP-4019BC-T41	M5NUT
GP-4019BC-T42	GUARD -A
GP-4019BC-T43	small metal blade
GP-4019BC-T44	screw
GP-4019BC-T45	guard belt
GP-4019BC-T46	harness assy
GP-4019BC-T47	screw
GP-4019BC-T48	M5 screw
GP-4019BC-T49	left box
GP-4019BC-T50	spring



## SPARE PARTS DIAGRAM GP-4019BC BRUSH CUTTER

Part No.	Description
GP-4019BC-T51	clock pin
GP-4019BC-T52	handgrip
GP-4019BC-T53	stop connector
GP-4019BC-T54	screw
GP-4019BC-T55	stop connector-B
GP-4019BC-T56	stop button
GP-4019BC-T57	accelerator switch
GP-4019BC-T58	spring
GP-4019BC-T59	M5 nut
GP-4019BC-T60	right box
GP-4019BC-T61	cable clip
GP-4019BC-T62	M5 nut
GP-4019BC-T63	handle clip
GP-4019BC-T64	M5 screw
GP-4019BC-T65	stop cable
GP-4019BC-T66	tube
GP-4019BC-T67	accelerator cable
GP-4019BC-T68	throttle lever assy.
GP-4019BC-T69	left pipe
GP-4019BC-T70	right pipe
GP-4019BC-T71	M6 screw
GP-4019BC-T72	upper cap
GP-4019BC-T73	bracket
GP-4019BC-T74	rubber washer

Part No.	Description
GP-4019BC-T75	lower cap
GP-4019BC-T76	M6 screw
GP-4019BC-T77	grip, left
GP-4019BC-T78	M5 nut
GP-4019BC-T79	screw
GP-4019BC-T80	M5 screw
GP-4019BC-T81	grip. Assy.
GP-4019BC-T82	M6X25 screw
GP-4019BC-T83	washer $\Phi$ 6
GP-4019BC-T84	screw M5X12
GP-4019BC-T85	washer M5
GP-4019BC-T86	washer M5
GP-4019BC-T87	clamp
GP-4019BC-T88	screw M4X25
GP-4019BC-T89	connecting part
GP-4019BC-T90	anti-vibration busher
GP-4019BC-T91	screw M5x20
GP-4019BC-T92	washer
GP-4019BC-T93	connecting part-B
GP-4019BC-T94	washer
GP-4019BC-T95	washer
GP-4019BC-T96	clutch drum



# 1st Free Service Coupon

ISO 9001-2015  
CERTIFIED COMPANY



FREE SERVICE COUPON (30 Days / 30 hrs (Which ever is earlier))

Model  
**GP-4019BC BRUSH CUTTER**

PDI Date

Service No.

Purchase bill no.      Date

Dealer's Office Seal & Signature

Serial Number

Customer Signature.....

*Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.*

agriculture | horticulture | sericulture | plantations | forest | garden | healthcare

WARRANTY AND FREE SERVICE COUPON

# 2nd Free Service Coupon

ISO 9001-2015  
CERTIFIED COMPANY

FREE SERVICE COUPON (60 Days / 60 hrs (Which ever is earlier))

Model  
**GP-4019BC BRUSH CUTTER**

PDI Date

Service No.

Purchase bill no.      Date

Dealer's Office Seal & Signature

Serial Number

Customer Signature.....

*Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.*

agriculture | horticulture | sericulture | plantations | forest | garden | healthcare

WARRANTY AND FREE SERVICE COUPON

# 3rd Free Service Coupon

ISO 9001-2015  
CERTIFIED COMPANY

FREE SERVICE COUPON (90 Days / 120 hrs (Which ever is earlier))

Model  
**GP-4019BC BRUSH CUTTER**

PDI Date

Service No.

Purchase bill no.      Date

Dealer's Office Seal & Signature

Serial Number

Customer Signature.....

*Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.*

agriculture | horticulture | sericulture | plantations | forest | garden | healthcare

WARRANTY AND FREE SERVICE COUPON



1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursalment. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

**WARRANTY null & void if**

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
  5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
  6. Loss of any nature due to operation or non-operation is not covered under warranty.
  7. All free service are at Dealer's service point only.
  8. Warranty ceases if service is not done periodically.
  9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
  10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
  11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
  12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursalment. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

**WARRANTY null & void if**

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
  5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
  6. Loss of any nature due to operation or non-operation is not covered under warranty.
  7. All free service are at Dealer's service point only.
  8. Warranty ceases if service is not done periodically.
  9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
  10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
  11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
  12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursalment. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

**WARRANTY null & void if**

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
  5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
  6. Loss of any nature due to operation or non-operation is not covered under warranty.
  7. All free service are at Dealer's service point only.
  8. Warranty ceases if service is not done periodically.
  9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
  10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
  11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
  12. All disputes are subject to Bangalore Courts Jurisdiction

# Warranty Card

CUSTOMER COPY



Purchaser's Name & Address

\_\_\_\_\_  
\_\_\_\_\_

Product Name

**GP-4019BC BRUSH CUTTER**

Product Serial No.

\_\_\_\_\_

Invoice / DN No.

\_\_\_\_\_

Date of Delivery

\_\_\_\_\_

Dealer's Office Seal

\_\_\_\_\_

Dealer Sign \_\_\_\_\_

Customer Sign. \_\_\_\_\_

I/We accept the terms and conditions of Warranty as in the Warranty Card.



# Warranty Card

DEALER'S COPY

Purchaser's Name & Address

\_\_\_\_\_  
\_\_\_\_\_

Product Name

**GP-4019BC BRUSH CUTTER**

Product Serial No.

\_\_\_\_\_

Invoice / DN No.

\_\_\_\_\_

Date of Delivery

\_\_\_\_\_

Dealer's Office Seal

\_\_\_\_\_

Dealer Sign \_\_\_\_\_

Customer Sign. \_\_\_\_\_

I/We accept the terms and conditions of Warranty as in the Warranty Card.



# Warranty Card

COMPANY COPY

Purchaser's Name & Address

\_\_\_\_\_  
\_\_\_\_\_

Product Name

**GP-4019BC BRUSH CUTTER**

Product Serial No.

\_\_\_\_\_

Invoice / DN No.

\_\_\_\_\_

Date of Delivery

\_\_\_\_\_

Dealer's Office Seal

\_\_\_\_\_

Dealer Sign \_\_\_\_\_


Customer Sign. \_\_\_\_\_

I/We accept the terms and conditions of Warranty as in the Warranty Card.





Small Maintenance. Big Savings.

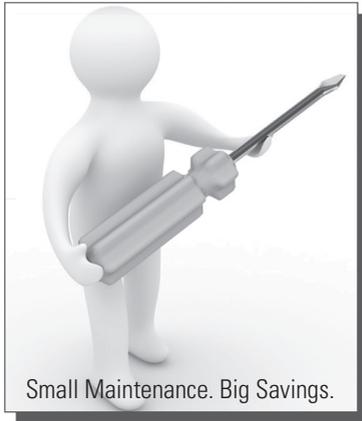

Small Maintenance. Big Savings.



Small Maintenance. Big Savings.



# Do's & Don'ts

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments.
- Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
- Always keep the equipments in good working condition to minimise loss of output as well as to reduce the pollution and save the environment.
- Do not use the machine within range of persons unless they wear protective clothing.
- Do not operate the machine when fatigued or under the influence of alcohol or drugs.
- For more query kindly contact for our Service Center/Dealer/ franchise





**Green Panther**  
Naturally Powerful

# GP-4019BC BRUSH CUTTER

IMPORTERS & DISTRIBUTORS

**RATNAGIRI IMPEX PVT LTD**

Annapurna House, #1/1G, 7th Cross, New Guddadahalli

Mysore Road, Bangalore-560 026

Customer Care: 1800-425-3036

email: [info@ratnagiriimpex.com](mailto:info@ratnagiriimpex.com)

[www.ratnagiriimpex.com](http://www.ratnagiriimpex.com)



 **ratnagiri<sup>®</sup>  
impex**  
BRINGING YOU THE FUTURE... NOW

AN ISO 9001:2015 CERTIFIED COMPANY