

**AGRIMATE
MIRAGE -3000 LAWN MOWER**



DIAGRAM & PART LIST OF MIRAGE 3000 LAWN MOWER

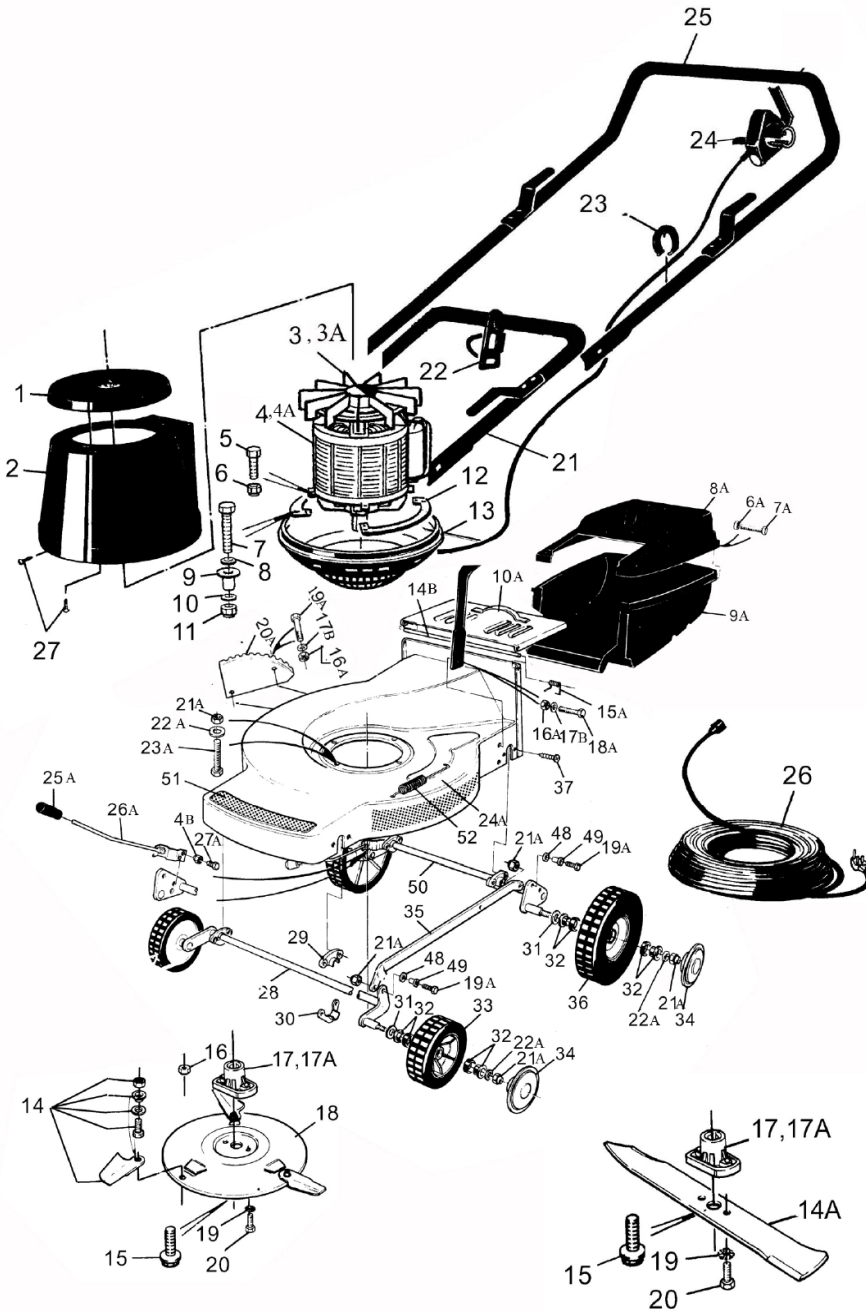 


DIAGRAM & PART LIST OF MIRAGE 3000 LAWN MOWER

SL NO.	OLD PART NO	NEW PART NUMBER	DESCRIPTION	SL NO.	OLD PART NO	NEW PART NUMBER	DESCRIPTION
1	E1	AM-LM-MIRAGE-3000-T01	LID MOTOR COVER	13	E9/E10	AM-LM-MIRAGE-3000-T13	BUSH SET
2	E2	AM-LM-MIRAGE-3000-T02	COVER MOTOR	14	E9/E10	AM-LM-MIRAGE-3000-T14	BUSH SET
3	E5ATB	AM-LM-MIRAGE-3000-T03	FAN OT	15	D4/D5	AM-LM-MIRAGE-3000-T15	GRASS BOM COMPLETE
4	E5ATB-NT	AM-LM-MIRAGE-3000-T04	FAN NT	16	D4/D5	AM-LM-MIRAGE-3000-T16	GRASS BOM COMPLETE
5	E6ATB	AM-LM-MIRAGE-3000-T05	MOTOR OT	17	AS46	AM-LM-MIRAGE-3000-T17	NUT
6	E6ATB-NT	AM-LM-MIRAGE-3000-T06	MOTOR NT	18	D6	AM-LM-MIRAGE-3000-T18	FLAP SAFETY
7	AS54	AM-LM-MIRAGE-3000-T07	NUT NYLOC	19		AM-LM-MIRAGE-3000-T19	NUT
8	E7	AM-LM-MIRAGE-3000-T08	BOLT	20	MB1	AM-LM-MIRAGE-3000-T20	MOTOR BRACKET (C-CLAMP)
9	AS54	AM-LM-MIRAGE-3000-T09	NUT	21	E7	AM-LM-MIRAGE-3000-T21	BASKET
10	GS6A	AM-LM-MIRAGE-3000-T10	NUT	22	D30A	AM-LM-MIRAGE-3000-T22	BLADE SET TUR- BO
11	E8	AM-LM-MIRAGE-3000-T11	BOLT	23	D30B	AM-LM-MIRAGE-3000-T23	BLADE BAR TYPE
12	GS6	AM-LM-MIRAGE-3000-T12	SCREW PAN SPLIT SLOT HD	24	D10	AM-LM-MIRAGE-3000-T24	ROD

DIAGRAM & PART LIST OF MIRAGE 3000 LAWN MOWER

SL NO.	OLD PART NO	NEW PART NUMBER	DESCRIPTION	SL NO.	OLD PART NO	NEW PART NUMBER	DESCRIPTION
25	E131	AM-LM-MIRAGE-3000-T25	BOLT ELECTRIC	37	D13	AM-LM-MIRAGE-3000-T37	RATCHET HEIGHT ADJUSTER
26	D11	AM-LM-MIRAGE-3000-T26	SPRING	38	D1C	AM-LM-MIRAGE-3000-T38	LOWER HANDLE
27		AM-LM-MIRAGE-3000-T27	NUT	39	AS46	AM-LM-MIRAGE-3000-T39	NUT NYLOC
28	AS36	AM-LM-MIRAGE-3000-T28	NUT HEX HEAD	40	CH1	AM-LM-MIRAGE-3000-T40	CABLE HOOK
29	E11ATB	AM-LM-MIRAGE-3000-T29	BOSS GREEN NT	41	AS9	AM-LM-MIRAGE-3000-T41	WASHER FLAT
30	E11A	AM-LM-MIRAGE-3000-T30	BOSS YELLOW OT	42	D3	AM-LM-MIRAGE-3000-T42	CLAMP
31	AS8	AM-LM-MIRAGE-3000-T31	WASHER SPRING	43	D38	AM-LM-MIRAGE-3000-T43	BOLT
32	D28A	AM-LM-MIRAGE-3000-T32	CUTTING DISC	44	E15S	AM-LM-MIRAGE-3000-T44	SWITCH
33	GS3	AM-LM-MIRAGE-3000-T33	BLADE BOLT	45	D14	AM-LM-MIRAGE-3000-T45	DECK
34	ESW1	AM-LM-MIRAGE-3000-T34	WASHER	46	D1B	AM-LM-MIRAGE-3000-T46	HANDLE
35	AS7	AM-LM-MIRAGE-3000-T35	BOLT	47	D15	AM-LM-MIRAGE-3000-T47	KNOB
36	GS3	AM-LM-MIRAGE-3000-T36	SCREW	48	E16A	AM-LM-MIRAGE-3000-T48	CABLE 25M

DIAGRAM & PART LIST OF MIRAGE 3000 LAWN MOWER

SL NO.	OLD PART NO	NEW PART NUMBER	DESCRIPTION	SL NO.	OLD PART NO	NEW PART NUMBER	DESCRIPTION
49	D16	AM-LM-MIRAGE-3000-T49	LEVER HEIGHT ADJUSTER	58	D23	AM-LM-MIRAGE-3000-T58	HUB CAP
50	E18	AM-LM-MIRAGE-3000-T50	SCREW	59	D24	AM-LM-MIRAGE-3000-T59	ROD TIE ADJUSTING
51	BS4	AM-LM-MIRAGE-3000-T51	BOLT HEX HD	60	D25B	AM-LM-MIRAGE-3000-T60	NEW TYPE LARGE WHEEL
52	D17	AM-LM-MIRAGE-3000-T52	AXLE FRONT	61	D26	AM-LM-MIRAGE-3000-T61	C/SUNK CROSS-HEAD SCREW
53	D18/D19	AM-LM-MIRAGE-3000-T53	AXLE BUSHES	62	D33/D34	AM-LM-MIRAGE-3000-T62	BUSH WASHER SET
54	D18/D19	AM-LM-MIRAGE-3000-T54	AXLE BUSHES	63	D33/D34	AM-LM-MIRAGE-3000-T63	BUSH WASHER SET
55	BS45	AM-LM-MIRAGE-3000-T55	WAVY WASHER	64	D36	AM-LM-MIRAGE-3000-T64	AXLE REAR
56	D100	AM-LM-MIRAGE-3000-T56	BEARINGS	65	D47	AM-LM-MIRAGE-3000-T65	DECAL SET
57	D21B	AM-LM-MIRAGE-3000-T57	FRONT WHEEL	66	D48	AM-LM-MIRAGE-3000-T66	SPRING

INSPECTION & MAINTAINANCE

For safety use, make sure the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzle and ensure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.






Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

 




When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

WARRANTY CARD






CUSTOMER COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			
I/Will accept the terms and conditions of warranty as in the warranty card			

DEALERS COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			
I/Will accept the terms and conditions of warranty as in the warranty card			

COMPANY COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			
I/Will accept the terms and conditions of warranty as in the warranty card			

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction



FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE


DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

DOS


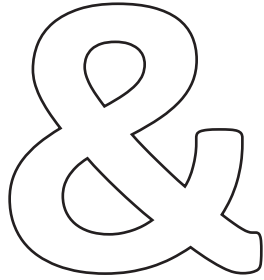


DONTs

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
9. For more query kindly contact for our Service Center/Dealer/ franchise

Agrimate Army For Pest Control

ANY WHERE - ANY TIME - ANY CROP

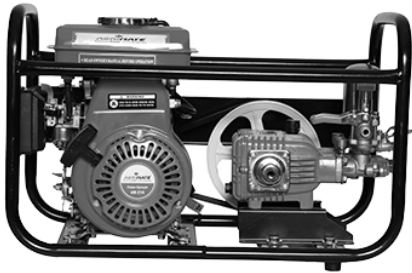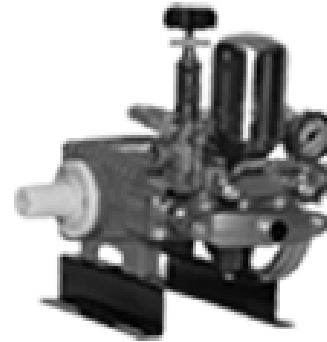

Marketed by:
**ratnagiri
impex**
BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETED BY,
RATNAGIRI IMPEX PVT., LTD.,

Annapurna House, #1 / 1G, 7th Cross, New
Guddadahalli Mysore Road, Bangalore - 560 026

Missed Call : 7393 938 938 Email: ask@agrimart.in