

BCH 40 BP Brushcutter



Documents

Engine

Starter assy and clutch

Tank / Frame (High)

Tank / Frame (Low)

Transmission

Head Tap&Go D.130

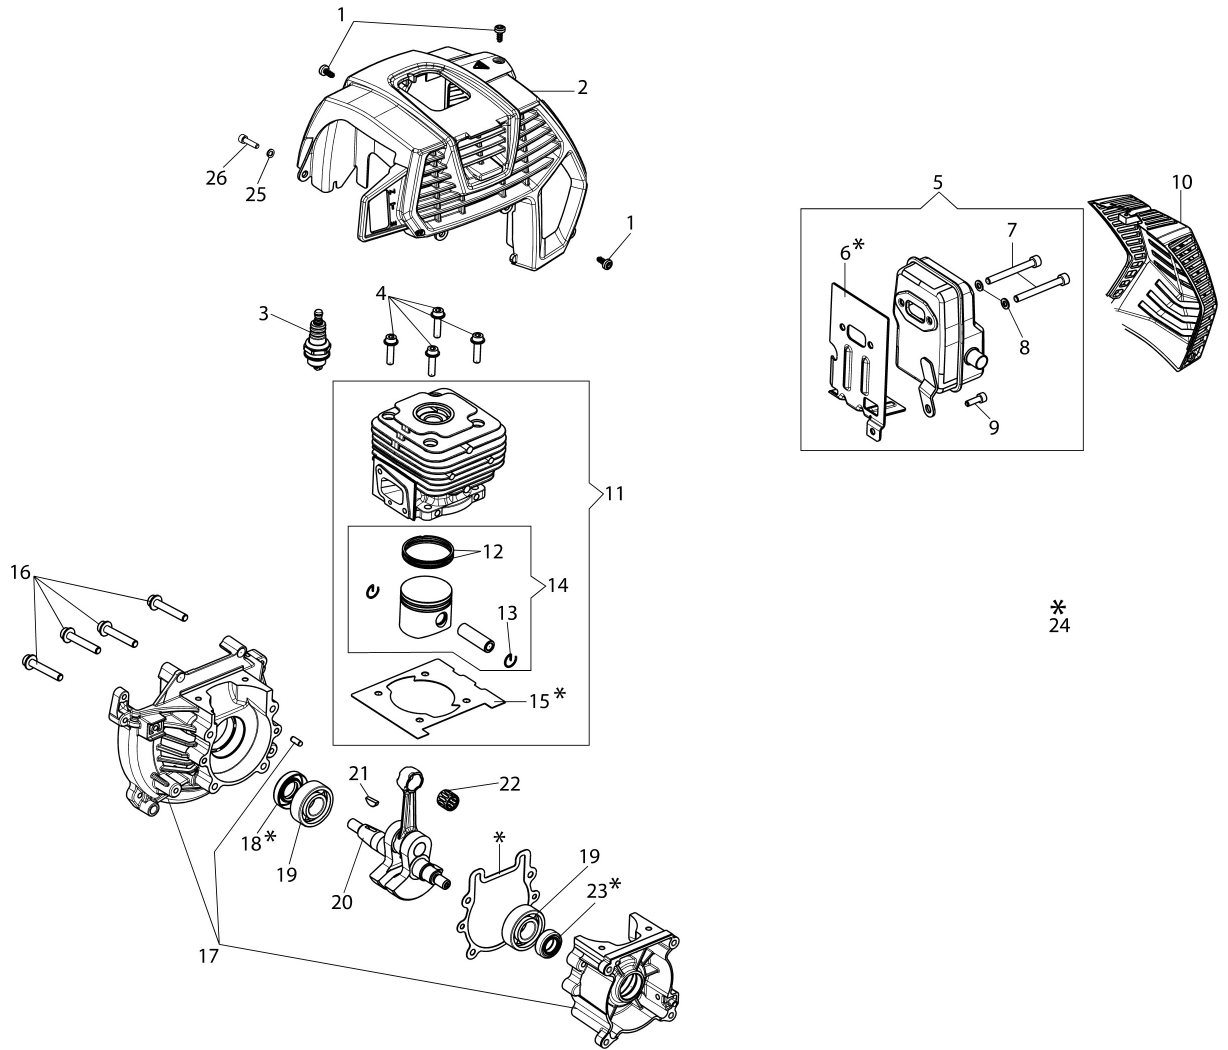


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	3960121R	Screw				
2	1	61452028R	Engine cover				
3	1	3055104R	Spark plug				
4	4	3860095R	Screw				
5	1	61450206R	Muffler assy				
6	1	61450242AR	Gasket				
7	2	3801065R	Screw				
8	2	3916006R	Washer				
9	1	3801011R	Screw				
10	1	61450367R	Muffler cover				
11	1	61450048	Complete cylinder		SN 8230035128		BT3-144-03/20
11	1	61450048	Complete cylinder	SN 8230035129			BT3-144-03/20
12	2	61450014R	Piston ring				
13	2	61450013R	Ring				
14	1	61450187R	Piston assy				
15	1	61450127AR	Gasket				
16	4	3860096R	Screw				
17	1	61452001BR	Crankcase assy				
18	1	3050056R	Oil seal				
19	2	3035065R	Bearing				
20	1	61450001AR	Crankshaft				
21	1	3028020R	Key				
22	1	50110044R	Bearing				
23	1	3050057R	Oil seal				
24	1	61450443	Gasket set				
25	2	3801009R	Screw				
26	2	3916005R	Washer				

Illustration Starter Assy and clutch

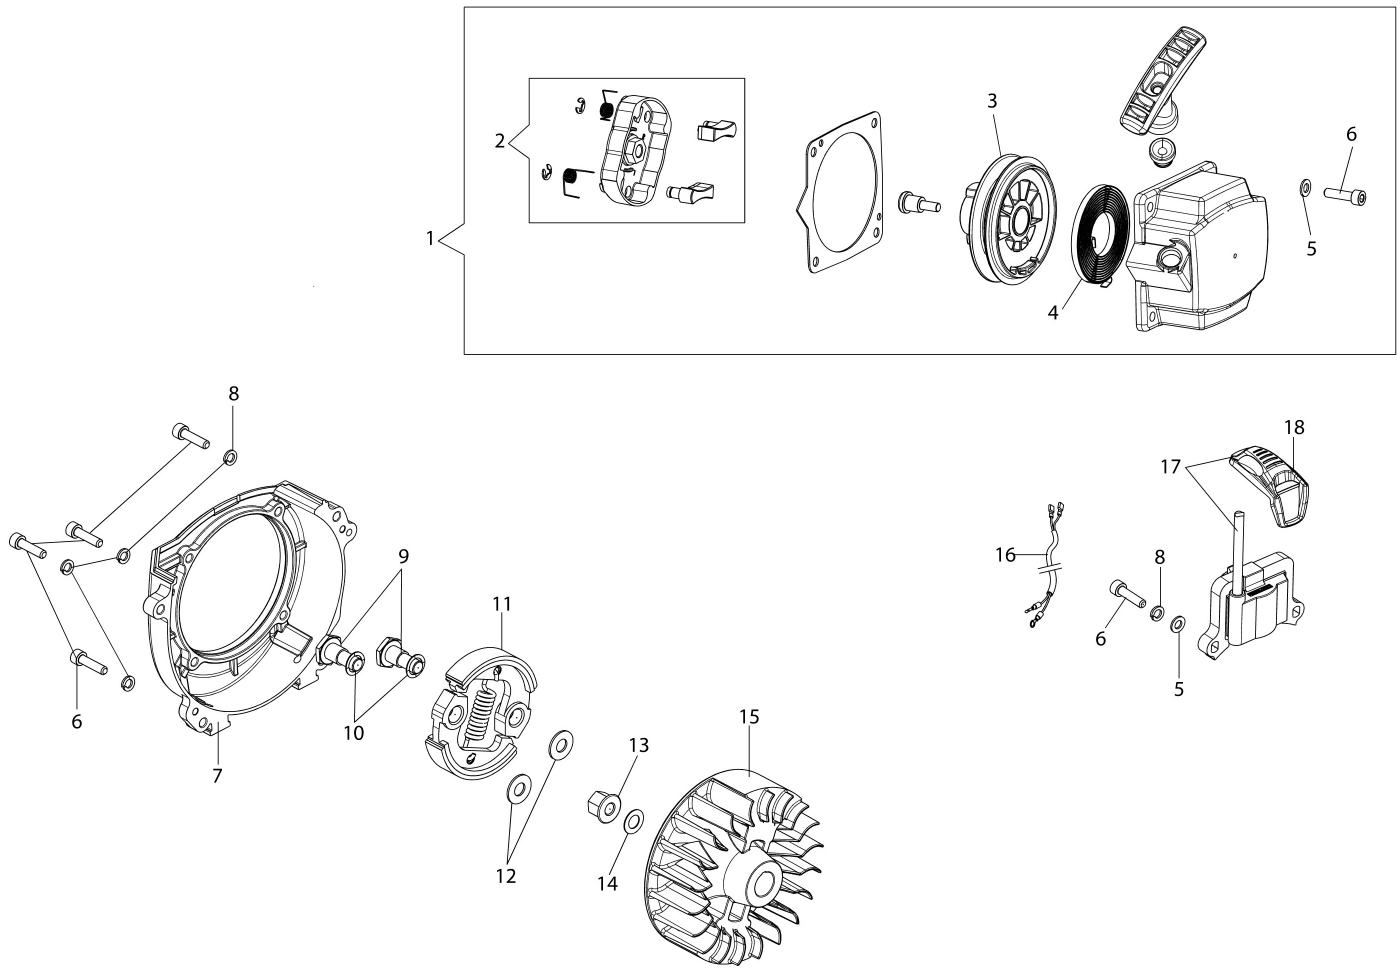


Illustration Starter assy and clutch

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61452042R	Starter assy				
2	1	61450193AR	Clutch driver				
3	1	61450229AR	Starter pulley				
4	1	61450044AR	Starter spring				
5	6	3916005R	Washer				
6	10	3801013R	Screw				
7	1	61452083R	Flange				
8	6	3819006R	Washer				
9	2	61450070R	Pin				
10	2	61450072R	Washer				
11	1	61450277R	Clutch				
12	2	61450071R	Washer				
13	1	50010148R	Nut				
14	1	3833080R	Washer				
15	1	61450310R	Flywheel				
16	1	BF000030R	Cable				
17	1	2501026BR	Ignition coil				
18	1	61450370R	Spark plug cap				

Illustration Tank / Frame (High)

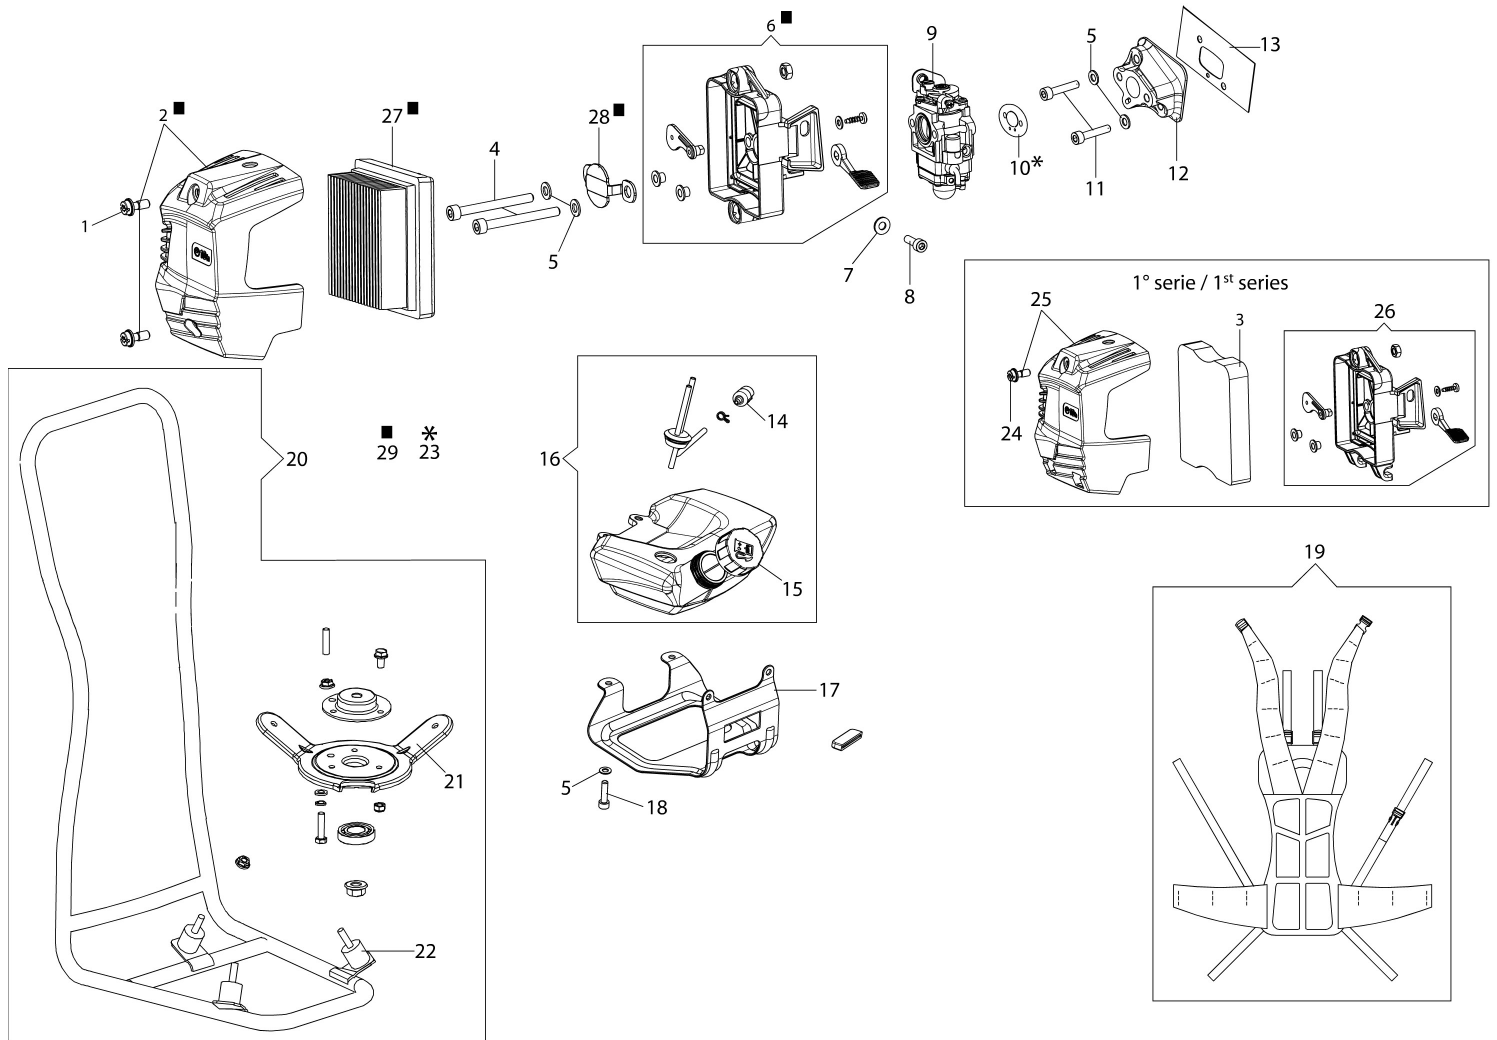


Illustration Tank / Frame (High)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	61330040AR	Screw	SN 8239152387			BT3-143-10/19
2	1	61450045	Air filter cover	SN 8239152387		Per modelli premodifica da	BT3-143-10/19
3	1	61450061R	Air filter		SN 8230035128		BT3-144-03/20
4	2	3801012R	Screw			to be matched	
5	6	3916005R	Washer				
6	1	61450047	Air filter support	SN 8239152387		Per modelli premodifica da	BT3-143-10/19
7	1	3918010R	Washer				
8	1	3801011R	Screw			to be matched	
9	1	2318624R	Carburetor				
10	1	61450054AR	Gasket				
11	1	3801015R	Screw				
12	1	61450053AR	Insulator				
13	1	61450052AR	Gasket				
14	1	094600450R	Fuel filter				
15	1	BF000024R	Tank cap				
16	1	61452050R	Tank assy				
17	1	61450230R	Tank shield				
18	2	3801013R	Screw				
19	1	BF000025R	Harness				
20	1	BF000026R	Frame assembly				
21	1	BF000017R	Engine support				
22	3	BF000018R	AV-mount				
23	1	61450443	Gasket set				
24	1	61330040AR	Screw		SN 8239152386		
25	1	61450444	Air filter cover		SN 8239152386		
26	1	61450445	Air filter support		SN 8239152386		
27	1	61450425R	Air filter	SN 8230035129			BT3-144-03/20
28	1	61450016R	Plate	SN 8230035129			BT3-144-03/20
29	1	61450049	Air filter kit				BT3-144-03/20

Illustration Tank / Frame (Low)

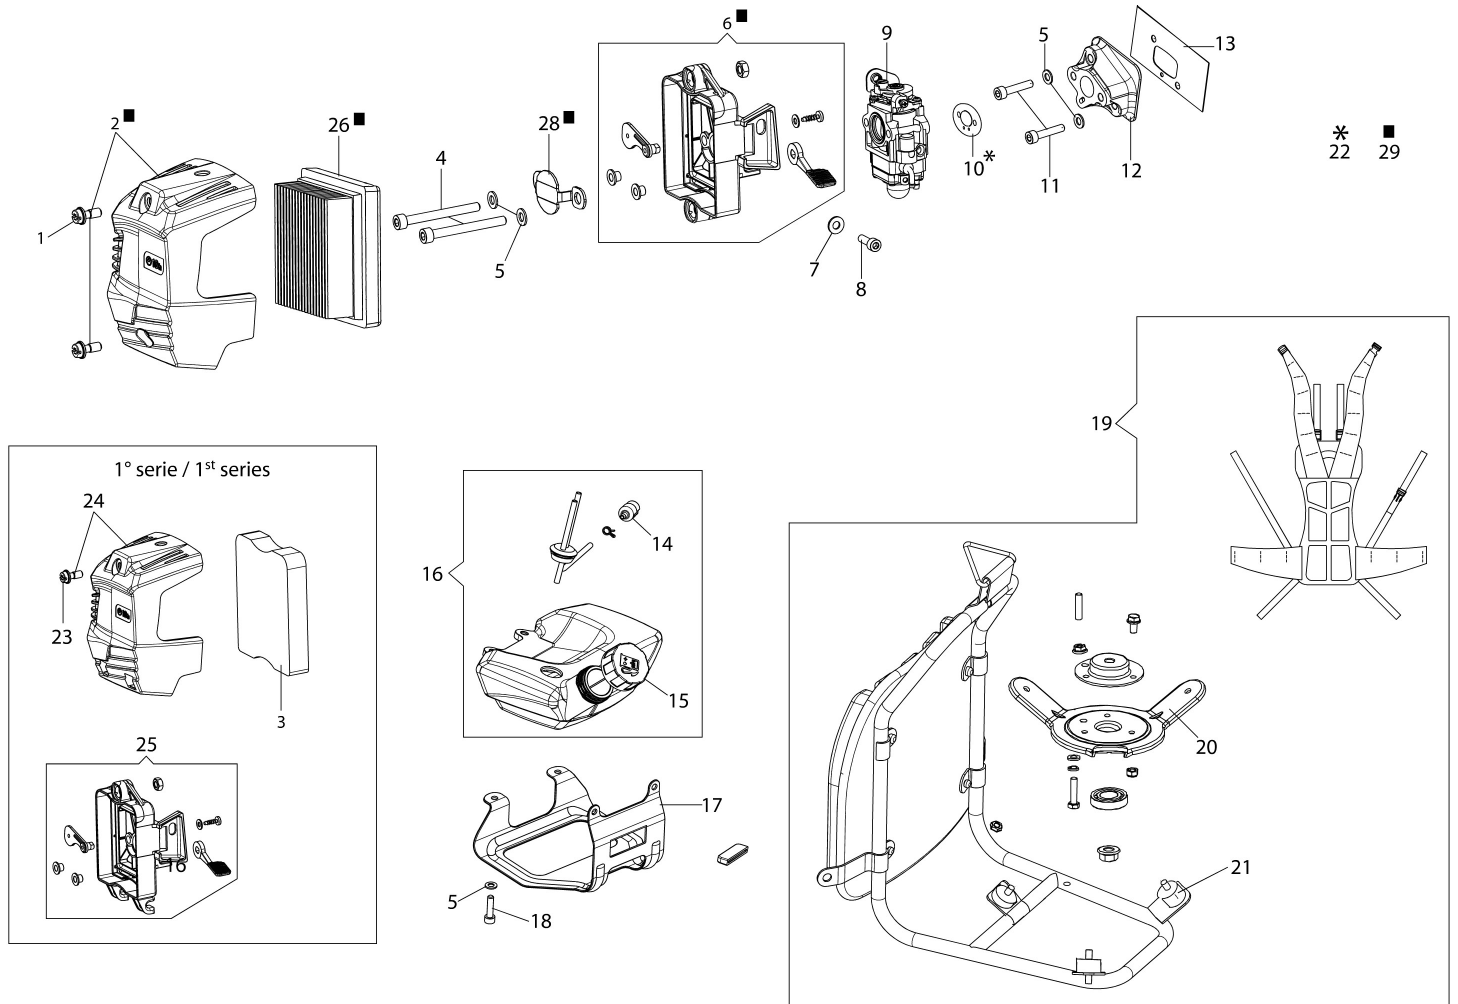


Illustration Tank / Frame (Low)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	61330040AR	Screw	SN 8239152387			BT3-143-10/19
2	1	61450045	Air filter cover	SN 8239152387		Per modelli premodifica da	BT3-143-10/19
3	1	61450061R	Air filter		SN 8230035128		BT3-144-03/20
4	2	3801012R	Screw			to be matched	
5	6	3916005R	Washer				
6	1	61450047	Air filter support	SN 8239152387		Per modelli premodifica da	BT3-143-10/19
7	1	3918010R	Washer				
8	1	3801011R	Screw			to be matched	
9	1	2318624R	Carburetor				
10	1	61450054AR	Gasket				
11	2	3801015R	Screw				
12	1	61450053AR	Insulator				
13	1	61450052AR	Gasket				
14	1	094600450R	Fuel filter				
15	1	BF000024R	Tank cap				
16	1	61452050R	Tank assy				
17	1	61450230R	Tank shield				
18	2	3801013R	Screw				
19	1	BF000021R	Frame assembly				
20	1	BF000017R	Engine support				
21	3	BF000018R	AV-mount				
22	1	61450443	Gasket set				
23	1	61330040AR	Screw		SN 8239152386		
24	1	61450444	Air filter cover		SN 8239152386		
25	1	61450445	Air filter support		SN 8239152386		
26	1	61450425R	Air filter	SN 8230035129			BT3-144-03/20
28	1	61450016R	Plate	SN 8230035129			BT3-144-03/20
29	1	61450049	Air filter kit				BT3-144-03/20

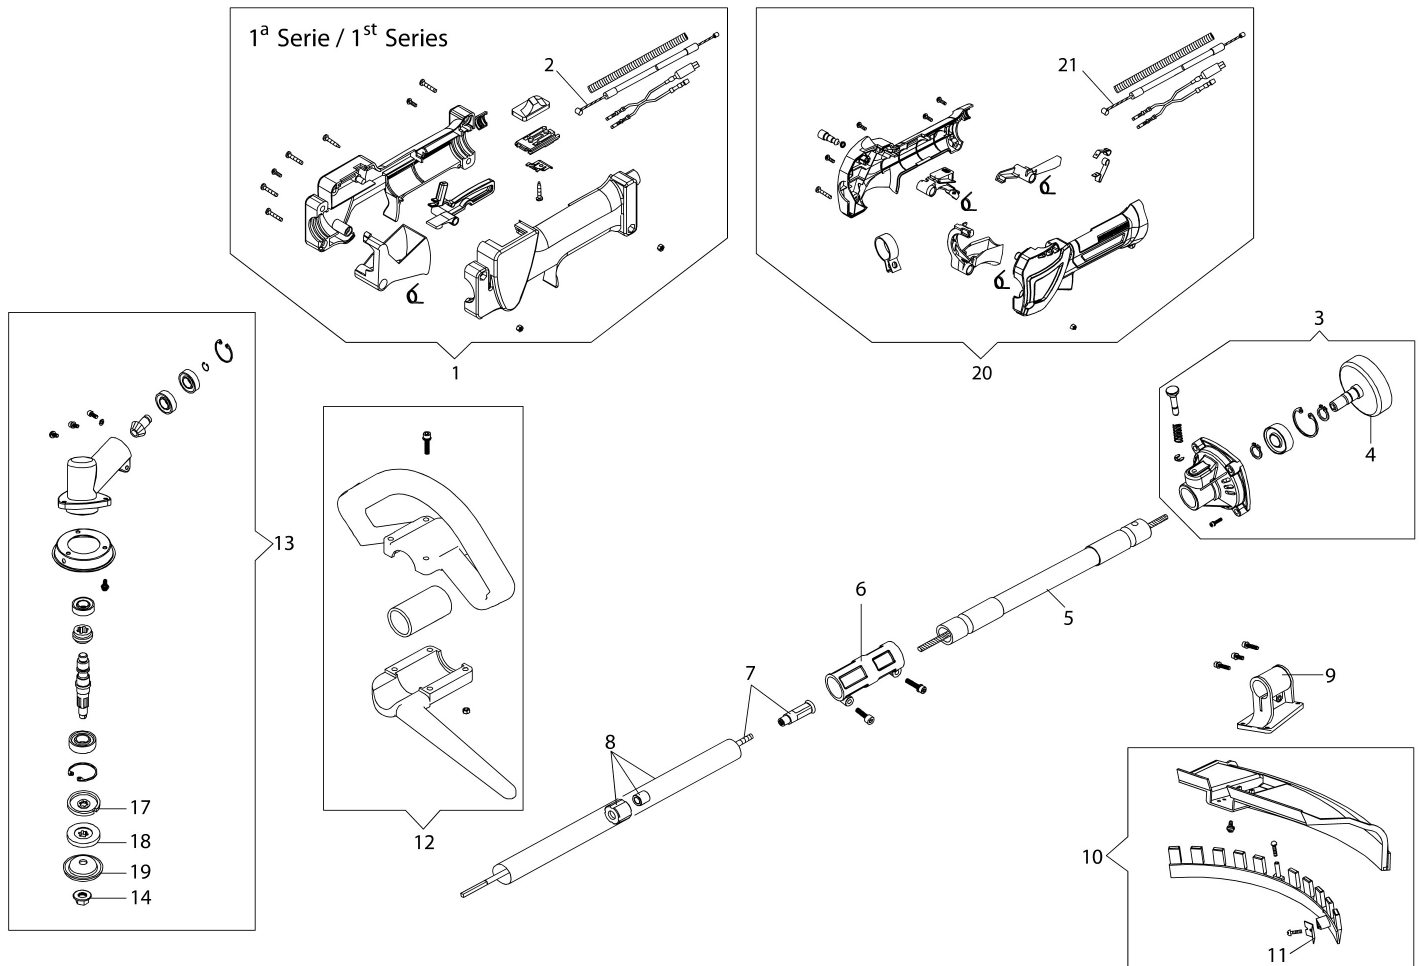


Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	BF000001R	Complete handle		Agosto 2020 / August		BT3-148-09/20
2	1	BF000010R	Throttle cable		2020 Agosto 2020 / August		BT3-148-09/20
3	1	BF000027R	Starter case				
4	1	BF000002R	Clutch drum				
5	1	BF000003R	Hose				
6	1	BF000004R	Joint				
7	1	61450448	Shaft + joint				
8	1	BF000005R	Tube Ø26				
9	1	BF000008R	Bracket				
10	1	BF000029R	Guard kit				
11	1	BF000009R	Blade				
12	1	BF000028R	Complete knob				
13	1	61450441R	Bevel gear				
14	1	BF000007R	Nut				
17	1	BF000038R	Hub				
18	1	BF000037R	Flange				
19	1	BF000036R	Safety ring				
20	1	BF000056R	Complete handle	Settembre 2020 /			BT3-148-09/20
21	1	BF000057R	Throttle cable	Settembre 2020 / September 2020			BT3-148-09/20

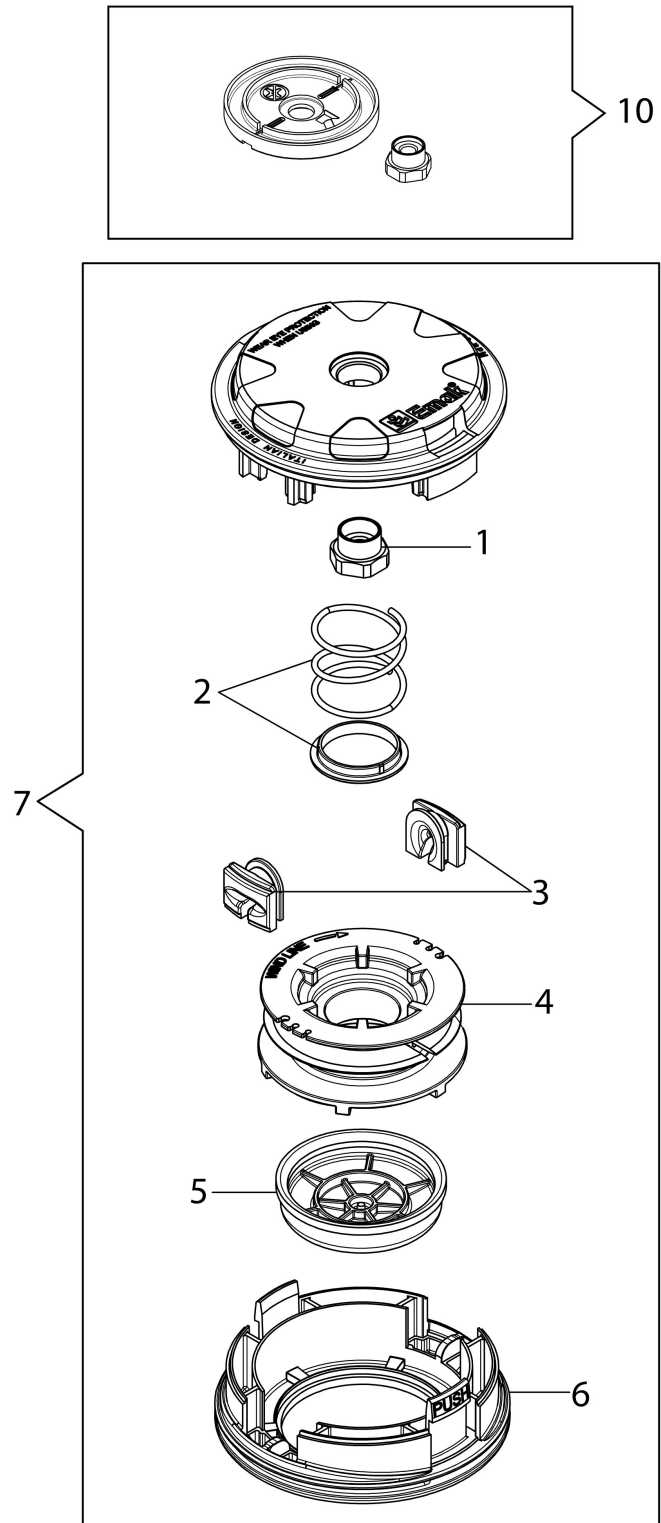


Illustration Head Tap&Go D.130

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63120040R	Nut				
2	1	63120031R	Kit spring				
3	2	63120001R	Bushing				
4	1	63120010R	Nylon spool				
5	1	63120011R	Knob kit				
6	1	63120012R	Lower cover				
7	1	61459100	Complete nylon head Ø 2,4				
7	1	61459102	Complete nylon head Ø 3				
10	1	61460055	Guard kit				